

Kalorik TKG SKV 1004 N

Team Kalorik TKG SKV 1004 N Cordless 2-in-1 Stick and Handheld Vacuum Cleaner User Manual

Model: TKG SKV 1004 N

[Instructions](#) [Safety Instructions](#) [Maintenance](#) [Product Overview](#) [Troubleshooting](#) [Setup](#) [Specifications](#) [Operating](#) [Warranty & Support](#)

1. IMPORTANT SAFETY INSTRUCTIONS

Please read this manual carefully before using the appliance and keep it for future reference. Improper use may result in electric shock, fire, or serious injury.

- This appliance is intended for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the water tank and all filters properly in place.
- Use only the charger supplied by the manufacturer to recharge.
- Do not handle the charger or appliance with wet hands.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Turn off the appliance before connecting or disconnecting the motorized brush.
- Store the appliance indoors in a cool, dry place.

2. PRODUCT OVERVIEW AND COMPONENTS

The Kalorik TKG SKV 1004 N is a versatile 2-in-1 cordless vacuum cleaner designed for efficient cleaning of various surfaces. It features a unique water filtration system for enhanced dust and allergen retention.

2.1 Main Unit and Accessories





Image 1: The Kalorik TKG SKV 1004 N in its full stick vacuum configuration. This image shows the main body, handle, and floor brush with blue accents.



Image 2: All components included with the Kalorik TKG SKV 1004 N vacuum cleaner. This includes the main unit, handheld unit, suction tube, floor brush, charger, and various filter elements.

Main Unit: Contains the motor, battery, and water filtration system.

Suction Tube: Connects the main unit to the floor brush for stick vacuum mode.

Floor Brush with LED Lights: Motorized brush for effective cleaning on various floor types, equipped with 3 LED lights to illuminate dust.

Charger: For recharging the 18V Li-Ion battery.

Filter Elements: Includes water filter, odor filter, net filter, HEPA filter, and foam filter.

Rotating Turbo Brush: An additional brush for specialized cleaning tasks.

3. SETUP AND INITIAL USE

3.1 Assembly

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble Stick Vacuum:**
 - Insert the suction tube into the main unit until it clicks securely.
 - Attach the floor brush to the other end of the suction tube, ensuring it locks into place.
3. **Handheld Configuration:** To use as a handheld vacuum, detach the suction tube and floor brush from the main unit.

3.2 Initial Charging

Before first use, fully charge the vacuum cleaner's battery.

1. Connect the charger to the charging port on the main unit.
2. Plug the charger into a suitable wall outlet.
3. The charging indicator light will illuminate. A full charge takes approximately 6 to 8 hours.
4. Once fully charged, disconnect the charger.

Note: The appliance is protected against discharge, overcharge, and short circuits.

4. OPERATING INSTRUCTIONS

4.1 Filling the Water Tank (Water Filtration System)

This vacuum uses a water filtration system to trap dust and allergens. Ensure the water tank is filled before use.

1. Remove the water tank from the main unit.
2. Fill the tank with clean tap water up to the indicated MAX line. Do not overfill.
3. Securely reattach the water tank to the main unit.

4.2 Using as a Stick Vacuum

1. Ensure the suction tube and floor brush are securely attached.
2. Press the power button to turn on the vacuum.
3. Select the desired power mode:
 - **ECO Mode:** Provides up to 35 minutes of cleaning time for lighter tasks.
 - **Max Power Mode:** Provides up to 17 minutes of cleaning time for tougher dirt.
4. Guide the vacuum over the surface to be cleaned. The LED lights on the floor brush will illuminate the cleaning path.
5. After use, press the power button to turn off the vacuum.

4.3 Using as a Handheld Vacuum



Image 3: The Kalorik TKG SKV 1004 N configured as a handheld vacuum cleaner, ideal for cleaning furniture, car interiors, or tight spaces.

1. Detach the suction tube and floor brush from the main unit.
2. You can attach the rotating turbo brush or use the nozzle directly for handheld cleaning.
3. Press the power button to turn on the vacuum.
4. Clean desired surfaces.
5. After use, press the power button to turn off the vacuum.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

5.1 Emptying the Water Tank and Dustbin

1. After each use, especially when using water filtration, remove the water tank.
2. Carefully empty the dirty water and debris into a drain.
3. Rinse the water tank thoroughly with clean water.
4. Allow the tank to air dry completely before reassembling.

5.2 Cleaning Filters

The vacuum includes 5 filter elements (water, odor, net, HEPA, and foam filters). Clean them regularly.

1. Remove all filter elements from the main unit.
2. Tap off loose dust from the net, HEPA, and foam filters.
3. Rinse all washable filters under running water until clean.
4. Allow all filters to air dry completely for at least 24 hours before reinserting them. Do not use the vacuum with wet filters.

5.3 Cleaning the Floor Brush

1. Turn off and disconnect the vacuum.
2. Remove any tangled hair or debris from the rotating brush using scissors or a brush.
3. Wipe the exterior of the floor brush with a damp cloth.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is discharged.	Charge the battery fully (6-8 hours).
Low suction power.	Water tank is full or dirty. Filters are clogged. Obstruction in nozzle/tube.	Empty and clean the water tank. Clean all filters. Check for and remove any blockages.
Water leaks from the tank.	Water tank not properly seated. Tank overfilled.	Ensure the water tank is securely attached. Do not fill above the MAX line.
Floor brush not rotating.	Obstruction in the brush. Brush not properly connected.	Remove any tangled hair or debris. Ensure the brush is securely attached to the suction tube.

If the problem persists after trying these solutions, please contact customer support.

7. TECHNICAL SPECIFICATIONS

Brand:	Kalorik
--------	---------

Model Number:	TKG SKV 1004 N
Product Dimensions (L x W x H):	26 x 26.3 x 110.5 cm
Item Weight:	3.5 Kilograms
Power:	80 Watts
Voltage:	18 Volts
Battery:	1 Lithium-ion (included)
Material:	Plastic
Noise Level:	68 Decibels
Special Feature:	HEPA, Bagless (Water Filtration)
Filter Type:	Water, Odor, Net, HEPA, Foam
Surface Recommendation:	Hard Floor
Power Source:	Battery Powered
Cordless:	Yes
Form Factor:	Portable, Stick, Handheld

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or visit the official Kalorik website.

If you encounter any issues or require technical assistance, please contact Kalorik customer support:

- **Website:** www.kalorik.com (Please check for your regional website)
- **Email:** Refer to your product documentation for specific contact details.
- **Phone:** Refer to your product documentation for specific contact details.

Please have your model number (TKG SKV 1004 N) and proof of purchase ready when contacting support.