

[Manuals.plus](#) /

› [Galanz](#) /

› Galanz GTWHG12S1SA10 4-in-1 ToastWave User Manual

Galanz GTWHG12S1SA10

Galanz GTWHG12S1SA10 4-in-1 ToastWave

USER MANUAL

1. INTRODUCTION

Thank you for purchasing the Galanz GTWHG12S1SA10 4-in-1 ToastWave. This innovative appliance combines the functionalities of a microwave, air fryer, convection oven, and toaster oven into a single unit, offering unparalleled versatility for your kitchen. This manual provides essential information for safe and efficient operation, setup, maintenance, and troubleshooting.



This image displays the front of the Galanz GTWHG12S1SA10 4-in-1 ToastWave, highlighting its sleek design, control panel with a large knob, and digital display. The appliance combines microwave, air fryer, convection oven, and toaster oven functionalities.

2. SAFETY INFORMATION

Please read all instructions carefully before using this appliance to ensure safe operation and to prevent property damage. Keep this manual for future reference.

General Safety Precautions:

- Do not operate the oven if the cord or plug is damaged, if it is not working properly, or if it has been damaged or dropped.
- Only use utensils that are suitable for use in microwave ovens.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Regularly clean the oven and remove any food deposits.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Do not attempt to service or repair the appliance yourself. Refer all servicing to qualified service personnel.
- Ensure proper ventilation around the appliance.

3. PRODUCT OVERVIEW

3.1. Components and Accessories

Your Galanz ToastWave comes with the following components and accessories:

- 1 x 4-in-1 Convection Oven Unit
- 1 x Air Fry Kit
- 1 x Silicone Cooking Mat
- 1 x Nonstick Turntable
- 1 x Power Cord

What is Included



This image shows the accessories that come with the Galanz ToastWave: a red silicone cooking mat, a black air fry kit, and a black non-stick turntable, all designed to enhance the appliance's multi-functional use.



Air Fry Kit: Optimizes air circulation for crispy results.



Silicone Cooking Mat: Provides a non-stick surface for cooking and easy cleanup.



Non-Stick Turntable: Ensures even cooking
by rotating food.

3.2. Key Features


- **True Convection:** Heated air circulates throughout the oven as food spins 360°, cooking your food faster and more evenly without hot spots.
- **Sensor Cook & Sensor Reheat:** A built-in humidity sensor ensures that your food is never under- or overcooked. For precooked dishes, Sensor Reheat stops automatically when food is hot and ready to eat.
- **Patented Inverter Technology:** Unlike traditional microwave heating systems that pulse on and off, the Inverter creates continuous, constant, even heat to maintain exacting temperature during the cooking process.
- **TotalFry 360 Technology:** Utilizes advanced air circulation for optimal air frying results, providing crispy food with little to no oil.
- **Ultimate Cooking Versatility:** Combines Microwave, Air Fryer, Convection Oven, and Toaster Oven functionalities.
- **White LCD Display:** Clear and easy-to-read display for settings and cooking progress.
- **Ergonomic Control Panel:** Features touch control and a knob for intuitive operation.
- **Stainless Steel Cavity:** Durable and easy to clean interior.

Patented Inverter Technology

More Even Cooking



SOUP

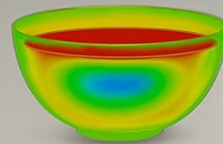

INVERTER TECHNOLOGY
Galanz

NON-INVERTER
OTHER

This visual demonstrates the benefit of Galanz's Patented Inverter Technology, showing how it provides continuous, even heat distribution for consistent cooking results, unlike traditional methods that can lead to hot and cold spots.

TotalFry 360° Technology



This image illustrates the TotalFry 360 Technology, where heated air circulates throughout the oven, ensuring food is cooked faster and more evenly without hot spots, ideal for air frying.

3.3. Product Dimensions and Capacity

- **Capacity:** 1.2 Cubic Feet
- **Product Dimensions (W x D x H):** Approximately 21" x 21" x 12"
- Can accommodate a 12-inch pizza or 6 slices of toast.

1.2 cu.ft Large Capacity

Cook for The Whole Family




12" Pizza



6 Slices Toast



This image provides a view of the spacious interior of the Galanz ToastWave, highlighting its 1.2 cubic feet capacity, capable of fitting a 12-inch pizza or up to 6 slices of toast, suitable for family meals.

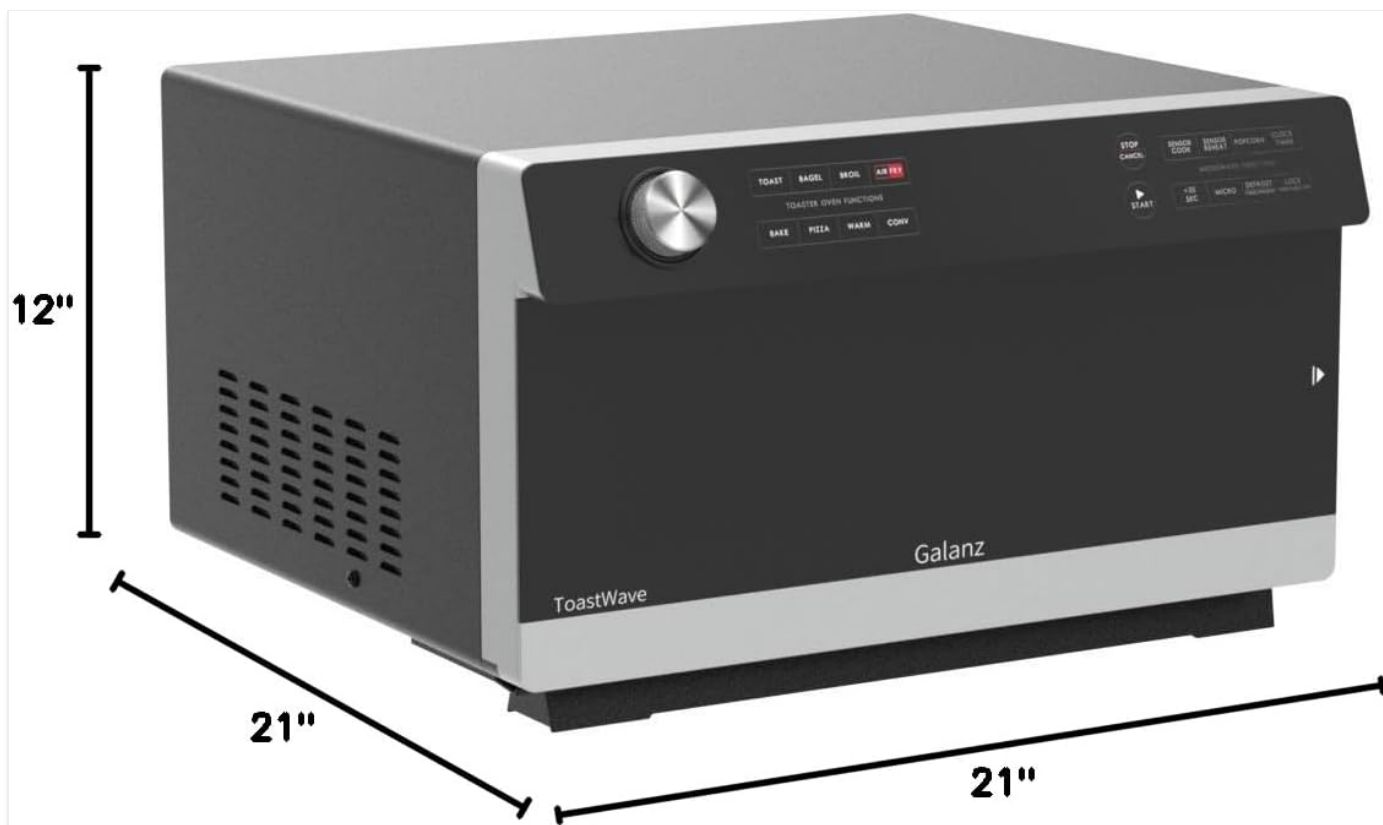

This diagram provides the key external dimensions of the Galanz ToastWave, indicating its height of 12 inches, depth of 21 inches, and width of 21 inches, useful for placement considerations.

4. SETUP

Follow these steps to set up your Galanz ToastWave:

1. **Unpacking:** Carefully remove all packaging materials and accessories. Inspect the oven for any damage, such as dents or a broken door. Do not operate the oven if it is damaged.
2. **Placement:** Place the oven on a flat, stable surface that is strong enough to hold the oven and the food being cooked. Ensure there is adequate ventilation space around the unit (at least 4 inches on top, sides, and back). Do not block air vents.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the appliance's requirements (120 Volts / 60Hz).
4. **Initial Cleaning:** Before first use, wipe the interior and exterior with a damp cloth. Wash the turntable, air fry kit, and silicone mat with warm, soapy water.
5. **Turntable Installation:** Place the non-stick turntable securely on the turntable support in the oven cavity.

5. OPERATING INSTRUCTIONS

The Galanz ToastWave features an intuitive control panel with a combination of touch controls and a central knob for easy operation across its multiple functions.

5.1. Control Panel Overview

The control panel is divided into sections for Toaster Oven Functions and Microwave Functions. The central knob is used for selecting settings and adjusting time/temperature.

5.2. Microwave Functions

- **Basic Microwave Cooking:** Place food in a microwave-safe dish on the turntable. Close the door. Use the knob to

set the cooking time and press START. Power levels can be adjusted.

- **Sensor Cook:** This feature automatically adjusts cooking time based on the food's humidity. Select a Sensor Cook option (e.g., Potato, Frozen Entrée, Fresh Veg) and press START.
- **Sensor Reheat:** For reheating precooked dishes, select a Sensor Reheat option (e.g., Dinner Plate, Soup/Sauce) and press START. The oven will stop automatically when food is hot.
- **Defrost (Time/Weight):** Choose between defrosting by time or by weight for various food types (Meat, Poultry, Seafood).
- **Add 30 SEC:** Quickly add 30 seconds to the cooking time during operation.

5.3. Toaster Oven Functions

These functions utilize heating elements and convection for oven-style cooking.

- **Toast:** Ideal for bread and bagels. Select the desired toast shade (Light, Medium, Dark).
- **Bagel:** Specifically designed for toasting bagels.
- **Broil:** For grilling and browning food.
- **Bake:** For general baking, such as cookies or casseroles.
- **Warm:** Keeps food warm after cooking.
- **Convection:** Circulates heated air for faster and more even cooking, similar to a traditional convection oven.

5.4. Air Fryer Functions (TotalFry 360)

The TotalFry 360 technology allows you to air fry food for crispy results with minimal oil. Use the included Air Fry Kit for best performance.

- Place food on the air fry kit.
- Select the Air Fry function and set the desired temperature and time.
- The oven will circulate hot air to crisp the food.

5.5. Pre-programmed Meal Options

The appliance includes various pre-programmed settings for common foods:

- Popcorn
- Pizza
- Cookies
- French Fries
- Chicken Nuggets
- And more, as indicated on the control panel.

More Pre-programmed Meal Options



This image illustrates the wide array of pre-programmed meal options available on the Galanz ToastWave, simplifying cooking for various dishes from toast and pizza to air-fried items and sensor-cooked meals.

6. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Galanz ToastWave.

6.1. Cleaning the Oven Cavity

- Always unplug the oven before cleaning.
- Wipe the interior with a damp cloth and mild detergent after each use, especially after spills.
- For stubborn stains, a non-abrasive cleaner designed for stainless steel can be used.
- Do not use abrasive cleaners, steel wool, or harsh chemicals, as they can damage the stainless steel surface.

6.2. Cleaning Accessories

- The non-stick turntable, air fry kit, and silicone cooking mat can be washed by hand with warm, soapy water.

- Ensure all accessories are completely dry before placing them back into the oven.

6.3. Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Avoid getting water into the ventilation openings.
- Clean the control panel with a soft, damp cloth. Do not use abrasive cleaners.

7. TROUBLESHOOTING

If you encounter issues with your Galanz ToastWave, refer to the common problems and solutions below. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Oven does not start	Power cord not securely plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door completely; Check household fuse/circuit breaker.
Food is not cooking evenly	Food not stirred/rotated; Turntable not spinning.	Stir or rearrange food during cooking; Ensure turntable is correctly placed and not obstructed.
Excessive steam from door	High moisture content in food.	This is normal for foods with high moisture.
Error Code E46 (Inverter issue)	Internal malfunction related to inverter technology.	Unplug the unit for 5 minutes, then plug it back in. If the error persists, contact customer service.

8. SPECIFICATIONS

Feature	Detail
Model Number	GTWHG12S1SA10
Capacity	1.2 Cubic Feet
Power Output (Microwave)	1000W
Power Consumption (Microwave)	1050W
Power Consumption (Convection)	1450W
Voltage	120 Volts / 60Hz
Product Dimensions (W x D x H)	21"D x 21"W x 12"H (approx. 12.3 x 23.62 x 17.2 inches)
Item Weight	40.2 Pounds
Material	Stainless Steel

Feature	Detail
Special Features	TotalFry 360™ Technology, Patented Inverter Technology, Sensor Cook and Sensor Reheat, True Convection

9. WARRANTY AND SUPPORT

Galanz products are designed for reliability and performance. For specific warranty details, please refer to the warranty card included with your product or visit the official Galanz website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Galanz Customer Service. You may also find additional resources, including a downloadable PDF user manual, on the product's support page.

Online Resources:

- User Guide (PDF)
- User Manual (PDF)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question