

hansgrohe 04915000

hansgrohe Raindance S Complete Shower System Instruction Manual

Model: 04915000

- Overview
- Features
- Setup
- Operation
- Maintenance
- Troubleshooting
- Specifications
- Warranty
- Support

1. PRODUCT OVERVIEW

The hansgrohe Raindance S Complete Shower System is designed to upgrade your shower experience. This comprehensive kit includes a Raindance Select S 120 2.5 GPM 3-Jet Handshower with PowderRain, a Raindance S 240 2.5 GPM 1-Jet Rain Showerhead with PowderRain, a 15-inch Raindance Showerarm, a Unica S 24-inch Wallbar, a Round Wall Outlet, an Ecostat S Thermostatic Shower Trim with Volume Control and Diverter, and the iBox Universal Plus Rough with Service Stops. All necessary components for installation are included.



Figure 1: The hansgrohe Raindance S Complete Shower System installed in a modern bathroom setting.

2. KEY FEATURES

- **Raindance Technology:** Offers various spray modes and sizes for a customized shower experience.
- **Comprehensive Kit:** Includes handshower, rain showerhead, showerarm, wallbar, wall outlet, thermostatic trim, and iBox Universal Plus Rough.
- **PowderRain Spray:** Features gentle micro-sprays for a relaxing shower.
- **Multiple Spray Options:** Handheld shower provides PowderRain, Full, and Massage spray options.
- **Durable Chrome Finish:** Easy to clean and maintains a long-lasting shine.
- **QuickClean Function:** Silicone nozzles allow for easy limescale removal.
- **XXL Performance:** Ensures even and lush water flow from the showerhead.
- **Thermostatic Control:** Top handle controls water volume and diverts flow; bottom handle controls and presets water temperature within +/- 1 degree F.
- **iBox Universal Plus Rough:** Designed for easy installation and seals the wall against moisture.

3. SETUP AND INSTALLATION

Installation of the hansgrohe Raindance S Complete Shower System requires plumbing knowledge. Professional installation is recommended to ensure proper function and adherence to local building codes. The system includes the iBox Universal Plus Rough, which is essential for in-wall installation.

3.1 Pre-Installation Checks

- Verify all components are present as listed in the packaging.
- Ensure water supply lines are shut off before beginning installation.
- Confirm wall structure is suitable for mounting the shower system components.

3.2 Installation Steps (Overview)

1. Install the iBox Universal Plus Rough into the wall according to the detailed instructions provided with the iBox. This component is crucial for connecting the water supply and diverter.
2. Connect the showerarm to the main water outlet and secure the Raindance S 240 Rain Showerhead.
3. Mount the Unica S 24-inch Wallbar to the wall, ensuring it is securely fastened.
4. Attach the Round Wall Outlet and connect the handshower hose to it.
5. Install the Raindance Select S 120 Handshower onto the wallbar.
6. Install the Ecostat S Thermostatic Shower Trim over the iBox, ensuring all controls are correctly aligned and secured.



Figure 2: The Ecostat S Thermostatic Shower Trim, which controls water volume and temperature.

4. OPERATING INSTRUCTIONS

4.1 Water Flow and Temperature Control

- The **top handle** on the Ecostat S Thermostatic Shower Trim controls the water volume and diverts water between the main showerhead and the handshower. Rotate to adjust flow and pull/push to switch outlets.
- The **bottom handle** controls the water temperature. Rotate to increase or decrease temperature. The thermostatic valve maintains the desired temperature within +/- 1 degree F.

4.2 Handshower Spray Modes

The Raindance Select S 120 Handshower offers three distinct spray modes:

- **PowderRain:** A fine, gentle spray for a relaxing experience.
- **Rain:** A classic, full-coverage spray.
- **Massage:** A concentrated, pulsating spray for targeted relief.

To switch between spray modes, press the 'Select' button located on the handshower handle.

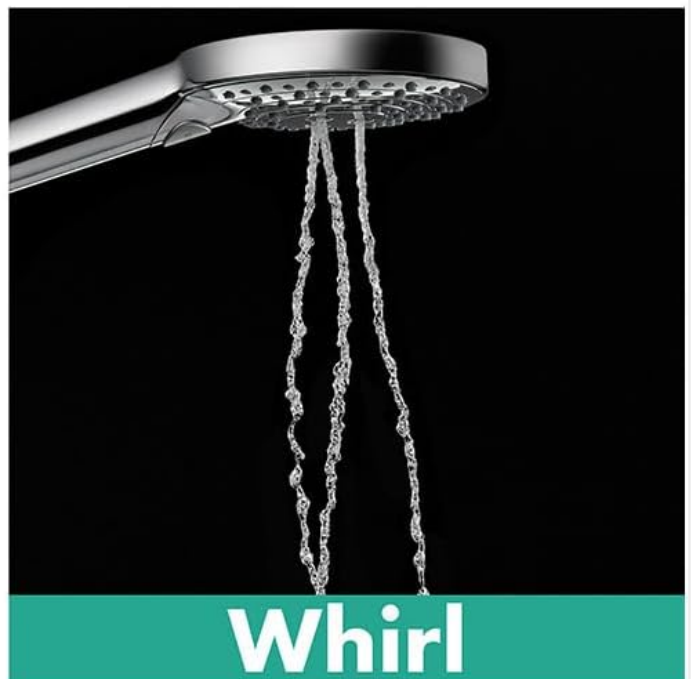


Figure 3: The three selectable spray modes of the handshower.

Your browser does not support the video tag.

Video 1: Demonstration of changing spray modes on the hansgrohe handshower.

4.3 Rain Showerhead Operation

The Raindance S 240 Rain Showerhead provides a single, wide, and even water flow, enhanced by XXL Performance technology. Water flow is activated and controlled via the top handle of the thermostatic trim.



Figure 4: The Raindance S 240 Rain Showerhead in operation.



Figure 5: AirPower technology diagram, showing air infusion for a softer spray.

5. CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your hansgrohe shower system.

5.1 Cleaning the Showerheads and Handshower (QuickClean)

The showerheads and handshower are equipped with QuickClean silicone nozzles. To remove limescale deposits:

- Simply rub the silicone nozzles with your finger or a soft cloth.
- The flexible silicone allows for easy dislodging of mineral buildup.



Figure 6: PowderRain spray, demonstrating the design that facilitates QuickClean maintenance.

5.2 Cleaning Chrome Surfaces

- Use only mild soap and water or a non-abrasive cleaner specifically designed for chrome finishes.
- Wipe surfaces with a soft, damp cloth.
- Rinse thoroughly with clean water and dry with a soft cloth to prevent water spots.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the chrome finish.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your shower system.

Problem	Possible Cause	Solution
Low Water Pressure	Clogged nozzles; partially closed shut-off valves; debris in water lines.	Clean showerhead/handshower nozzles using QuickClean. Ensure all shut-off valves are fully open. Consult a plumber if debris is suspected in water lines.
Inconsistent Water Temperature	Thermostatic cartridge issue; inadequate hot water supply; pressure imbalance.	Verify hot water heater settings. Ensure consistent water pressure to the shower. If the issue persists, the thermostatic cartridge may need inspection or replacement by a qualified professional.
Leaks from Connections	Loose connections; damaged seals/gaskets.	Carefully check all connections for tightness. Do not overtighten. Inspect seals and gaskets for damage and replace if necessary.
Difficulty Switching Spray Modes	Mineral buildup in the handshower mechanism.	Clean the handshower thoroughly, especially around the 'Select' button and spray plate, to remove any mineral deposits.

If you are unable to resolve an issue using the troubleshooting steps above, please contact hansgrohe customer support or a qualified plumber.

7. PRODUCT SPECIFICATIONS

- **Brand:** hansgrohe
- **Model Number:** 04915000
- **Color:** Chrome
- **Material:** Brass, Silicone (Handle Material); Engineered wood (General Material)
- **Finish Type:** Polished
- **Number of Handles:** 2
- **Included Components:** Handshower, Wallbar, Showerhead, Thermostatic Trim, Wall Outlet, iBox Universal Rough
- **Item Weight:** 18.1 pounds
- **Mounting Type:** Wall Mount
- **Head Size:** 15 inches (Rain Showerhead)
- **Flow Rate:** 2.5 GPM (Gallons Per Minute)

8. MANUFACTURER'S WARRANTY

Hansgrohe, Inc. warrants to the original consumer purchaser that hansgrohe products will be free from defects in material and workmanship for as long as the original consumer purchaser owns both the product and the home in which the product was originally installed. For commercial purchasers, the warranty period is one (1) year for hansgrohe products from the date of purchase. The warranty period for products in Rubbed Bronze, Matte Black, and Matte White finishes is three (3) years from the date of purchase. This warranty is non-transferable. This warranty does not cover hansgrohe products purchased from unauthorized sellers, unless otherwise prohibited by law. Authorized sellers can be found on hansgrohe branded websites. Additional warranty restrictions apply. Please refer to the manufacturer's official website for full warranty details and terms.

9. CUSTOMER SUPPORT

For technical assistance, replacement parts, or warranty claims, please contact hansgrohe customer support.

- **Website:** Visit the official hansgrohe website for support resources, FAQs, and contact information.
- **Contact:** Refer to your product packaging or the hansgrohe website for specific phone numbers or email addresses for your region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution.

[Privacy details.](#)

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question