

Luxell LX-3685

Luxell LX-3685 45 Liter Electric Oven User Manual

Model: LX-3685

1. INTRODUCTION

Thank you for choosing the Luxell LX-3685 45 Liter Electric Oven. This manual provides important information for the safe and efficient use of your new appliance. Please read these instructions carefully before operating the oven and keep them for future reference.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before using the oven.
- Do not touch hot surfaces. Use oven mitts or pot holders.
- To protect against electrical shock, do not immerse the cord, plug, or oven in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- Ensure proper ventilation around the oven during operation.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Luxell LX-3685 Electric Oven.



Figure 1: Luxell LX-3685 Electric Oven with control knobs, glass door, and interior racks.

- **Control Knobs:** For temperature, function, and timer settings.
- **Glass Door:** Protected metal glass door for viewing food.
- **Internal Light:** Illuminates the oven interior.
- **Heating Elements:** Upper (650W) and Lower (1000W) elements.
- **Oven Racks:** Two shelves for placing cooking trays.
- **Enamel Coated Trays:** Includes one rectangular and one round tray.
- **Chrome and Nickel Grill:** For grilling functions.

4. SETUP

Before first use, follow these steps:

1. **Unpacking:** Remove all packaging materials, including any internal packing and accessories.
2. **Placement:** Place the oven on a stable, heat-resistant surface, ensuring adequate clearance from walls and other appliances for ventilation. Do not block ventilation openings.
3. **Cleaning:** Wipe the interior and exterior of the oven with a damp cloth. Wash the trays and grill rack in warm, soapy water, then rinse and dry thoroughly.
4. **First Use Burn-off:** Before cooking food, operate the oven empty for approximately 15 minutes at maximum temperature (250°C) with the function set to both upper and lower heating. This will burn off any manufacturing residues and odors. A slight smoke or odor is normal during this process. Ensure the room is well-ventilated.
5. **Power Connection:** Plug the oven into a grounded 220V, 50/60Hz electrical outlet.

5. OPERATING INSTRUCTIONS

Your Luxell LX-3685 oven offers various cooking functions. Always preheat the oven for optimal results.

5.1. Control Knobs

- **Temperature Knob:** Adjusts the internal oven temperature.
- **Function Knob:** Selects the heating mode (e.g., upper heat, lower heat, both, turbo).
- **Timer Knob:** Sets the cooking duration. The oven will turn off automatically and an audible alarm will sound when the set time expires.

5.2. Cooking Modes

The oven features different heating options:

- **Upper Heating (650W):** Ideal for browning or finishing dishes.
- **Lower Heating (1000W):** Suitable for baking bases or slow cooking.
- **Upper and Lower Heating:** Standard baking and roasting.
- **Turbo Cooking Function:** Activates a fan for even heat distribution, reducing cooking time and ensuring uniform results.

5.3. Using the Timer

Turn the timer knob clockwise to set the desired cooking time. The oven will begin heating. Once the time elapses, the oven will switch off automatically, and an audible signal will sound. To manually turn off the oven before the timer finishes, turn the timer knob to the 'OFF' position.

5.4. Internal Oven Light

The internal oven light allows you to monitor your food without opening the door, helping to maintain a consistent cooking temperature. The light typically operates when the oven is on.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your oven and ensure optimal performance.

- **Before Cleaning:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.
- **Interior:** For the interior, use a damp cloth with a mild, non-abrasive oven cleaner. For stubborn stains, a paste of baking soda and water can be applied, left for a short period, then wiped clean. Avoid spraying cleaners directly onto heating elements or the internal light.
- **Trays and Grill:** Wash the enamel coated trays and chrome/nickel grill rack in warm, soapy water. For baked-on food, soak them before washing. Rinse thoroughly and dry completely before storing or reusing.
- **Glass Door:** Clean the glass door with a glass cleaner or a damp cloth. Avoid harsh chemicals that could damage the glass or seals.
- **Storage:** When not in use, store the oven in a clean, dry place.

7. TROUBLESHOOTING

If you encounter issues with your oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; faulty outlet; timer not set.	Check power cord connection; verify power supply; test outlet with another appliance; ensure timer is set or in 'ON' position.
Oven not heating properly.	Incorrect temperature setting; function knob set incorrectly; faulty heating element.	Verify temperature and function settings; allow adequate preheating time. If problem persists, contact customer support.
Food cooking unevenly.	Improper rack position; overcrowding; fan not working (if applicable).	Adjust rack position; avoid overcrowding the oven; ensure Turbo function is selected if even cooking is desired.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. If it persists after initial burn-off, contact customer support.

If the problem persists after trying these solutions, please contact Luxell customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Luxell LX-3685 Electric Oven:

Feature	Detail
Brand	Luxell
Model Number	LX-3685
Color	Grey
Capacity	45 Liters
Product Dimensions (Depth x Width x Height)	41 cm x 41 cm x 63 cm
Power Source	Electric
Power (Lower Element)	1000 Watts
Power (Upper Element)	650 Watts
Material	Glass (Door)
Control Type	Knob
Door Style	Drop-down door
Included Components	Grill, Rectangular Enamel Tray, Round Enamel Tray

Feature	Detail
Number of Shelves	2
Special Features	Timer, Adjustable Thermostat, Internal Light, Turbo Cooking Function
Manufacturer Part Number	8694740336851

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact your local Luxell distributor or customer service center. Keep your purchase receipt as proof of purchase.

If you require technical assistance, spare parts, or have any questions not covered in this manual, please contact Luxell customer support through their official website or the contact details provided with your product.