

iHandy RM-L1120+X

iHandy RM-L1120+X Universal Remote Control Instruction Manual

Model: RM-L1120+X

1. INTRODUCTION

The iHandy RM-L1120+X is a universal remote control designed to operate a wide range of LCD and LED televisions. This manual provides detailed instructions for setting up and using your new remote control.



2. PRODUCT OVERVIEW

The RM-L1120+X remote control offers comprehensive compatibility with various television brands and models, including older and newer LCD/LED TVs. It features commonly used functions and menu buttons for convenient operation.



Image 2: Front view of the iHandy RM-L1120+X Universal Remote Control, showing all buttons.

3. SETUP: BATTERY INSTALLATION

Before using the remote control, you must install two AAA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image 3: Front and back view of the remote control, illustrating the location of the battery compartment.

4. OPERATING INSTRUCTIONS: PROGRAMMING YOUR REMOTE

The RM-L1120+X offers multiple methods to program it for your television. Choose the method that best suits your needs.

4.1. Famous Brand Setting (Quick Setup)

This method is suitable for popular TV brands with pre-programmed codes.

1. Ensure your television is turned on.
2. On the remote control, **press and hold the button corresponding to your TV's brand** (e.g., SHARP, SONY, SAMSUNG).
3. Continue holding the brand button until your TV turns off or the volume icon appears on the screen.
4. Release the brand button immediately. The remote should now be programmed.
5. Test the remote's functions (Power, Volume, Channel). If it does not work correctly, repeat the process or try another programming method.

4.2. Code Entry Method

This method requires you to manually enter a three-digit code for your TV brand. Refer to the code list provided with your remote (if available) or search online for compatible codes for "HUAYU RM-L1120+X" and your TV brand.

1. Turn on your television.
2. On the remote control, **press and hold the 'SET' button, then simultaneously press the 'POWER' button**. The indicator light on the remote will illuminate.
3. Enter the three-digit code for your TV brand using the number buttons.
4. After entering the code, the indicator light should turn off.
5. Test the remote's functions. If it does not work, try another code for your brand or use a different programming method.

4.3. Automatic Search Method

This method scans for compatible codes automatically.

1. Turn on your television.
2. On the remote control, **press and hold the 'SET' button**.
3. Continue holding the 'SET' button. The remote will begin searching for a compatible code.
4. Observe your TV screen. As soon as the **volume icon appears** (or the TV turns off), immediately **release the 'SET' button**.
5. Test the remote's functions. If it does not work correctly, repeat the process, ensuring you release the 'SET' button as soon as the volume icon appears.

5. BUTTON FUNCTIONS

The RM-L1120+X remote control features a standard layout with buttons for common TV functions. Refer to Image 2 for a visual guide.

- **POWER:** Turns the TV on or off.
- **SET:** Used for programming the remote.
- **Number Buttons (0-9):** For direct channel input.

- **VOL +/-**: Adjusts the volume up or down.
- **CH +/-**: Changes channels up or down.
- **MUTE**: Mutes or unmutes the TV sound.
- **MENU**: Accesses the TV's main menu.
- **Navigation (Up/Down/Left/Right) & ENTER**: Navigates through menus and confirms selections.
- **EXIT**: Exits the current menu or function.
- **RETURN**: Returns to the previous channel or menu.
- **SOURCE / INPUT**: Selects video input sources (HDMI, AV, etc.).
- **NETFLIX, YouTube, TV**: Dedicated buttons for quick access to streaming services or TV mode (functionality depends on TV model).
- Additional buttons like WIDE, DMP, SCAN, SUBPAGE, HOME, EPG, REC, 3D, PIP may be present and their functionality depends on the specific TV model and its features.

6. MAINTENANCE

- **Cleaning**: Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's performance degrades or the indicator light does not illuminate during operation. Always replace both batteries at the same time with new AAA batteries.
- **Storage**: If the remote will not be used for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not work.	<ul style="list-style-type: none"> • Batteries are dead or incorrectly inserted. • Remote is not programmed to the TV. • Obstruction between remote and TV. 	<ul style="list-style-type: none"> • Replace batteries with new ones, ensuring correct polarity. • Reprogram the remote using one of the methods in Section 4. • Ensure a clear line of sight to the TV's IR receiver.
Some buttons do not work.	<ul style="list-style-type: none"> • Incorrect code programmed. • TV does not support the specific function. 	<ul style="list-style-type: none"> • Try reprogramming with a different code for your TV brand. • Some advanced functions may not be universally supported.
Indicator light does not illuminate.	<ul style="list-style-type: none"> • Dead batteries. • Remote malfunction. 	<ul style="list-style-type: none"> • Replace batteries. • If new batteries don't help, contact customer support.

8. SPECIFICATIONS

- **Brand**: iHandy
- **Model**: RM-L1120+X

- **Compatible Devices:** Television (LCD, LED, Plasma)
- **Special Features:** Automatic Search, Universal Compatibility
- **Connectivity Technology:** Infrared (IR)
- **Battery Type:** 2 x AAA (not included)
- **Maximum Range:** 10 Meters
- **Product Dimensions:** 22 x 5 x 3 cm
- **Item Weight:** 68 g

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.