

Galanz GSWWA16S1SA10

Galanz GSWWA16S1SA10 3-in-1 SpeedWave with TotalFry 360 Instruction Manual

Model: GSWWA16S1SA10 | Brand: Galanz

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Galanz GSWWA16S1SA10 3-in-1 SpeedWave appliance. This versatile unit combines the functions of a microwave oven, convection oven, and air fryer, offering multiple cooking methods in a single device. Please read all instructions carefully before use and retain this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Do not operate the oven if the door is damaged, or if the seals are broken.
- Ensure proper ventilation around the appliance. Do not block any ventilation openings.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens, convection ovens, and air fryers.
- Regularly clean the oven cavity and remove any food deposits.
- Keep the appliance away from children.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon unpacking:

- 1 x Galanz 3-in-1 Convection Oven (GSWWA16S1SA10)
- 1 x Air Fry Kit
- 1 x Baking and Roasting Pan
- 1 x Glass Tray
- 1 x Roller Ring
- 1 x Shaft
- 1 x Power Cord
- 1 x Instruction Manual (this document)

4. PRODUCT OVERVIEW AND KEY FEATURES

The Galanz GSWWA16S1SA10 is a 1.6 Cu. Ft, 1000W multifunctional appliance designed for versatile cooking. It integrates microwave, convection oven, and air fryer capabilities, along with specialized cooking technologies.



Figure 1: The Galanz SpeedWave 3-in-1 Multifunctional Oven highlighting its core functions.

4.1. Core Functions:

- **Microwave Oven:** 1000W power with 11 variable power levels for efficient heating and cooking. Features Inverter Technology for even cooking.
- **Convection Oven:** Utilizes True Convection with heated air circulating throughout the oven as food spins 360°, ensuring faster and more even cooking without hot spots. Ideal for baking and roasting.
- **Air Fryer (TotalFry 360™ Technology):** Allows for frying with little to no oil, producing healthier, crispy results. The easy-clean Air Fry Kit provides more frying surface area with better air circulation. TotalFry 360™ uses built-in heating elements, not microwaves, for air frying.

4.2. Advanced Cooking Technologies:

- **Combi-Speed Cooking:** Combines True Convection and microwave cooking for faster results and optimal texture. Suitable for roast chicken, baked potatoes, and frozen entrees.
- **Sensor Cook & Sensor Reheat:** Automatically adjusts cooking time and power based on food moisture levels for precise results.

4.3. User Interface:

- White LCD Display for clear visibility.
- Touch Control & Knob for intuitive operation.
- Stainless Steel Cavity for durability and easy cleaning.



Easy to Use

Larger LCD Panel for Clearer Display

Touch Button Panel for Easier Operation

+30 SEC Function

Stop / Cancel

Turntable ON / OFF Button

Push-button Door

Figure 2: Easy-to-use control panel with a large LCD display, touch buttons, and a central knob for time/temperature/weight adjustments.

5. SETUP AND INSTALLATION

This appliance is designed for countertop installation. Ensure adequate space and ventilation for proper operation.

5.1. Placement:

- Place the oven on a flat, stable surface capable of supporting its weight (approximately 39.5 lbs).
- Maintain a minimum clearance of 4 inches (10 cm) from the rear and sides of the oven to allow for proper ventilation.
- Do not place the oven near heat sources or in damp areas.

5.2. Electrical Connection:

- Plug the power cord into a grounded 120V, 60Hz electrical outlet.
- Do not use extension cords or adapters.

5.3. Initial Setup:

- Remove all packing materials and accessories.
- Clean the interior and exterior of the oven with a damp cloth.
- Place the roller ring and glass tray inside the oven cavity.
- Set the clock: Press the 'Clock' button, use the knob to set the time, then press 'Clock' again to confirm.



Figure 3: The spacious 1.6 Cu.Ft interior of the Galanz SpeedWave oven, illustrating its dimensions for proper placement.

6. OPERATING INSTRUCTIONS

Your Galanz SpeedWave offers multiple cooking modes. Familiarize yourself with the control panel and the specific instructions for each function.

Your browser does not support the video tag.

Video 1: An overview of the Galanz SpeedWave 3-in-1 Convection Oven, demonstrating its features and functionality.

6.1. Microwave Cooking:

- Press the 'Micro' button.
- Use the knob to set the desired cooking time.
- Press 'Start' to begin. You can adjust power levels by pressing 'Power Level' and using the knob.

6.2. Convection Cooking:

- Press the 'Conv' button.
- Use the knob to set the desired temperature (e.g., 100°F to 425°F).
- Press 'Cook Time' and use the knob to set the cooking duration.
- Press 'Start' to begin preheating. The oven will beep when preheated; place food inside and press 'Start' again.

6.3. Air Fry (TotalFry 360™):

- Place food on the Air Fry Kit (basket on top of the baking pan).
- Press the 'Air Fry' button.
- Use the knob to select the desired temperature and time.
- Press 'Start'.

6.4. Combi-Speed Cooking:

- Press the 'Micro+Conv' button.
- Select the desired combination mode (e.g., C-1 for Microwave & Convection, C-2 for Microwave & Broil).
- Enter the cooking time using the knob.
- Press 'Start'.

7. SPECIAL FUNCTIONS

12 Commonly Used Functions



Figure 4: The control panel displaying various quick-touch and specialized functions for diverse cooking needs.

- **Sensor Cook & Reheat:** For automatic cooking/reheating of popular foods. Press 'Sensor Cook' or 'Sensor Reheat' and select the food code.
- **Time/Weight Defrost:** Press 'Time/Weight Defrost', select either time or weight, and use the knob to set the value.
- **Popcorn, Pizza, Potato:** Dedicated buttons for quick cooking of these items.
- **Add 30 Sec:** Quickly adds 30 seconds to the cooking time.
- **Child Lock:** To activate, press and hold the 'Stop/Cancel' button for 3 seconds. The oven will beep and 'LOCK' will appear on the display. To deactivate, press and hold 'Stop/Cancel' again for 3 seconds.
- **Turntable ON/OFF:** Press this button to enable or disable the turntable rotation.

8. CARE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your appliance.

- **Interior:** Wipe the oven cavity with a damp cloth after each use. For stubborn stains, use a mild detergent. Do not use abrasive cleaners.
- **Exterior:** Clean the exterior surfaces with a soft, damp cloth. Avoid harsh chemicals.
- **Glass Tray & Roller Ring:** These components can be washed in warm soapy water or in the dishwasher.
- **Air Fry Kit & Baking Pan:** Wash with warm soapy water. The Air Fry Kit is designed for easy cleaning.
- **Odor Removal:** If strong odors persist, place a bowl of water with lemon slices inside and microwave for a few minutes.

9. TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is secure; Close door firmly; Check household fuse/circuit breaker.
Food not heating evenly	Food not stirred/turned; Incorrect power level/time; Turntable not rotating.	Stir/turn food during cooking; Adjust settings; Check turntable for obstructions.
Excessive steam/condensation	High moisture content in food; Lack of ventilation.	This is normal for some foods; Ensure proper clearance around the oven.
Error code on display (e.g., Err30)	Internal malfunction.	Unplug the oven for 5 minutes, then plug back in. If the error persists, contact customer support.

For issues not listed here, or if solutions do not resolve the problem, please contact Galanz customer support.

10. SPECIFICATIONS

Feature	Detail
Model Number	GSWWA16S1SA10
Capacity	1.6 Cubic Feet
Microwave Wattage	1000 Watts
Voltage	120 Volts / 60Hz

Feature	Detail
Operating Frequency	2450 MHz
Heating Method	Convection
Product Dimensions (D x W x H)	22.94" x 21.75" x 12.69"
Item Weight	39.5 Pounds
Material	Stainless Steel
Color	Stainless Steel

11. WARRANTY AND SUPPORT

Your Galanz GSWWA16S1SA10 appliance comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, service inquiries, or to order replacement parts, please contact Galanz customer service through their official website or the contact information provided in your warranty documentation.