

IBELL EO19LG

iBELL EO19LG 19 Litre Oven Toaster Griller Instruction Manual

Model: EO19LG | Brand: IBELL

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before operating this appliance.

- Do not touch hot surfaces. Always use oven mitts or gloves when handling hot materials.
- To protect against electrical shock, do not immerse the cord, plug, or any part of the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer, as they may cause hazards.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended household use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or similar items.
- Do not cover the crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

2. PRODUCT OVERVIEW

The iBELL EO19LG is a versatile 19-litre Oven Toaster Griller designed for various cooking tasks including baking, toasting, and grilling. It features multiple heating modes and a user-friendly control panel.



The iBELL EO19LG Oven Toaster Griller, showcasing its compact design and a pizza being cooked, highlighting its baking capability.

Key Features:

- 19 Litre Capacity: Suitable for small to medium-sized meals.
- 1500 Watt Power: Ensures efficient heating and cooking.
- 60 Minute Timer: With an auto-off function for precise cooking control.
- Multi-Stage Heating Modes: Offers flexibility for different recipes.
- Heat Resistant Tempered Glass: For safe viewing of food during cooking.
- Full Black Housing: Durable and aesthetically pleasing design.



**19 LITRE
CAPACITY**



**1500W
POWER**



**60 MIN
TIMER**



Illuminated Chamber Included

This image illustrates the key features of the iBELL EO19LG OTG, including its 19-litre capacity, 1500W power, 60-minute timer, and the illuminated interior for easy monitoring.

Components:



A detailed diagram pointing out the various parts of the iBELL EO19LG OTG.

1. **Power Light:** Indicates when the oven is operating.
2. **Timer:** Sets the cooking duration up to 60 minutes with auto-off.
3. **Selector Dial:** Chooses the heating mode (upper, lower, or both elements).
4. **Thermostat Dial:** Adjusts the cooking temperature.
5. **Glass Door Handle:** For opening and closing the oven door.
6. **Bake Rack:** For placing items that require baking or grilling.
7. **Bake Pan:** Collects drips or for baking items directly.
8. **Pan Handle:** For safely inserting and removing the bake pan and rack.
9. **Heating Elements:** Upper and lower heating elements for even cooking.
10. **Glass Door Clips:** Secure the tempered glass door.



The essential accessories provided with the iBELL EO19LG OTG, including a food tray handle for safe removal of hot items, a baking pan, and a grill rack for versatile cooking.

3. SETUP AND FIRST USE

Unpacking:

- Remove all packaging materials and accessories.
- Ensure all components listed in the 'Product Overview' section are present.
- Remove any stickers or printed materials from the oven.

Placement:

- Place the oven on a stable, level, heat-resistant surface.
- Ensure adequate ventilation around the oven. Maintain a minimum distance of 10 cm from walls or other appliances.
- Do not place the oven near flammable materials such as curtains or tablecloths.

Cleaning Before First Use:

- Wipe the interior and exterior of the oven with a damp cloth.
- Wash the bake rack, bake pan, and pan handle in warm, soapy water. Rinse and dry thoroughly.

Initial Burn-Off:

It is recommended to run the oven empty for approximately 15 minutes before first use to burn off any manufacturing residues. This may produce a slight odor or smoke, which is normal.

1. Plug the oven into a suitable power outlet.
2. Set the Thermostat Dial to 250°C.
3. Set the Selector Dial to both upper and lower heating elements.
4. Set the Timer Dial to 15 minutes.
5. Once the timer rings, the oven will switch off. Allow it to cool completely before use.

4. OPERATING INSTRUCTIONS

The iBELL EO19LG OTG features three control knobs for temperature, heating mode, and timer. Familiarize yourself with these controls for optimal cooking results.

Your browser does not support the video tag.

This video provides a comprehensive demonstration of the iBELL EO19LG OTG, including its various functions, controls, and how to use it for baking cakes and pizzas.

Control Dials:

- **Thermostat Dial (Top):** Controls the oven temperature from 100°C to 250°C.
- **Selector Dial (Middle):** Selects the heating elements to be used:
 - Upper heating element only (for grilling/toasting top).
 - Lower heating element only (for baking bottom).
 - Both upper and lower heating elements (for general baking/roasting).
- **Timer Dial (Bottom):** Sets the cooking time from 0 to 60 minutes. The oven automatically switches off when the timer reaches zero.



Temperature Dial



Selector Dial




Timer Dial

General Operation Steps:

1. Prepare your food and place it on the appropriate accessory (bake rack or bake pan).
2. Open the oven door using the glass door handle and carefully slide the accessory with food into the desired rack position. Close the door.
3. Set the **Thermostat Dial** to the required temperature for your recipe.
4. Set the **Selector Dial** to the desired heating mode (e.g., both elements for baking, upper for grilling).
5. Set the **Timer Dial** to the desired cooking time. The power light will illuminate, indicating the oven is operating.
6. When the timer rings, the oven will automatically turn off. Carefully open the door and use the pan handle to remove the hot food.

Cooking Examples:

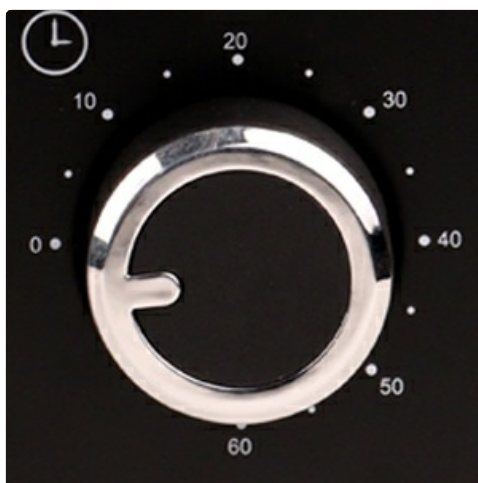

Versatile cooking functions: Bake, Grill, Roast.

Baking a Cake:

- Place the cake batter in a suitable baking tin on the bake rack.
- Set the Thermostat Dial to 180°C - 200°C (refer to your recipe).
- Set the Selector Dial to both upper and lower heating elements.
- Set the Timer Dial to 18-20 minutes, or as per your recipe.

Baking Pizza:

- Place the pizza on the bake pan.
- Set the Thermostat Dial to above 180°C.
- Set the Selector Dial to both upper and lower heating elements.
- Set the Timer Dial to 12-15 minutes, or until the crust is golden and cheese is melted.

5. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your iBELL OTG.

General Cleaning:

- Always unplug the oven and allow it to cool completely before cleaning.
- Wipe the exterior with a damp cloth and mild detergent. Do not use abrasive cleaners or metal scouring pads.
- Clean the interior with a damp cloth and mild, non-abrasive cleaner. For stubborn stains, a paste of baking soda and water can be used.
- The glass door can be cleaned with a glass cleaner.

Cleaning Accessories:

- The bake rack, bake pan, and pan handle can be washed in warm, soapy water. Rinse thoroughly and dry before storing or reusing.
- The crumb tray should be removed and cleaned regularly to prevent grease buildup and potential fire hazards.

Storage:

When not in use, ensure the oven is clean, dry, and stored in a cool, dry place. Do not wrap the power cord tightly around the appliance.

6. TROUBLESHOOTING

If you encounter any issues with your iBELL EO19LG OTG, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure the oven is properly plugged in. Check your household's power supply. Set the timer dial to the desired cooking duration.
Food is not cooking evenly.	Incorrect rack position; uneven food placement; wrong heating mode.	Adjust the rack position for optimal heat distribution. Ensure food is spread evenly. Select the appropriate heating mode (e.g., both elements for baking).
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal during the initial burn-off. Ensure good ventilation. If it persists after initial use, contact customer support.
Timer is not working.	Timer dial not set correctly.	Ensure the timer dial is turned past the 0 mark and set to a specific time.

If the problem persists after trying these solutions, please contact iBELL customer support.

7. SPECIFICATIONS

Detailed technical specifications for the iBELL EO19LG Oven Toaster Griller.

Feature	Specification
Brand	IBELL
Model	EO19LG
Capacity	19 Litre
Power	1500 Watt
Voltage	AC 230V, 50Hz
Timer	60 Minute with Auto-Off
Control Type	Knob
Door Style	Dropdown Door
Door Material	Tempered Glass
Product Dimensions (D x W x H)	25D x 44W x 28.5H Centimeters
Item Weight	5 kg 650 g
Country of Origin	China



This image provides the precise dimensions of the iBELL EO19LG OTG, indicating its depth, width, and height for proper placement and space planning.

8. WARRANTY AND SUPPORT

Warranty Information:

The iBELL EO19LG Oven Toaster Griller comes with a 1-year standard warranty. An additional 1-year warranty is available upon registration. Registration must be completed within 30 days from the date of purchase to avail the extended warranty.

Customer Support:

For any queries, service requests, or support, please contact the manufacturer:

- **Manufacturer:** Innovative Technologies
- **Address:** iBELL Fida's Building, Thottumugham P.O, Aluva, Kerala - 683105

- **Phone:** 1800-2020-260
- **Email:** connect@ibellstore.com

© 2025 IBELL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question