

Rainbow High 567448E7C

Rainbow High Salon Playset Instruction Manual

Model: 567448E7C

1. INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your Rainbow High Salon Playset. Please read all instructions carefully before use to ensure proper function and safety. The Rainbow High Salon Playset allows children and dolls to experience hair coloring and styling activities using washable hair color foam. The playset features a functional salon sink that sprays water, enabling realistic play scenarios.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Adult supervision is recommended during play, especially when using water and mixing foam.
- Ensure all components are securely assembled before use.
- Do not ingest foam powders or activators. In case of accidental ingestion, seek medical attention immediately.
- Avoid contact of foam mixtures with eyes. If contact occurs, rinse thoroughly with water.
- Use only the provided foam powders and activators with the playset.
- Keep the playset away from electrical outlets and devices when using water.
- After use, thoroughly clean all components and allow them to dry completely before storage to prevent mold or mildew.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Working Rainbow Salon Sink
- 1 x Salon Chair
- 5 x Foam Activator Bottles
- 5 x Foam Powders (various colors)
- 1 x Hair Glitter
- 1 x Tint Brush

- 1 x Spoon
- 1 x Bowl
- 1 x Hairbrush
- (Doll sold separately)



Image 1: Overview of Rainbow High Salon Playset components. This image displays the main salon sink unit, a clear salon chair, five colorful foam activator bottles, five packets of foam powder, a hair glitter tube, a tint brush, a spoon, a mixing bowl, and a hairbrush.

4. SETUP

1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Assemble Salon Sink:** Place the salon sink unit on a flat, stable surface. Ensure the water pump mechanism is correctly attached.
3. **Position Salon Chair:** Place the salon chair next to the sink unit.
4. **Prepare Water:** Fill the water reservoir of the salon sink with clean tap water. Do not overfill.
5. **Organize Supplies:** Arrange the foam activator bottles, foam powders, hair glitter, tint brush, spoon, bowl, and hairbrush within easy reach.



Image 2: The Rainbow High Salon Playset as packaged. The image shows the playset box with a doll seated in the salon chair, highlighting the hair coloring and washing features.

5. OPERATING INSTRUCTIONS

5.1. Preparing Hair Color Foam

1. Select one foam powder packet and one foam activator bottle.
2. Pour the foam powder into the mixing bowl.
3. Add a small amount of water from the salon sink into the bowl using the spoon.
4. Slowly add the foam activator from the bottle into the bowl.
5. Stir the mixture with the spoon until a consistent foam texture is achieved. Adjust water or activator as needed.



Image 3: A hand demonstrates pouring pink foam powder into the salon sink, illustrating the first step in preparing the hair color foam.

5.2. Applying Hair Color

1. Seat your doll in the salon chair.
2. Using the tint brush, carefully apply the prepared hair color foam to sections of the doll's hair.
3. For personal use, apply foam to small sections of your own hair.
4. Allow the color to set for a few minutes (refer to foam packet for specific timing, if any).



Image 4: A close-up of a hand using the tint brush to apply pink hair color foam to a section of a doll's long, light-colored hair.



Image 5: A young girl smiling while applying colorful streaks to her own hair using the tint brush, demonstrating personal use of the hair color foam.

5.3. Washing Hair

1. Position the doll's head over the salon sink.
2. Press the button on the water pump to spray water from the showerhead onto the doll's hair.
3. Gently rinse the hair until all color foam is removed.
4. Use the hairbrush to detangle and style the doll's hair after rinsing.



Image 6: Hands are shown operating the salon sink's showerhead, spraying water onto a doll's hair as part of the washing process.

5.4. Adding Hair Glitter

- After coloring and drying, sprinkle the hair glitter onto the doll's hair for added sparkle.
- Gently brush through to distribute the glitter evenly.

6. MAINTENANCE

- **Cleaning:** After each use, empty any remaining water from the salon sink. Rinse the sink, mixing bowl, tint brush, and spoon thoroughly with clean water.
- **Drying:** Allow all components to air dry completely before storing to prevent mildew.
- **Storage:** Store the playset and its accessories in a clean, dry place away from direct sunlight.
- **Hair Care:** For dolls, ensure hair is fully dry before storing. If doll hair becomes tangled, use the provided hairbrush or a wide-tooth comb to gently detangle.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Water pump not spraying.	Low water level or air in pump.	Ensure the water reservoir is adequately filled. Prime the pump by pressing the button several times.
Foam mixture is too thin/thick.	Incorrect ratio of powder, activator, or water.	Adjust the amount of water or foam activator gradually until desired consistency is reached.
Hair color not visible on doll's hair.	Insufficient application or short setting time.	Apply more foam and ensure it covers the hair strands. Allow adequate setting time before rinsing.

Problem	Possible Cause	Solution
Hair color not washing out completely.	Incomplete rinsing.	Rinse the doll's hair thoroughly under running water until all color is gone.

8. SPECIFICATIONS

- **Product Dimensions:** 5.51 x 11.81 x 15.75 inches
- **Item Weight:** 1 pound
- **Model Number:** 567448E7C
- **Recommended Age:** 4 - 15 years
- **Manufacturer:** Rainbow High
- **Release Date:** July 26, 2020

9. WARRANTY AND SUPPORT





For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Rainbow High website.

Online Resources:

- [Visit the Rainbow High Store on Amazon](#)

© 2025 Rainbow High. All rights reserved.

Related Documents - 567448E7C

	<p>Rainbow High Salon Playset: Cleaning, Assembly, and Usage Instructions</p> <p>Comprehensive guide for the Rainbow High Salon playset, covering cleaning, assembly, contents, and how to use the color foam and glitter gel safely. Includes important warnings and information.</p>
	<p>Rainbow High Color & Create Fashion DIY Doll Instructions and Care Guide</p> <p>Detailed instructions and care guide for the Rainbow High Color & Create Fashion DIY Doll. Learn how to color, wash, and maintain the doll and its accessories with this comprehensive manual from MGA Entertainment.</p>
	<p>Rainbow High Hair Chalk Styling Instructions and Safety Guide</p> <p>Detailed instructions and safety information for using Rainbow High hair chalks with dolls and children's hair. Includes application steps, styling tips, and cleaning advice.</p>
	<p>Rainbow High Color & Play House Assembly and Safety Guide</p> <p>Comprehensive guide for assembling the Rainbow High Color & Play House, including essential safety warnings, wall mounting instructions, and tips for safe play. Features washable markers for customization.</p>



[Rainbow High Watercolor & Create Fashion Doll Kit Instructions](#)

Step-by-step instructions and safety information for the Rainbow High Watercolor & Create fashion doll kit, including how to use color pigment powders for various creative techniques like watercolor, dip & create, and tie-dye. Includes washing instructions and a list of kit contents.



[Rainbow High World Tour Bus & Stage Playset - Assembly and Safety Guide](#)

Official guide for the Rainbow High World Tour Bus & Stage playset (SKU 583721). Includes assembly instructions, safety warnings, battery replacement, and product information from MGA Entertainment.