

FUNAI Original Remote Control for Hitachi Roku Smart TV

FUNAI Original Remote Control for Hitachi Roku Smart TV

User Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your FUNAI Original Remote Control for Hitachi Roku Smart TV. Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your viewing experience.

PRODUCT OVERVIEW

The FUNAI Original Remote Control is designed for seamless compatibility with various Hitachi Roku Smart TV models. It provides intuitive control over your television's functions, including power, navigation, playback, and direct access to popular streaming services.



Figure 1: FUNAI Original Remote Control for Hitachi Roku Smart TV.

This image displays the front of the FUNAI Original Remote Control, showing its ergonomic design and button layout. The remote is black with various control buttons, including a red power button at the top, a circular navigation pad with an 'OK' button in the center, playback controls (rewind, play/pause, fast forward), and dedicated app buttons for Netflix, Hulu, Sling, and NOW. The bottom of the remote features the 'HITACHI Roku TV' branding.

SETUP

Battery Installation

To begin using your remote control, you must first install the batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align with the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

The remote control is now ready for use with your Hitachi Roku Smart TV. No pairing is typically required for this original remote control.

OPERATING INSTRUCTIONS

Familiarize yourself with the various buttons on your remote control to effectively navigate your Hitachi Roku Smart TV.

- **Power Button** (⏻): Turns the TV on or off.
- **Back Button** (←): Returns to the previous screen or menu.
- **Home Button** (⌂): Returns to the Roku Home screen.
- **Navigation Pad** (⬆ ⬅ **OK** ➡ ⬆): Use the directional arrows (Up, Down, Left, Right) to navigate menus and select items. The **OK** button confirms selections.
- **Instant Replay Button** (⏮): Replays the last few seconds of video.
- **Sleep Timer Button** (⌚): Accesses the sleep timer settings.
- **Star Button** (*): Provides quick access to options and settings within certain apps or menus.
- **Rewind Button** (⏮): Rewinds video playback.
- **Play/Pause Button** (⏮ ⏭): Plays or pauses video content.
- **Fast Forward Button** (⏭): Fast forwards video playback.
- **Dedicated App Buttons (Netflix, Hulu, Sling, NOW)**: Provide direct access to these popular streaming applications.

MAINTENANCE

Cleaning the Remote

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, alcohol, or solvents, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote out of range.	Replace batteries, ensuring correct polarity. Remove any obstructions. Ensure you are within effective range of the TV's IR receiver.

Problem	Possible Cause	Solution
Certain buttons not working.	Dirt or debris under the button. Remote malfunction.	Clean the remote surface. If the issue persists, consider replacing the remote.
TV not turning on/off.	TV power issue. Remote not sending signal.	Check if the TV is plugged in and receiving power. Ensure remote batteries are fresh.

SPECIFICATIONS

- **Brand:** FUNAI
- **Model:** Original Remote Control for Hitachi Roku Smart TV
- **Compatible Devices:** Television (Specifically Hitachi Roku Smart TV models)
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic design
- **Item Weight:** Approximately 3 ounces (0.1875 Pounds)
- **Power Source:** 2 x AAA Batteries (not included)
- **Compatible Hitachi Roku TV Models:** 65R8, 55R7, 50R8, 49R80, 49RH1, 43R80, 55VH, 50R81, 49R81, 55R81, 55R80, 55RH1, 65R80, 60R70, 60RH2

WARRANTY AND SUPPORT

This product is offered as a renewed item. As such, it is eligible for replacement or refund under the [Amazon Renewed Guarantee](#) if you are not satisfied with your purchase. For specific details regarding the guarantee, please refer to the Amazon Renewed program terms and conditions.

For further assistance or inquiries, please contact the seller or Amazon customer support directly.

© 2024 FUNAI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question