

PlayGo TIDYKID

PlayGo Kids Cleaning Set Instruction Manual

Model: TIDYKID

1. INTRODUCTION AND PRODUCT OVERVIEW

The PlayGo Kids Cleaning Set is designed to encourage imaginative play and connect children to real-world activities. This set provides a realistic and engaging experience for children aged 2 years and older, suitable for both home and classroom environments.

The main vacuum unit features lights and sounds for an interactive play experience. It also includes a removable dust buster for versatile cleaning scenarios. The set is completed with essential cleaning tools: a broom, a mop, and a water pail.

Note: The vacuum requires 2 AA batteries, which are included with the product.

2. SAFETY INFORMATION

- This product is designed for children aged 2 years and older.
- Adult supervision is recommended during play to ensure safe use.
- Ensure all battery compartments are securely closed to prevent access by small children.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Dispose of used batteries responsibly.

3. PACKAGE CONTENTS

Please verify that all items listed below are present in your package:

- 1 x Upright Vacuum Cleaner with Lights and Sounds
- 1 x Removable Handheld Dust Buster
- 1 x Broom

- 1 x Mop
- 1 x Water Pail
- 2 x AA Batteries (pre-installed in vacuum)



Image 3.1: Complete PlayGo Kids Cleaning Set components.

4. SETUP

4.1 Battery Installation (Vacuum)

The vacuum cleaner requires 2 AA batteries for its light and sound functions. These batteries are included and typically pre-installed. If replacement is needed, follow these steps:

1. Locate the battery compartment on the back of the upright vacuum unit.
2. Using a small screwdriver (not included), unscrew the battery compartment cover.
3. Insert 2 new AA batteries, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screw.



Image 4.1: Locating and opening the battery compartment on the vacuum.

4.2 Attaching the Dust Buster

The handheld dust buster can be attached to the upright vacuum for storage or integrated play.

1. Align the dust buster with the designated slot on the main vacuum body.
2. Gently slide the dust buster into place until it clicks securely.



Image 4.2: Attaching the handheld dust buster to the upright vacuum.

5. OPERATING INSTRUCTIONS

5.1 Using the Upright Vacuum

To activate the vacuum's lights and sounds:

1. Ensure batteries are correctly installed.
2. Press the power button located on the handle of the upright vacuum. The vacuum will light up and produce realistic vacuum sounds.
3. Push the vacuum along the floor to simulate cleaning. The colorful beads in the vacuum head will spin, adding to the realistic play.



Image 5.1: Child operating the upright vacuum.



Image 5.2: Detail of the vacuum head with spinning beads.

5.2 Using the Removable Dust Buster

The dust buster can be used independently for smaller cleaning tasks.

1. Detach the dust buster from the upright vacuum by pressing the release button (if present) or gently pulling it out.
2. Press the power button on the dust buster to activate its lights and sounds.
3. Use the dust buster to simulate cleaning small areas.



Image 5.3: Using the handheld dust buster.

5.3 Using the Broom, Mop, and Water Pail

These tools are designed for traditional pretend play:

- Use the broom to sweep imaginary dirt.
- Use the mop with the water pail for pretend mopping. The pail can hold a small amount of water for realistic play, but adult supervision is advised to prevent spills.

6. MAINTENANCE

6.1 Cleaning the Set

- Wipe all plastic surfaces with a damp cloth. Do not immerse the vacuum or dust buster in water.
- For the mop and broom, clean bristles and fabric with mild soap and water, then air dry thoroughly.

6.2 Battery Replacement

When the vacuum's lights dim or sounds become faint, it is time to replace the batteries. Refer to Section 4.1 for detailed instructions on battery installation.

7. TROUBLESHOOTING

- **Vacuum not turning on / No lights or sounds:**

Check if the batteries are correctly installed. Replace with fresh AA batteries if necessary. Ensure the battery compartment cover is securely fastened.

- **Dust buster not attaching securely:**

Ensure proper alignment with the slot on the upright vacuum. Apply gentle pressure until it clicks into place.

- **Broom/Mop heads detaching:**

Ensure the handles are firmly inserted into the heads. If they continue to detach, check for any damage to the connection points.

8. SPECIFICATIONS

Feature	Detail
Model Number	TIDYKID
Product Dimensions	16.14 x 5.51 x 22.05 inches
Item Weight	3.99 pounds
Vacuum Height	Approximately 26 inches (66 cm)
Broom/Mop Handle Length	Approximately 15 inches (38 cm)
Battery Requirement	2 x AA batteries (included for vacuum)
Recommended Age	2 years and older
Manufacturer	Playgo Toys
Date First Available	March 2, 2020

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your PlayGo Kids Cleaning Set, please contact the manufacturer directly. Specific warranty details may vary by region and retailer. Please retain your proof of purchase for any warranty claims.

Manufacturer: Playgo Toys Enterprises Ltd.

Please refer to the packaging or the retailer's website for the most current contact information.