

Keenstone WT-330

Keenstone Retro 2-Slice Stainless Steel Toaster User Manual

Model: WT-330

Brand: Keenstone

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not insert oversized foods, metal foil packages, or utensils into the toaster as this may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the crumb tray is properly installed before use.

2. PRODUCT OVERVIEW

Components

The Keenstone Retro 2-Slice Toaster features a durable stainless steel body with a sleek, retro design. Key components include:

- **Toasting Slots:** Two extra-wide slots for various bread types.
- **High Lift Lever:** For easy retrieval of smaller items.
- **Browning Control Dial:** Six adjustable shade settings.
- **Function Buttons:** Cancel, Bagel, and Defrost.
- **Removable Crumb Tray:** Located at the bottom for easy cleaning.
- **Cord Storage:** Integrated at the base for a tidy countertop.



Figure 1: Front view of the Keenstone Retro 2-Slice Toaster, showcasing its dark blue finish and control panel.

3. SETUP

Initial Use

1. Unpack the toaster and remove all packaging materials, including any protective films or stickers.
2. Place the toaster on a stable, heat-resistant surface, away from flammable materials.
3. Ensure the crumb tray is fully inserted.
4. Plug the power cord into a standard 110V AC electrical outlet.
5. For the first use, it is recommended to operate the toaster empty on the highest setting (Level 6) for a few minutes to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate.

4. OPERATING INSTRUCTIONS

Basic Toasting

1. Insert up to two slices of bread into the toasting slots.
2. Select your desired browning level using the shade setting dial (1-6).
3. Press the high lift lever down until it locks into place. The toasting cycle will begin.
4. Once the toasting cycle is complete, the toast will automatically pop up. Use the high lift lever to raise the toast further for easy removal if needed.



Figure 2: The toaster ready for use in a kitchen, demonstrating its compact size and aesthetic appeal.

Shade Settings

The toaster offers 6 browning levels to suit individual preferences, from lightly toasted to dark and crispy. Experiment with different settings to find your ideal toast shade.



Figure 3: Visual guide illustrating the 6 browning levels, from light (Level 1) to dark (Level 6).

Special Functions

The toaster includes three dedicated function buttons for enhanced versatility:

- **Cancel:** Press this button at any time to stop the toasting cycle immediately.
- **Bagel:** Activates a special setting that toasts the cut side of the bagel while gently warming the other side.
- **Defrost:** Designed to toast frozen bread. This function extends the toasting time to first thaw and then toast the bread to your selected shade.

Multiple Toasting Functions



Figure 4: Close-up of the toaster's control panel, highlighting the Cancel, Defrost, and Bagel function buttons.

Your browser does not support the video tag.

Video 1: This video demonstrates the various functions of the Keenstone 2-Slice Stainless Steel Retro Toaster, including the Cancel, Bagel, and Defrost settings, and how to adjust the browning level.

Extra Wide Slots

The toaster is equipped with 1.5-inch extra-wide slots, accommodating a variety of bread types, including thick bagels, Texas toast, and artisanal breads, ensuring even toasting.

1.5" Extra Wide Slots

Perfect for Different Kinds of Slices



Figure 5: Illustration of the toaster's 1.5-inch extra-wide slots, designed to fit thicker bread slices and bagels.

High Lift Lever

The high lift lever allows you to raise the toasted items higher out of the slots, making it easier and safer to retrieve smaller pieces of bread or English muffins without burning your fingers.

Simple Designs Bring Convenient Life



Flat Lever Button



Removable Crumb Tray

Figure 6: A hand demonstrating the use of the high lift lever for convenient toast retrieval.

5. CLEANING AND MAINTENANCE

Removable Crumb Tray

Regular cleaning of the crumb tray is essential to prevent crumb buildup, which can cause fire hazards and affect toaster performance.

1. Ensure the toaster is unplugged and completely cool before cleaning.
2. Pull out the removable crumb tray located at the bottom of the toaster.
3. Discard accumulated crumbs.
4. Wipe the tray with a damp cloth and dry thoroughly before reinserting.
5. Never operate the toaster without the crumb tray in place.

Simple Designs Bring Convenient Life



Flat Lever Button



Removable Crumb Tray

Figure 7: A hand removing the crumb tray from the toaster for cleaning, showing accumulated crumbs.

Exterior Cleaning

Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the surface. Ensure the toaster is completely dry before plugging it back in.

6. TROUBLESHOOTING

- **Toaster not working:** Ensure the power cord is securely plugged into a working outlet. Check if the circuit breaker has tripped.
- **Uneven toasting:** Ensure bread slices are centered in the slots. Different types of bread may require different shade settings.
- **Smoke or burning smell:** Immediately press the Cancel button and unplug the toaster. Remove any lodged food particles after the toaster has cooled. Clean the crumb tray.
- **Toast stuck:** Unplug the toaster and allow it to cool. Carefully remove the toast using non-metallic utensils. Never use metal objects.

7. SPECIFICATIONS

Feature	Detail
Brand	Keenstone
Model Number	WT-330
Color	Dark Blue
Material	Stainless Steel
Product Dimensions	7.1"D x 11.6"W x 7.5"H
Wattage	800 watts
Voltage	110 Volts
Number of Slices	2
Number of Settings	6 (Browning Levels)
Special Features	Bagel Setting, Cancel Function, Defrost, Extra Wide Slots, High Lift Lever, Removable Crumb Tray
Style	Retro
Item Weight	3.76 pounds
UPC	810142349406

8. WARRANTY AND SUPPORT

The Keenstone Retro 2-Slice Stainless Steel Toaster typically comes with a manufacturer's warranty. Please refer to the product packaging or the official Keenstone website for specific warranty details and registration information.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Keenstone customer service through their official channels. Keep your purchase receipt and model number (WT-330) handy for faster service.