

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Easytry123](#) /

› Easytry123 YD047 Replacement Remote Control Instruction Manual

Easytry123 YD047

Easytry123 YD047 Replacement Remote Control Instruction Manual

For Sony KDL-40EX400, KDL-40EX400H, KDL-46EPL600BD, KDL-46TVBDPKG, RM-YD035, 148782711, KLV-40BX400 LCD
Digital Colour TV Televisor

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Easytry123 YD047 Replacement Remote Control. This remote is designed to function as a replacement for various Sony LCD Digital Colour TV models, including KDL-40EX400, KDL-40EX400H, KDL-46EPL600BD, KDL-46TVBDPKG, RM-YD035, 148782711, and KLV-40BX400. Please note that as a replacement unit, some advanced or specific functions of your original remote may not be fully supported.

SETUP

Battery Installation

The Easytry123 YD047 remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

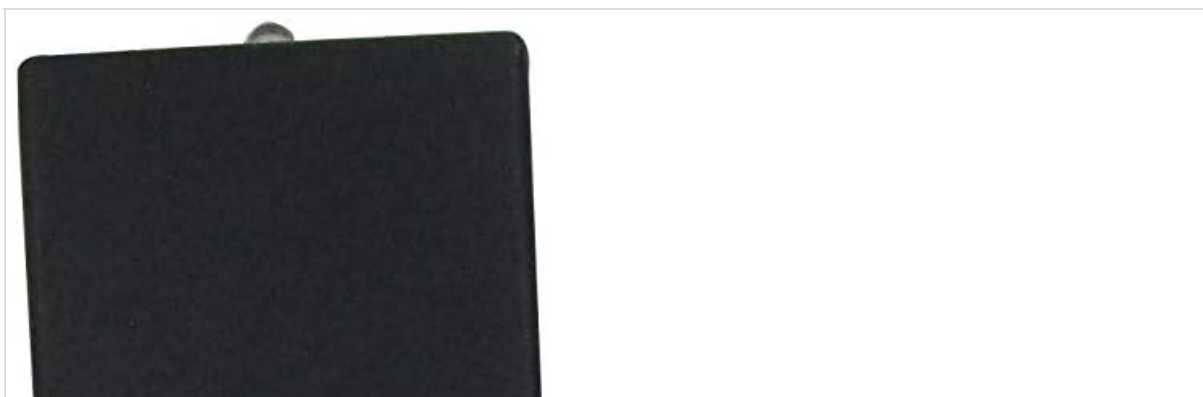




Image: Back view of the remote control with the battery cover removed, revealing the battery slots.



Image: Angled view of the remote control, illustrating the open battery compartment and the detached cover.

Important: Always use new batteries and dispose of old batteries responsibly. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

OPERATING INSTRUCTIONS

The Easytry123 YD047 remote control is designed for ease of use with compatible Sony televisions. Below is a guide to its primary functions.





Image: Front view of the remote control, showing the layout of all buttons.

Basic Functions

- **POWER:** Turns the television on or off.
- **INPUT:** Cycles through available input sources (e.g., HDMI, AV, Component).
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the television channel.
- **MUTING:** Mutes or unmutes the television audio.

- **Number Buttons (0-9):** Directly select channels or input numerical data.
- **ENT:** Confirms numerical channel input.

Navigation and Menu Functions

- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms selections within menus.
- **HOME:** Accesses the television's main menu or smart TV interface.
- **MENU:** Opens the television's settings menu.
- **RETURN:** Goes back to the previous screen or menu.
- **OPTIONS:** Displays contextual options for the current screen or content.
- **DISPLAY:** Shows information about the current program or input.
- **GUIDE:** Accesses the electronic program guide (EPG).

Specialized Functions

- **THEATER:** Activates a specific picture/sound mode optimized for movies.
- **BRAVIA Sync:** Controls compatible Sony BRAVIA Sync devices connected via HDMI.
- **PLAY/PAUSE, STOP, PREV, NEXT:** Controls media playback for compatible devices or content.
- **WIDE:** Adjusts the screen aspect ratio.
- **I-MANUAL:** Accesses the television's on-screen instruction manual.
- **SCENE:** Selects a scene mode for optimized picture and sound settings.
- **DIGITAL/ANALOG:** Switches between digital and analog TV tuners.
- **ANT:** Selects antenna input.
- **EXIT:** Exits the current menu or function.
- **INTERNET VIDEO:** Accesses internet video services.
- **FAVORITES:** Accesses favorite channels or content.
- **SAIR:** Specific function, may vary by TV model.
- **CC/SUBTITLE:** Toggles closed captions or subtitles.

Note: As a replacement remote, not all functions present on the original remote may be fully supported or function identically. Compatibility may vary depending on the specific television model and its firmware version.

MAINTENANCE

To ensure the longevity and optimal performance of your Easytry123 YD047 remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.
- **Battery Care:** Replace batteries when the remote's responsiveness decreases. If the remote will not be used for an extended period (e.g., more than one month), remove the batteries to prevent potential leakage and corrosion, which can damage the remote.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the remote control or subjecting it to strong impacts, as this can damage internal circuitry.

TROUBLESHOOTING

If you experience issues with your Easytry123 YD047 remote control, try the following troubleshooting steps:

- **Remote Not Responding:**

- Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with new AAA batteries if necessary.
- Ensure there is a clear line of sight between the remote control and the television's infrared (IR) receiver. Obstructions can block the signal.
- Verify that the remote is pointed directly at the television.

- **Certain Buttons Not Working:**

- As a replacement remote, some functions may not be fully compatible with all TV models. Refer to the