

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Owala](#) /
- › [Owala FreeSip Water Bottle User Manual](#)

### Owala C03771

# Owala FreeSip Insulated Stainless Steel Water Bottle User Manual

Model: C03771 | Brand: Owala

## INTRODUCTION

---

Welcome to the user manual for your Owala FreeSip Insulated Stainless Steel Water Bottle. This bottle is designed to provide convenient hydration with its unique FreeSip spout, allowing for versatile drinking options. Its double-wall insulation ensures your beverages remain cold for extended periods. Please read this manual carefully to ensure proper use and maintenance of your product.


## PRODUCT OVERVIEW

---





The Owala FreeSip Insulated Stainless Steel Water Bottle in Shy Marshmallow, 24 Oz size.

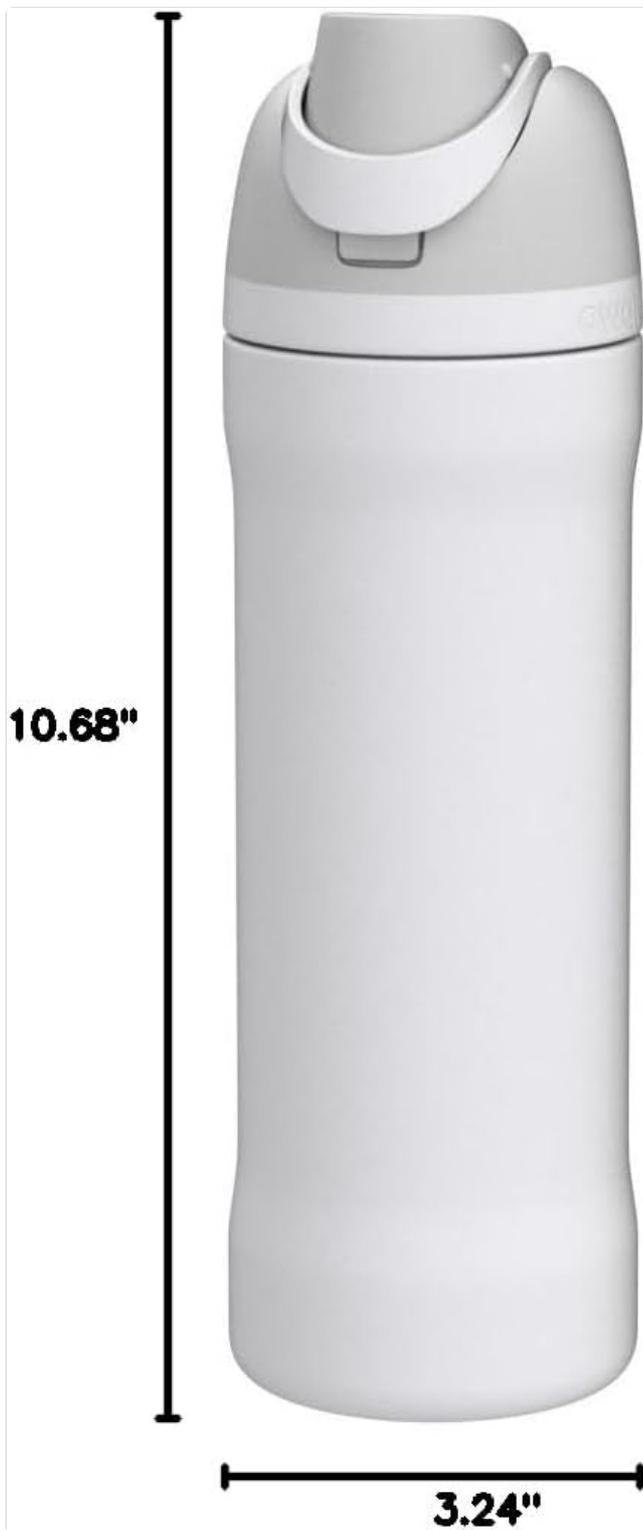

Product dimensions: 3.24 inches width by 10.68 inches height.

**Key Features:**

- **FreeSip Spout:** Patented design allows for two ways of drinking: sipping upright through the built-in straw or tilting back to swig from the wide-mouth opening.



The FreeSip spout offers both straw sipping and wide-mouth swigging options.

- **Insulated Stainless Steel:** Double-wall insulation keeps drinks cold for up to 24 hours.

# FreeSip<sup>®</sup> Features



The bottle maintains cold temperatures for up to 24 hours and features a convenient carry loop.

- **Locking Push-Button Lid:** Protective lid keeps the spout clean and opens with a simple push. The carry loop also functions as a lock.

# FreeSip® Features



The lid is leak-proof and features a push-button opening mechanism.

- **BPA-Free Materials:** Constructed from BPA, lead, and phthalate-free materials for safe use.
- **Cup Holder Friendly:** Designed with a base that fits most standard cup holders.
- **Wide Opening:** Facilitates easy cleaning and adding ice cubes.

## Available Sizes:

The FreeSip bottle is available in 24-Ounce, 32-Ounce, and 40-Ounce capacities. This manual specifically covers the 24-Ounce model.

# FreeSip® Sizes



24oz

32oz

40oz

The Owala FreeSip bottle is available in various sizes to suit different hydration needs.

## SETUP

1. **Initial Cleaning:** Before first use, hand wash the cup with warm, soapy water. The lid is dishwasher safe (top rack recommended). Ensure all components are thoroughly rinsed.
2. **Assemble:** Reassemble the straw and lid components. Ensure the straw is securely attached to the lid.
3. **Fill:** Fill the bottle with your desired cold beverage. Do not use with hot liquids.

## OPERATING INSTRUCTIONS

### Using the FreeSip Spout:

- **Sip:** For upright sipping, simply use the built-in straw.
- **Swig:** For a wider flow, tilt the bottle back and drink directly from the spout opening.

### Opening and Locking the Lid:

- **To Open:** Press the push-button located on the front of the lid. The spout will pop open.
- **To Close:** Push the spout back down until it clicks securely into place.
- **To Lock:** Slide the small grey tab on the carry loop downwards to engage the lock, preventing accidental opening.



The lid is leak-proof when the locking mechanism is engaged.

- **To Unlock:** Slide the small grey tab on the carry loop upwards.

**Important Note:** This bottle is designed for cold liquids only. Do not use with hot liquids as this can create pressure and cause the lid to open unexpectedly or liquid to spray out.

## MAINTENANCE AND CLEANING

- **Cup Cleaning:** The stainless steel cup should be hand washed with warm, soapy water. Use a bottle brush for thorough cleaning.
- **Lid Cleaning:** The lid is dishwasher safe (top rack only). For best results and to prevent mold or odor buildup, disassemble the lid components, including removing the silicone gasket and straw, and wash them separately.
- **Straw Cleaning:** Use a small straw brush to clean the inside of the straw.
- **Drying:** Allow all parts to air dry completely before reassembling and storing to prevent odors.

- **Storage:** Store the bottle with the lid open to allow for air circulation.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Bottle leaks when closed.	Lid not properly closed or locked; silicone gasket misplaced or damaged.	Ensure the spout is clicked shut and the lock tab is engaged. Check that the silicone gasket inside the lid is correctly seated and free from damage.
Difficulty sipping through the straw.	Straw clogged or not properly inserted; air pressure buildup.	Ensure the straw is fully inserted and clean. If at high altitude, briefly open the lid to release pressure, then close.
Water does not stay cold.	Lid not sealed properly; bottle damaged.	Verify the lid is securely closed. Inspect the bottle for dents or damage that could compromise insulation.
Unpleasant odor from bottle.	Improper cleaning or drying.	Thoroughly clean all components, especially the silicone parts and straw. Ensure all parts are completely dry before reassembly and storage.

## SPECIFICATIONS

Attribute	Detail
Brand	Owala
Model Name	FreeSip Insulated Stainless Steel Water Bottle
Model Number	C03771
Capacity	24 Fluid Ounces
Color	Shy Marshmallow
Material	Stainless Steel (BPA, Lead, Phthalate-Free)
Product Dimensions	3.24"W x 10.68"H
Product Care Instructions	Lid: Dishwasher Safe (Top Rack); Cup: Hand Wash
Recommended Uses	Water (Cold Liquids Only)
Item Weight	1 Ounces
UPC	847280062300

## WARRANTY AND SUPPORT

The Owala FreeSip Insulated Stainless Steel Water Bottle comes with a manufacturer's limited lifetime warranty. For detailed information regarding warranty claims or product support, please refer to the official Owala website or contact their customer service.

You can also find additional resources, including a User Guide (PDF), by visiting the [official product documentation link](#).

