

[Manuals.plus](#) /

› [Owala](#) /

› Owala FreeSip Insulated Stainless Steel Water Bottle with Straw, BPA-Free Sports Water Bottle, Great for Travel, 32 Oz, Shy Marshmallow Shy Marshmallow 32 Ounces User Manual

Owala C03777

Owala FreeSip Insulated Stainless Steel Water Bottle User Manual

Model: C03777

INTRODUCTION

The Owala FreeSip Insulated Stainless-Steel Water Bottle with Locking Push-Button Lid is designed for convenient hydration on the go. It features a unique FreeSip spout allowing for two distinct drinking methods: sipping through the built-in straw or tilting back to swig from the wide-mouth opening. This durable, BPA-free bottle keeps drinks cold for extended periods, making it ideal for various activities.

KEY FEATURES

- **Dual-Use FreeSip Spout:** Patented design allows for sipping upright through the integrated straw or tilting back to swig from the wide-mouth opening.
- **Locking Push-Button Lid:** Ensures the spout remains clean and prevents accidental spills. The convenient carry loop also functions as a lock.
- **Double-Wall Insulation:** Keeps beverages cold for up to 24 hours, providing refreshing drinks throughout the day.
- **Durable Construction:** Made from insulated stainless steel, designed for longevity.
- **Easy to Clean:** Features a wide opening for simple cleaning and adding ice. The lid is dishwasher safe, while the cup should be hand washed.
- **BPA and Phthalate-Free:** Ensures safe drinking.

FreeSip[®] Spout



Sip

Sip upright through the built-in, removable straw.



Swig

Tilt back to swig through the wide mouth spout.

Image: Detailed view of the FreeSip spout, highlighting the straw for sipping and the wide opening for swigging.



① **Push-Button
Opening**

② **Leak Proof**

Image: The push-button opening mechanism and leak-proof feature of the Owala FreeSip lid.

FreeSip[®] Features



Image: Visual representation of the bottle's ability to keep contents cold for 24 hours and its integrated carry loop.

INITIAL SETUP

1. **Unpack:** Carefully remove the Owala FreeSip water bottle from its packaging.
2. **Initial Cleaning:** Before first use, wash the lid thoroughly in a dishwasher. Hand wash the stainless steel cup with warm, soapy water. Rinse all components thoroughly.
3. **Assemble:** Ensure the straw is properly inserted into the lid and the lid is securely fastened onto the bottle.

OPERATION

Filling the Bottle

- Twist the lid counter-clockwise to remove it from the bottle.
- Fill the bottle with your desired cold beverage. Do not use with hot liquids.
- For best insulation, add ice cubes through the wide opening.

- Securely twist the lid back onto the bottle until it is tight.

Using the FreeSip Spout

1. **Unlock the Lid:** If the carry loop is engaged as a lock, push it down to release the lid.
2. **Open the Spout:** Press the push-button on the front of the lid to flip open the spout cover.
3. **Sip (with straw):** For upright drinking, simply sip through the integrated straw.
4. **Swig (wide mouth):** For a larger gulp, tilt the bottle back and drink directly from the wide-mouth opening.
5. **Close and Lock:** Push the spout cover down until it clicks securely into place. For added security, pull the carry loop up and over the push-button to lock the lid.

FreeSip[®] Sizes



24oz

32oz

40oz

Image: The bottle's lid with the carry loop in the locked position, demonstrating its leak-proof capability.

CARE AND MAINTENANCE

- **Lid Cleaning:** The lid is dishwasher safe. Place it on the top rack of your dishwasher for cleaning.

- **Cup Cleaning:** The stainless steel cup should be hand washed only. Use warm, soapy water and a bottle brush to clean the interior. Rinse thoroughly.
- **Straw Cleaning:** Remove the straw from the lid and clean it with a straw brush.
- **Drying:** Allow all components to air dry completely before reassembling or storing to prevent odor and mildew.
- **Do Not Use with Hot Liquids:** This bottle is designed for cold beverages only. Using it with hot liquids may cause pressure buildup and potential injury.
- **Avoid Freezing:** Do not place the bottle in the freezer, as this can damage the insulation and bottle integrity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bottle is leaking.	Lid not properly secured or spout not fully closed/locked.	Ensure the lid is twisted on tightly. Press the spout cover down firmly until it clicks. Engage the carry loop lock for extra security.
Difficulty sipping through the straw.	Straw may be clogged or not fully inserted.	Remove and clean the straw thoroughly. Ensure it is fully inserted into the lid's connection point.
Drinks not staying cold.	Lid not sealed, or bottle used with hot liquids.	Verify the lid is tightly sealed. This bottle is designed for cold liquids only. Ensure the bottle has not been damaged, compromising its insulation.

SPECIFICATIONS

Attribute	Detail
Brand	Owala
Model Name	FreeSip Insulated Stainless Steel Water Bottle
Model Number	C03777
Capacity	32 Fluid Ounces
Color	Shy Marshmallow
Material	Stainless Steel (BPA and Phthalate-Free)
Product Dimensions	3.42"W x 10.63"H
Item Weight	15.2 Ounces
Care Instructions	Lid: Dishwasher Safe; Cup: Hand Wash Only
Special Features	Double Wall, Leak Proof, Straw
UPC	847280062362

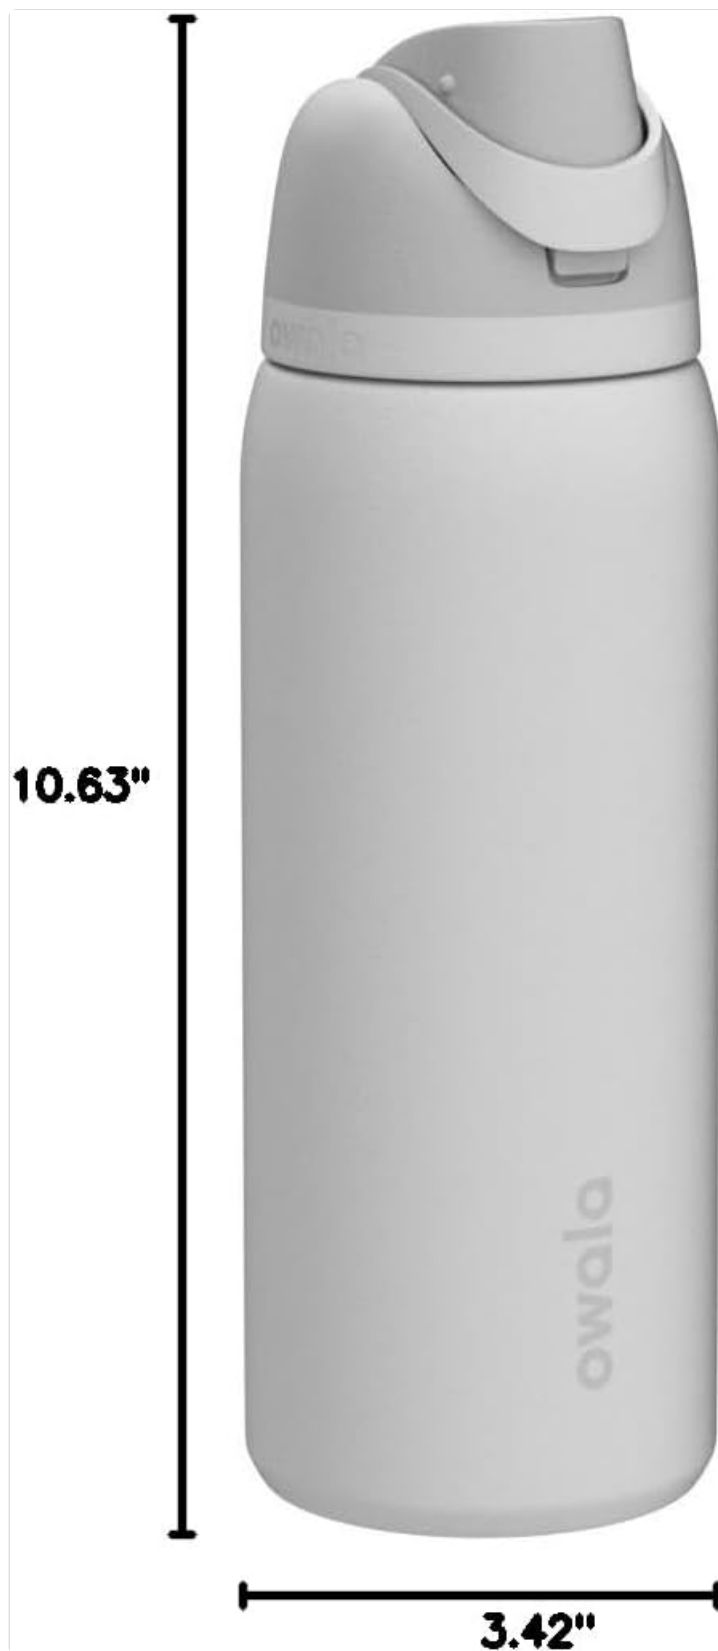


Image: Dimensions of the Owala FreeSip Insulated Stainless Steel Water Bottle.

Leak Proof when locked



Image: Available sizes for the FreeSip bottle: 24oz, 32oz, and 40oz.

WARRANTY INFORMATION

The Owala FreeSip Insulated Stainless Steel Water Bottle comes with a manufacturer's limited lifetime warranty. Please refer to the official Owala website or contact customer support for full details regarding warranty coverage and claims.

CUSTOMER SUPPORT

For further assistance, product inquiries, or to explore other Owala products, please visit the official Owala store:

[Visit the Owala Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question