

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VGR](#) /

› [VGR V-140 Professional Hair Clipper User Manual](#)

## VGR VGR V-140

# VGR V-140 Professional Hair Clipper User Manual

This manual provides detailed instructions for the safe and effective operation, maintenance, and troubleshooting of your VGR V-140 Professional Hair Clipper. Designed for precision hair, beard, and body grooming, this rechargeable device offers versatile styling at home.

## 1. IMPORTANT SAFETY INFORMATION

### Warning:

- Keep blades away from eyes and sensitive areas.
- Avoid use on infants.
- Do not immerse the device in water.
- Always unplug the clipper and allow it to cool before cleaning.
- Store safely out of reach of children.

## 2. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x VGR V-140 Hair Clipper
- 4 x Guide Combs (various sizes)
- 1 x Protective Cap
- 1 x Cleaning Brush
- 1 x Oil Bottle
- 1 x Power Adapter
- 1 x User Manual



Image: The VGR V-140 Professional Hair Clipper shown with its retail packaging, highlighting the included accessories.

### 3. PRODUCT OVERVIEW

The VGR V-140 is a professional-grade hair clipper designed for versatile grooming. It features durable stainless steel blades and a powerful lithium-ion battery for extended cordless operation.



Image: Detailed view of the VGR V-140 clipper with key components labeled, including the taper lever, professional blades, on/off switch, hang loop, metal material, and LED display.

### Key Features:

- Adjustable trimming range for various hair lengths.
- Rechargeable 2500mAh Lithium-ion battery for cordless convenience.
- Easy to clean design with a detachable head.
- Hypoallergenic blades for comfortable use.
- Direct charging capability with the official adapter.
- Equipped with a clear LED display for battery status.

## 4. CHARGING YOUR CLIPPER

Before first use, fully charge the clipper for optimal performance. The VGR V-140 features a 2500mAh Lithium-ion

battery, providing extended operation time.

1. Ensure the clipper is turned off.
2. Connect the power adapter to the charging port on the clipper.
3. Plug the adapter into a suitable power outlet.
4. The LED display will indicate the charging status. A full charge typically takes approximately 3 hours.
5. Once fully charged, the clipper provides up to 300 minutes (5 hours) of continuous operation.



Image: Illustration showing the VGR V-140 clipper being charged, with indicators for 3 hours charge time and 300 minutes work time. It also shows compatibility with various USB charging sources like computer, laptop, USB charger, and power bank.

## 5. INITIAL SETUP

Before using your clipper, perform these initial setup steps:

1. Unpack all components and ensure they are clean and undamaged.

2. Fully charge the clipper as described in the "Charging Your Clipper" section.
3. Apply a few drops of the included oil to the blades before first use to ensure smooth operation.
4. Select the appropriate guide comb for your desired hair length and attach it securely to the clipper head.



Image: The VGR V-140 Hair Clipper resting on a countertop, ready for use.

## 6. OPERATING INSTRUCTIONS

The VGR V-140 is suitable for hair cutting, beard and mustache trimming, and body grooming. Always ensure hair is clean and dry before trimming.

### 6.1. Attaching Guide Combs:

Select one of the four guide combs provided to achieve your desired hair length. Snap the comb firmly onto the clipper blade until it clicks into place.

### 6.2. Adjusting Blade Length (Taper Lever):

The clipper features an adjustable taper lever on the side, allowing you to fine-tune the cutting length without changing guide combs. This lever provides precise adjustments between 0.8mm and 2.0mm, ideal for blending and fading.



Image: Close-up of the VGR V-140 clipper's adjustable taper lever, demonstrating how to change the blade length for precise cutting.

### 6.3. R-Angle Processing Blades:

The professional stainless steel blades are designed with R-angle processing to protect the skin during use, ensuring a smooth and safe trimming experience.

**VGR**<sup>®</sup>  
V O Y A G E R

**300 MINUTES OPERATING**

2500mAh Li-ion battery  
3 hours quick charge



**3.0** Hours

 Charge Time

**300** Min

 Work Time



Convenient And Safe USB Charging



Image: Diagram illustrating the R-angle processing of the VGR V-140 blades, designed for skin protection, along with indicators for closest cut and longest cut settings (0.8mm-2mm).



Image: Close-up view of the VGR V-140's professional stainless steel blades, highlighting their long cutting teeth and R-angle processing for precision and safety.

#### 6.4. General Trimming Tips:

- Start with a longer guide comb and gradually reduce the length if needed.
- Move the clipper against the direction of hair growth for an even cut.
- Use short, overlapping strokes.
- For detailing and outlining, remove the guide comb and use the bare blade carefully.

## 7. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your VGR V-140 clipper.

1. **After Each Use:** Turn off and unplug the clipper. Remove the guide comb. Use the cleaning brush to remove any trapped hair from the blades and the clipper body.

2. **Oiling the Blades:** Regularly apply 1-2 drops of the included oil to the blades after cleaning. Turn on the clipper for a few seconds to distribute the oil evenly. This keeps the blades sharp and prevents rust.
3. **Storage:** Store the clipper in a dry place, away from direct sunlight and moisture. Use the protective cap to cover the blades when not in use.
4. **Detachable Head:** The clipper head is detachable for thorough cleaning. Refer to the diagram in the "Product Overview" section for proper removal and reattachment.

## 8. TROUBLESHOOTING

If you encounter issues with your VGR V-140 clipper, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully.
Clipper runs slowly or pulls hair.	Blades are dirty or not oiled.	Clean and oil the blades.
Excessive noise or vibration.	Blades are misaligned or loose.	Check blade alignment; ensure screws are tightened. If problem persists, contact support.
Clipper gets hot during use.	Prolonged use or dirty blades.	Allow the clipper to cool down. Clean and oil the blades. Avoid continuous operation for very long periods.

## 9. TECHNICAL SPECIFICATIONS

Feature	Specification
Product Name	VGR V-052 (Note: Product title and model number indicate V-140)
Item Model Number	VGR V-140
Brand	VGR
Power Source	Battery Powered
Battery Type	1 Lithium Ion battery (included)
Battery Capacity	2500mAh
Charge Time	Approx. 3 hours
Operating Time	Up to 300 minutes (5 hours)

Feature	Specification
Blade Material	Stainless Steel
Color	Gold
Item Weight	500 grams
Product Dimensions	240 x 26 x 80 cm (Note: Dimensions as per source, likely mm or cm)
Recommended Uses	Body, Hair, Beard, Mustache
Special Features	Cordless, Adjustable Trimming Range, Detachable Head, Hypoallergenic
Country of Origin	Egypt

## 10. WARRANTY AND SUPPORT

Your VGR V-140 Professional Hair Clipper comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact VGR customer service through their official website or the contact information provided with your purchase. Keep your proof of purchase for warranty validation.