

Manuals.plus /

- › SOGO /
- › SOGO Deluxe Toaster SS-5390 Instruction Manual

SOGO SS-5390

SOGO Deluxe Toaster SS-5390 Instruction Manual

Model: SS-5390

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the SOGO Deluxe Toaster SS-5390. Keep this manual for future reference.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted into a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when the toaster is plugged in.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.

2. PRODUCT OVERVIEW

The SOGO Deluxe Toaster SS-5390 is designed for efficient and consistent toasting. It features a long slot, multiple

browning settings, and convenient functions for defrosting and reheating.



Figure 2.1: Front view of the SOGO Deluxe Toaster SS-5390, showcasing its sleek stainless steel design and long toasting slot.

Components:

- **Toasting Slot:** Long slot designed to accommodate various bread sizes.
- **Browning Control Dial:** Adjusts toast shade from 1 (lightest) to 7 (darkest).
- **Control Buttons:** Reheat, Defrost, and Cancel functions with LED indicators.
- **Crumb Tray:** Removable tray for easy cleaning of crumbs.
- **Lever:** Lowers and raises bread into the toasting slot.
- **Cord Storage:** Located at the bottom for tidy storage.
- **Anti-slip Feet:** Ensures stability during use.



Regulador del nivel de tueste

Base con ventosas para más seguridad

Modo descongelar, cancelar y recalentar

Figure 2.2: Close-up of the control panel, showing the browning level dial (1-7) and the Reheat, Defrost, and Cancel buttons with their respective LED indicators.



Figure 2.3: Image illustrating the removable crumb tray, which slides out from the side for easy cleaning.

3. SETUP

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Retain packaging for storage or return if necessary.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as

curtains or walls. Ensure adequate ventilation around the toaster.

3. **First Use:** Before first use, operate the toaster without bread on the highest setting (7) a few times to burn off any manufacturing residues. This may produce a slight odor and smoke, which is normal. Ensure the area is well-ventilated.
4. **Power Connection:** Plug the power cord into a standard 240V AC electrical outlet.

4. OPERATING INSTRUCTIONS

1. **Insert Bread:** Place one or two slices of bread into the long toasting slot.
2. **Select Browning Level:** Turn the browning control dial to your desired setting, from 1 (lightest) to 7 (darkest). Start with a medium setting (e.g., 3 or 4) and adjust according to preference.
3. **Start Toasting:** Press the lever down until it locks into place. The LED indicator for the Cancel button will illuminate, and the toasting cycle will begin.
4. **Automatic Pop-up:** Once the selected browning level is reached, the toast will automatically pop up, and the toaster will shut off.
5. **Remove Toast:** Carefully remove the toast from the slot. Be cautious as the toast and surrounding metal surfaces will be hot.

5. SPECIAL FUNCTIONS

The SOGO Deluxe Toaster SS-5390 includes three special functions for enhanced versatility:

- **Defrost Function:**

To toast frozen bread, insert the bread and press the lever down. Then, press the **DEFROST** button. The LED indicator for Defrost will light up. This function adds extra time to the toasting cycle to properly defrost and toast frozen items.

- **Reheat Function:**

To warm up already toasted bread without further browning, insert the bread and press the lever down. Then, press the **REHEAT** button. The LED indicator for Reheat will light up. This cycle is shorter and uses less heat.

- **Cancel Function:**

To stop the toasting cycle at any time, press the **CANCEL** button. The lever will immediately pop up, and the toaster will turn off.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** Pull out the removable crumb tray from the bottom of the toaster. Dispose of crumbs and wipe the tray clean with a damp cloth. Ensure the tray is completely dry before reinserting it.
3. **Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish.
4. **Interior:** Never insert utensils or fingers into the toasting slots. If food becomes lodged, unplug the toaster and carefully turn it upside down to shake out the food.
5. **Storage:** When not in use, the power cord can be wrapped around the cord storage area under the base of the toaster. Store the toaster in a clean, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; lever not fully depressed.	Ensure toaster is plugged into a working outlet. Push the lever down until it locks.
Toast is too light or too dark.	Browning control dial set incorrectly.	Adjust the browning control dial to a higher number for darker toast or a lower number for lighter toast.
Smoke coming from toaster.	Food lodged in slots; crumbs accumulated; first use residue.	Press CANCEL, unplug, and allow to cool. Remove any lodged food or clean crumb tray. First use smoke is normal.
Lever does not stay down.	Toaster not plugged in; internal mechanism issue.	Ensure the toaster is plugged into a live electrical outlet. If the problem persists, contact customer support.

8. SPECIFICATIONS

Model Number	SS-5390
Power	900 Watts
Voltage	240 Volts
Number of Slots	1 (Long Slot)
Browning Settings	7 levels
Functions	Defrost, Reheat, Cancel
Material	Stainless Steel
Dimensions (L x W x H)	30 x 11 x 18 cm (approximate)
Weight	1.35 kg

9. WARRANTY AND SUPPORT

SOGO products are manufactured to high-quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or contact SOGO customer service through their official website. Please have your model number (SS-5390) and proof of purchase ready when contacting support.