

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Bosch](#) /
- > [Bosch Move Max BHN20L Cordless Handheld Vacuum Cleaner User Manual](#)

## Bosch BHN20L

# Bosch Move Max BHN20L Cordless Handheld Vacuum Cleaner User Manual

Model: BHN20L

## INTRODUCTION

This user manual provides important information for the safe and efficient operation, maintenance, and troubleshooting of your Bosch Move Max BHN20L Cordless Handheld Vacuum Cleaner. Please read this manual thoroughly before using the appliance and keep it for future reference.



Image: The Bosch Move Max BHN20L Cordless Handheld Vacuum Cleaner, showcasing its compact and ergonomic design.

## SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury and damage to the appliance:

- Do not immerse the appliance in water or other liquids.
- Do not vacuum flammable or explosive substances, hot ashes, or sharp objects.
- Ensure the charging adapter is compatible with your power supply.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the vacuum cleaner without the dust container and filter properly installed.
- This appliance is for household use only.

## PRODUCT OVERVIEW

The Bosch Move Max BHN20L is a lightweight and powerful cordless handheld vacuum cleaner designed for quick and convenient cleaning tasks. Key features include:

- **PowerBrush:** For efficient dust absorption.
- **Cyclonic Airflow System:** Ensures high suction power and clean air output.
- **Lithium-Ion Battery:** Provides long runtime (up to 45 minutes).
- **Washable Filter:** Easy to clean and maintain.
- **Easy-to-Empty Dust Container:** Simplifies disposal of collected debris.



Image: Illustration of the Cyclonic Airflow System within the vacuum's dust container, showing air movement for efficient dust separation.



Image: Close-up view of the Lithium-Ion battery cells, highlighting the power source for the cordless operation.

## SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all included items (vacuum unit, PowerBrush, charging adapter) are present.
2. **Initial Charging:** Before first use, fully charge the vacuum cleaner. Connect the charging adapter to the vacuum's charging port and plug it into a suitable power outlet. The charging indicator light will show the charging status.
3. **Assembling the PowerBrush:** If not pre-installed, attach the PowerBrush nozzle to the vacuum's suction inlet until it clicks securely into place.

## OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the power button located on the handle to turn the vacuum cleaner on or off.
2. **Vacuumping:** Guide the nozzle over the surface to be cleaned. The PowerBrush will agitate debris for more effective suction.
3. **Recommended Uses:** The Bosch Move Max BHN20L is ideal for quick clean-ups on various surfaces, including furniture, car interiors, and small floor areas.



Image: A person using the Bosch handheld vacuum to clean crumbs from a wooden table, demonstrating its ease of use for quick clean-ups.



Image: The Bosch handheld vacuum being used to clean a crevice in a sofa, illustrating its versatility for different surfaces and tight spaces.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

### Emptying the Dust Container

1. Ensure the vacuum is turned off.
2. Locate the dust container release button/latch.
3. Detach the dust container from the main unit.
4. Empty the contents into a waste bin.
5. Reattach the dust container securely.

### Cleaning the Filter

The filter should be cleaned regularly, especially when suction power decreases.

1. Remove the dust container as described above.
2. Carefully remove the filter assembly from the dust container.
3. Tap the filter gently over a waste bin to remove loose dust.
4. For a more thorough cleaning, rinse the filter under running water. Ensure it is completely dry before reinserting.

5. Reinsert the dry filter into the dust container and reattach the container to the vacuum.

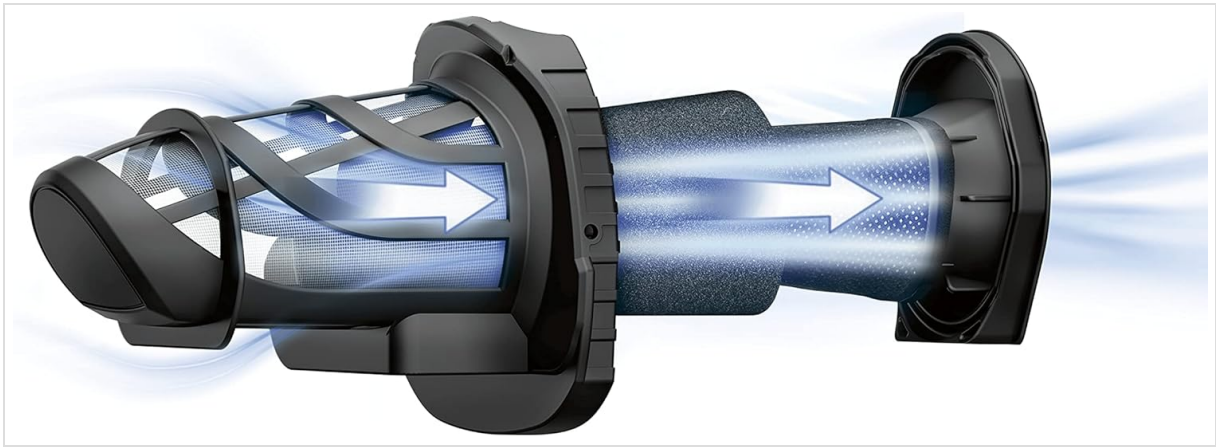


Image: Exploded view of the Bosch handheld vacuum's filter system, showing the washable filter components and airflow path.

### Cleaning the PowerBrush

Periodically check the PowerBrush for tangled hair or debris and remove them to maintain effective cleaning.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is discharged.	Charge the battery fully.
Reduced suction power.	Dust container is full.	Empty the dust container.
Reduced suction power.	Filter is clogged.	Clean or replace the filter.
Reduced suction power.	Nozzle or hose is blocked.	Check for and remove any blockages.
PowerBrush not rotating.	Brush roll is tangled with hair/debris.	Clean the brush roll.

## SPECIFICATIONS

**Brand:** Bosch

**Model:** BHN20L

**Form Factor:** Handheld

**Color:** Bright Blue

**Is Cordless?:** Yes

**Battery Type:** Lithium Ion (included)

**Runtime:** Up to 45 minutes

**Capacity:** 0.4 Liters

**Filter Type:** Cartridge (Washable)

**Included Components:** PowerBrush, Charging Adapter

**Noise Level:** 79 dB

**Product Dimensions:** 14.96 x 4.33 x 5.31 inches

**Item Weight:** 2.43 pounds

**Recommended Uses:** Car, Flooring, Furniture

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Bosch Home Appliances website. Keep your proof of purchase for warranty claims.

**Online Support:** [www.bosch-home.com/us/service](http://www.bosch-home.com/us/service)

**Contact Information:** Please refer to your regional Bosch website for specific contact details.

---