

AEG VX82-1-ÖKO

AEG VX82-1-ÖKO Bagged Vacuum Cleaner Instruction Manual

Model: VX82-1-ÖKO

1. INTRODUCTION

Thank you for choosing the AEG VX82-1-ÖKO Bagged Vacuum Cleaner. This appliance is designed for efficient and quiet cleaning across various floor types. Please read this manual thoroughly before using the vacuum cleaner to ensure safe and optimal operation. Keep this manual for future reference.

Key features of your AEG VX82-1-ÖKO vacuum cleaner include:

- **Automatic Suction Regulation:** SmartMode function detects floor type and automatically adjusts suction power.
- **Quiet Operation:** PureSound system ensures ultra-quiet cleaning on all floor types (57 dBA).
- **Versatile Cleaning:** OneGo Power Clean brush effectively removes dirt particles from all floor types.
- **HEPA Filtration System:** Captures fine dust and allergens for optimal air quality.
- **Durable Design:** Constructed with 75% recycled plastic, combining durability with optimal performance.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not leave the vacuum cleaner unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.

3. PACKAGE CONTENTS

Verify that all items are present in the packaging:

- AEG VX82-1-ÖKO Vacuum Cleaner Unit
- Hose
- Telescopic Tube
- OneGo Power Clean Nozzle
- Parketto Pro Nozzle
- Aeropro 3-in-1 Accessory (furniture brush, crevice tool, small brush)
- S-Bag Classic Long Performance Dust Bags (x2)
- Instruction Manual

ACCESSOIRES INCLUS AVEC CE MODÈLE



PARKETTO PRO

Pas de roues et des poils doux, pour prendre soin même des surfaces les plus sensibles



ACCESSOIRE 3-IN-1

Pour diverses surfaces et les endroits étroits, utilisez l'embout multi-accessoires, facile à moduler



x 2

S-BAG® CLASSIC LONG PERFORMANCE

Classic Long Performance avec nouveau système de fermeture hygiénique assurant toute absence de contact avec la poussière

EMBOUT ONEGO POWER CLEAN

Aspiration supérieure de toutes les particules, petites ou grosses, quel que soit le type de sol



Figure 3.1: Included Accessories. This image displays the AEG VX82-1-ÖKO vacuum cleaner alongside its various attachments, including the Parketto Pro nozzle for sensitive surfaces, a versatile 3-in-1 accessory, S-Bag Classic Long Performance dust bags, and the OneGo Power Clean nozzle for general cleaning.

4. ASSEMBLY AND SETUP

Follow these steps to assemble your vacuum cleaner before first use:

1. **Attach the Hose:** Insert the hose connector firmly into the suction inlet on the main unit until it clicks into place.
2. **Connect the Telescopic Tube:** Attach the handle end of the hose to the telescopic tube. Adjust the tube length to a comfortable height by pressing the release button and sliding.
3. **Attach the Nozzle:** Connect your desired cleaning nozzle (e.g., OneGo Power Clean or Parketto Pro) to the end of the telescopic tube.
4. **Check Dust Bag:** Ensure an S-Bag Classic Long Performance dust bag is correctly installed inside the vacuum cleaner. Refer to Section 6.1 for dust bag replacement instructions.
5. **Power Connection:** Extend the power cord and plug it into a suitable electrical outlet.



Figure 4.1: Assembled Vacuum Cleaner. This image shows the AEG VX82-1-ÖKO vacuum cleaner ready for use, demonstrating the connection of the hose, telescopic tube, and main floor nozzle.

5. OPERATING INSTRUCTIONS

Your AEG VX82-1-ÖKO vacuum cleaner is designed for intuitive operation with advanced features for efficient cleaning.

5.1 Powering On and Off

- To turn on the vacuum cleaner, press the power button located on the main unit.
- To turn off, press the power button again.

5.2 Adjusting Suction Power

The vacuum cleaner offers both manual and automatic suction power adjustment.

- **Manual Adjustment:** Use the rotary knob on the main unit to increase or decrease suction power. Turn towards 'MIN' for lower suction (e.g., delicate fabrics) or 'MAX' for higher suction (e.g., heavily soiled carpets).
- **SmartMode (Automatic Adjustment):** Engage the SmartMode function for automatic suction regulation. The vacuum cleaner will detect the floor type and adjust the power accordingly for optimal cleaning efficiency. Ensure the SmartMode setting is also activated on the OneGo Power Clean nozzle if applicable.



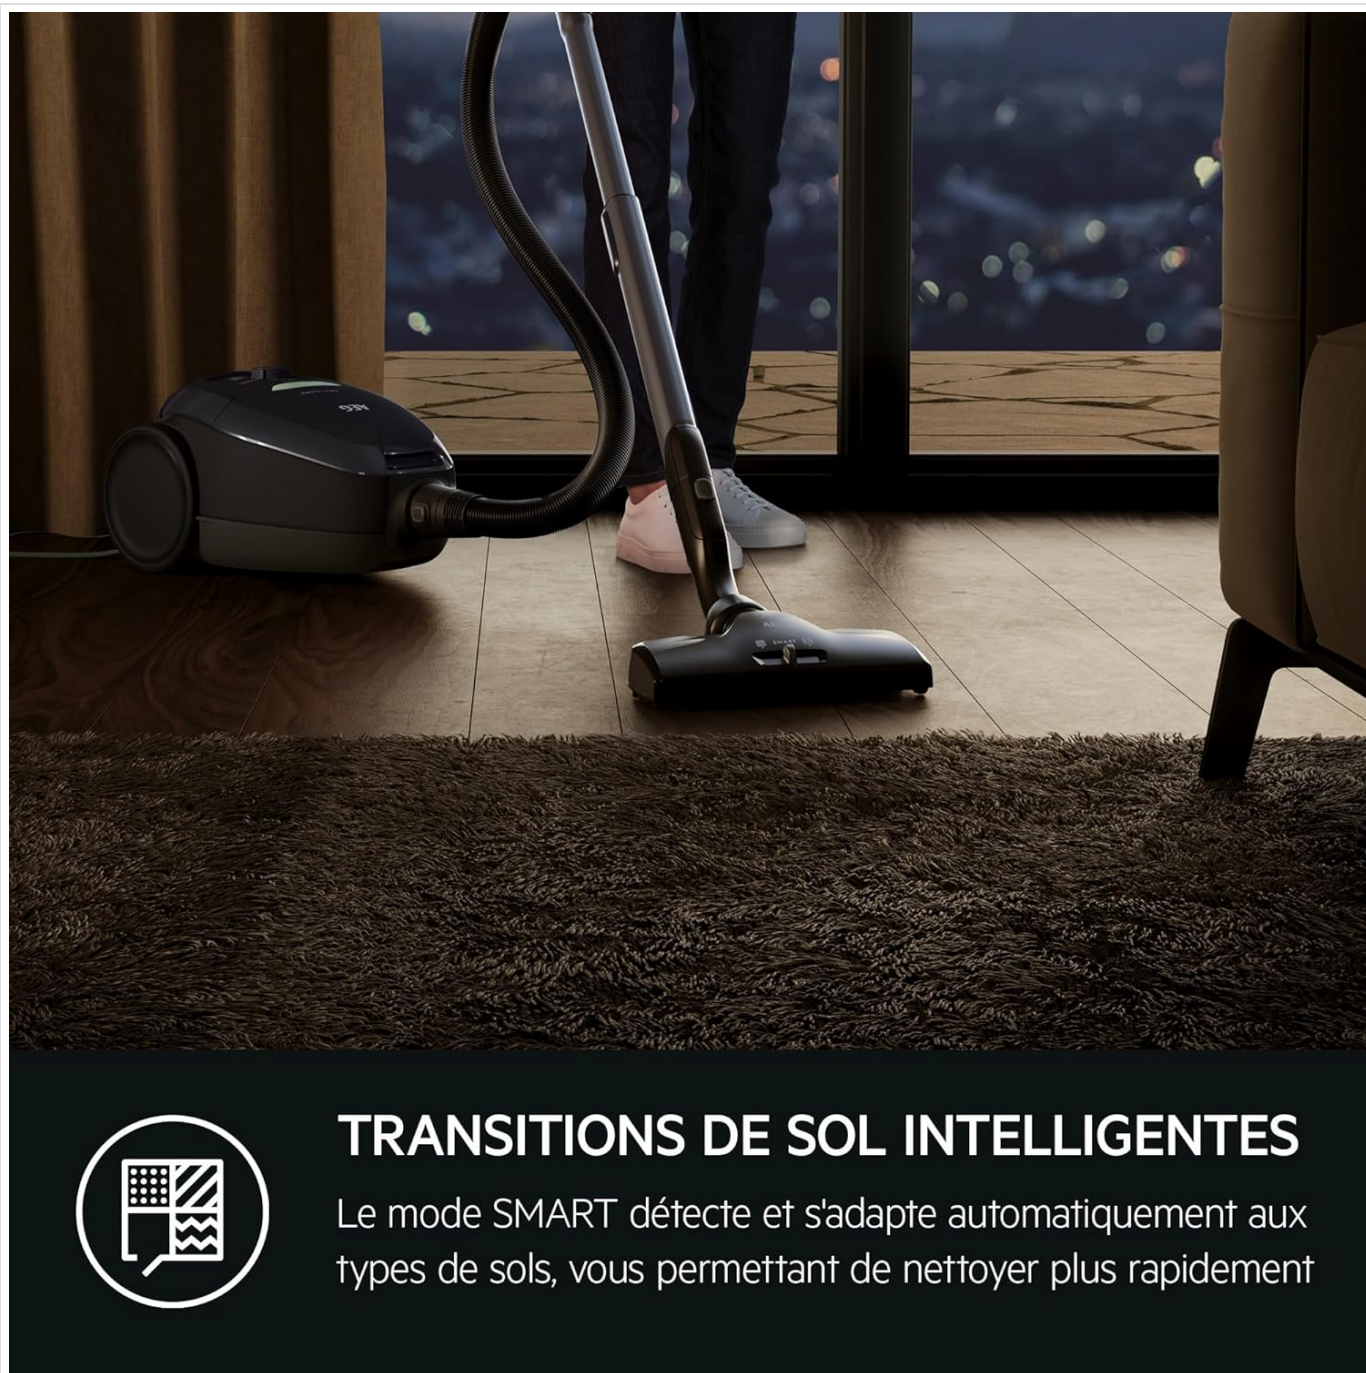
Figure 5.1: Easy Power Adjustment. This image highlights the rotary knob on the vacuum cleaner's main unit, used for continuous power adjustment across different surfaces.



Figure 5.2: SmartMode Intelligent Cleaning. The OneGo Power Clean nozzle is shown on a floor, illustrating the 'SMART' mode switch that enables automatic suction adjustment based on floor type.

5.3 Using Different Nozzles and Accessories

- **OneGo Power Clean Nozzle:** Ideal for general cleaning on both hard floors and carpets. Its design ensures effective particle pick-up.
- **Parketto Pro Nozzle:** Designed for sensitive hard floors, preventing scratches and providing gentle yet effective cleaning.
- **Aeropro 3-in-1 Accessory:** This versatile tool combines a furniture brush, crevice tool, and small brush for cleaning upholstery, tight spaces, and delicate surfaces.



TRANSITIONS DE SOL INTELLIGENTES

Le mode SMART détecte et s'adapte automatiquement aux types de sols, vous permettant de nettoyer plus rapidement

Figure 5.3: Intelligent Floor Transitions. This image shows the vacuum cleaner seamlessly moving from a hard floor to a carpet, illustrating its ability to adapt to different surfaces.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

6.1 Dust Bag Replacement

The vacuum cleaner is equipped with an S-Bag Classic Long Performance dust bag. Replace the dust bag when the 'S-BAG' indicator on the control panel illuminates.

1. Unplug the vacuum cleaner from the power outlet.
2. Open the dust bag compartment cover.
3. Carefully remove the full dust bag. The S-Bag features a hygienic closing system to prevent dust leakage.
4. Insert a new S-Bag Classic Long Performance dust bag, ensuring it is correctly seated in the holder.
5. Close the dust bag compartment cover securely.



Figure 6.1: Bag Replacement Alert. This image shows the vacuum cleaner's control panel with the 'S-BAG' indicator lit, indicating that the dust bag needs to be replaced.



CHANGEMENT DE SAC PLUS FACILE ET HYGIÉNIQUE

Le S-bag® de 3,5L retient hermétiquement la poussière pour permettre un changement de sac plus hygiénique, sans contact avec la poussière

Figure 6.2: Easy and Hygienic Bag Change. This image displays an S-Bag Classic Long Performance dust bag, emphasizing its design for simple and clean replacement without direct contact with dust.

6.2 Filter Maintenance

The HEPA filter system ensures high air quality. Check and clean or replace filters regularly as per the instructions provided with the filter or indicated by the appliance.

- Unplug the vacuum cleaner before accessing filters.
- Locate the HEPA filter compartment (refer to your product diagram for exact location).
- Remove the filter and clean it by tapping it gently over a waste bin or rinsing it under cold running water if it is a washable filter. Allow it to dry completely before reinserting.
- Replace the HEPA filter at least once a year, or more frequently depending on usage.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not start.	Not plugged in; no power at outlet; power button not pressed.	Check power cord connection; check circuit breaker; press power button firmly.
Low suction power.	Dust bag full; filters clogged; hose/nozzle blocked.	Replace dust bag; clean/replace filters; check hose and nozzle for obstructions.
Unusual noise during operation.	Foreign object in nozzle/hose; motor issue.	Turn off and unplug, check for and remove obstructions. If noise persists, contact customer support.
Dust escapes from vacuum cleaner.	Dust bag not installed correctly; filters missing/damaged.	Ensure dust bag is properly seated; check and replace filters if necessary.

If the problem persists after attempting these solutions, please contact AEG customer support.

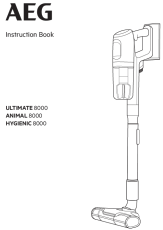

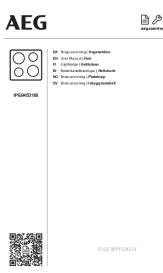



8. SPECIFICATIONS

Feature	Specification
Brand	AEG
Model Number	900258509
Color	Black
Product Dimensions (L x W x H)	44.2 x 30 x 24.6 cm
Item Weight	7.1 Kilograms
Dust Bag Capacity	3.5 Liters
Power	600 Watts
Voltage	230 Volts
Material	75% recycled materials
Noise Level	57 Decibels
Country of Origin	China

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official AEG website. Keep your proof of purchase for any warranty claims.

For further assistance, you may also contact the retailer where the product was purchased.

	<p>AEG ULTIMATE 8000, ANIMAL 8000, HYGIENIC 8000 Cordless Vacuum Cleaner Instruction Manual</p> <p>Comprehensive instruction manual for AEG ULTIMATE 8000, ANIMAL 8000, and HYGIENIC 8000 cordless vacuum cleaners. Covers assembly, operation, maintenance, safety, and accessory information.</p>
	<p>AEG 3000 & 5000 Bagless Cleaner Instruction Book</p> <p>This instruction book provides essential information for operating and maintaining the AEG 3000 and 5000 Bagless Cleaners. Learn about assembly, usage, power settings, and maintenance for optimal performance.</p>
	<p>AEG IPE84531IB Brugsanvisning - Sikkerhed, Installation og Brug</p> <p>Komplet brugsanvisning for AEG IPE84531IB induktionskogeplade. Indeholder vigtige sikkerhedsanvisninger, installationsvejledning og tips til daglig brug.</p>
	<p>AEG NSC8M191DS Fridge Freezer User Manual</p> <p>Comprehensive user manual for the AEG NSC8M191DS Fridge Freezer, covering installation, operation, safety, care, and troubleshooting. Get the most out of your appliance with detailed guides and tips from AEG.</p>
	<p>AEG COMPETENCE E3101-1: Guía de Uso y Manual de Instrucciones</p> <p>Manual completo de instrucciones para el horno AEG COMPETENCE E3101-1. Descubra cómo operar de forma segura, limpiar y mantener su electrodoméstico, además de consejos de cocina.</p>
	<p>AEG RX9 Robot Vacuum Cleaner Instruction Manual</p> <p>Comprehensive instruction manual for the AEG RX9 robot vacuum cleaner, covering setup, operation, safety, maintenance, and troubleshooting. Includes multilingual support.</p>

