

## AEG VX82-1-2ST

# AEG VX82-1-2ST Bagged Vacuum Cleaner User Manual

Model: VX82-1-2ST | Brand: AEG

## 1. INTRODUCTION

Thank you for choosing the AEG VX82-1-2ST Bagged Vacuum Cleaner. This appliance is designed for efficient and quiet cleaning across various floor types. Please read this manual carefully before using the vacuum cleaner to ensure safe and optimal performance. Keep this manual for future reference.

## 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the power supply voltage matches the rating on the appliance.
- Do not leave the vacuum cleaner unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use without dust bag and/or filters in place.

### 3. PACKAGE CONTENTS

The following items are included with your AEG VX82-1-2ST vacuum cleaner:

- 1 x AEG VX82-1-2ST Vacuum Cleaner Unit
- 1 x Hose and Telescopic Tube
- 1 x OneGo Power Clean Floor Nozzle
- 1 x 3-in-1 Multi-function Nozzle (crevice tool, upholstery brush, dusting brush)
- 1 x HEPA Filter (pre-installed)
- 2 x S-Bag® Classic Long Performance Dust Bags (one pre-installed)

#### ACCESOIRES INCLUS AVEC CE MODÈLE



Image 3.1: Overview of the AEG VX82-1-2ST vacuum cleaner and its included accessories.

## 4. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Attaching the Hose:** Insert the hose end into the suction inlet on the main unit until it clicks securely into place.
3. **Assembling the Telescopic Tube:** Connect the telescopic tube to the hose handle. Adjust the length of the telescopic tube by pressing the release button and sliding it to your desired height.
4. **Attaching the Floor Nozzle:** Attach the OneGo Power Clean floor nozzle to the end of the telescopic tube. Ensure it is firmly connected.
5. **Installing Dust Bag:** Verify that an S-Bag® Classic Long Performance dust bag is correctly installed inside the vacuum cleaner. Refer to Section 6.1 for detailed instructions on bag replacement.
6. **Power Connection:** Extend the power cord and plug it into a suitable electrical outlet.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off and Cord Rewind

- To turn the vacuum cleaner on, press the power button (usually marked with a circle and a vertical line).
- To turn it off, press the power button again.
- To rewind the power cord, gently pull the cord slightly, and it will automatically retract into the unit.

### 5.2 SmartMode Technology and Suction Control

The AEG VX82-1-2ST features SmartMode Technology, which automatically detects the floor type and adjusts the suction power for optimal cleaning. You can also manually adjust the suction power.



## RÉGLAGE FACILE DE LA PUISSANCE

Réglage continu de la puissance pour différentes surfaces, avec le bouton rotatif

Image 5.1: Power adjustment dial and SmartMode indicator.

- **Automatic Adjustment (SmartMode):** When activated, the vacuum cleaner will automatically detect whether you are cleaning hard floors or carpets and adjust the suction power accordingly. This ensures efficient cleaning without manual intervention.
- **Manual Adjustment:** Use the rotary dial on the main unit to manually increase or decrease the suction power. Turn the dial towards 'MIN' for delicate surfaces or 'MAX' for intensive cleaning.



## TRANSITIONS DE SOL INTELLIGENTES


Le mode SMART détecte et s'adapte automatiquement aux types de sols, vous permettant de nettoyer plus rapidement

Image 5.2: SmartMode automatically adjusts suction for different floor types.

### 5.3 OneGo Power Clean Brush

The OneGo Power Clean brush is designed for optimal particle pickup on all floor types.

- Use this brush for general cleaning on both hard floors and carpets.
- Ensure the brush is flat against the surface for best results.

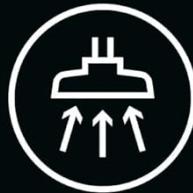

## UN NETTOYAGE PLUS INTELLIGENT

Le mode SMART ajuste automatiquement la puissance d'aspiration pour optimiser les performances sur tous les types de sols

Image 5.3: The OneGo Power Clean brush head.

### 5.4 Using the 3-in-1 Multi-function Nozzle

The included 3-in-1 nozzle combines a crevice tool, upholstery brush, and dusting brush for versatile cleaning.

- Attach the 3-in-1 nozzle to the hose handle or the end of the telescopic tube.
- **Crevice Tool:** Ideal for narrow gaps, corners, and hard-to-reach areas.
- **Upholstery Brush:** Use for cleaning furniture, curtains, and other fabric surfaces.
- **Dusting Brush:** Suitable for delicate surfaces like shelves, blinds, and electronics.

### 5.5 Quiet Operation (PureSound System)

The PureSound System ensures the vacuum operates at a low noise level of 57 dB, providing a quieter cleaning experience.



57  
dB(A)

## LE PLUS SILENCIEUX DE TOUS

Le système PureSound réduit les niveaux sonores jusqu'à 57 dB(A) tout en maintenant les performances

Image 5.4: The vacuum cleaner operating quietly.

### 5.6 Ergonomic Design and Maneuverability

The vacuum cleaner is designed for ease of use and transport.

- A central handle allows for easy lifting and carrying.
- Large, rubber-coated wheels provide smooth movement and protect floors.
- The 12-meter operating radius allows for extensive cleaning without frequent unplugging.



## FACILE À SAISIR ET À TRANSPORTER

La poignée centrale assure un équilibre parfait du poids, permettant de soulever et de transporter l'appareil plus facilement


Image 5.5: Ergonomic handle for easy transport.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

### 6.1 Dust Bag Replacement

The vacuum cleaner uses S-Bag® Classic Long Performance dust bags. Replace the dust bag when the 'S-Bag' indicator light illuminates or when suction power noticeably decreases.

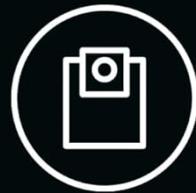


## ALERTE DE REMPLACEMENT DE SAC

Un signal LED vous avertit lorsque le S-bag® est plein et doit être remplacé

Image 6.1: S-Bag replacement alert indicator.

1. **Power Off and Unplug:** Always turn off and unplug the vacuum cleaner before replacing the dust bag.
2. **Open Dust Bag Compartment:** Locate and open the dust bag compartment cover.
3. **Remove Full Dust Bag:** Carefully pull out the full dust bag. The S-Bag® design ensures hygienic sealing, preventing dust from escaping.
4. **Insert New Dust Bag:** Slide a new S-Bag® Classic Long Performance dust bag into the holder, ensuring it is fully seated.
5. **Close Compartment:** Close the dust bag compartment cover until it clicks shut.

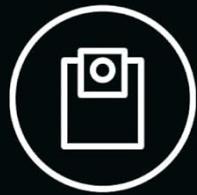

## CHANGEMENT DE SAC PLUS FACILE ET HYGIÉNIQUE

Le S-bag® de 3,5L retient hermétiquement la poussière pour permettre un changement de sac plus hygiénique, sans contact avec la poussière

Image 6.2: S-Bag for easy and hygienic replacement.

### 6.2 Filter Maintenance

The vacuum cleaner is equipped with a HEPA filtration system. Regularly check and clean or replace filters as recommended.

- **Motor Filter:** Check the motor filter (located before the dust bag) every 3-5 dust bag changes. Clean by tapping it over a waste bin or replace if heavily soiled.
- **Exhaust Filter (HEPA):** The HEPA filter is typically located at the rear of the vacuum cleaner. Check it every 5-7 dust bag changes. This filter is usually not washable and should be replaced when visibly dirty or if odors occur.
- Always ensure filters are completely dry before re-installing them.

### 6.3 Cleaning the Nozzles and Accessories

- Regularly check the floor nozzle and other accessories for tangled hair, threads, or blockages.
- Remove any obstructions to maintain optimal suction performance.
- Wipe external surfaces of the vacuum cleaner and accessories with a damp cloth. Do not use abrasive

cleaners.

## 7. TROUBLESHOOTING

If you encounter issues with your AEG VX82-1-2ST, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Vacuum cleaner does not start	Not plugged in; no power at outlet; power button not pressed.	Check power cord connection; test outlet with another appliance; press power button firmly.
Low suction power	Full dust bag; clogged filter; blocked hose/nozzle; incorrect suction setting.	Replace dust bag; clean/replace filters; check hose/nozzle for blockages; adjust suction power to higher setting.
Unusual noise	Blockage in hose/nozzle; foreign object in brush; motor issue.	Check for and remove blockages; inspect brush for foreign objects. If noise persists, contact customer support.
Dust escaping from vacuum	Dust bag not installed correctly or damaged; filter missing or incorrectly installed.	Ensure dust bag is correctly seated and not damaged; check all filters are in place and properly installed.

If the problem persists after attempting these solutions, please contact AEG customer support.

## 8. SPECIFICATIONS

Feature	Specification
Brand	AEG
Model Number	VX82-1-2ST
Color	Space Teal
Product Dimensions (L x W x H)	44.2 x 24.6 x 30 cm
Item Weight	6.93 Kilograms
Capacity	3.5 Litres
Power	600 Watts
Voltage	230 Volts
Noise Level	57 Decibels
Filter Type	HEPA (Fabric)
Power Source	Corded Electric
Special Feature	Bagged, Automatic Suction Regulation
Material	55% Recycled Materials

Feature	Specification
Included Components	3-in-1 Multi-function Nozzle
Country of Origin	China

## 9. WARRANTY AND SUPPORT

Your AEG VX82-1-2ST vacuum cleaner comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or service inquiries, please contact AEG customer support. You can find contact information on the official AEG website or in the documentation provided with your product.

When contacting support, please have your model number (VX82-1-2ST) and purchase date available.

© 2026 AEG. All rights reserved.