

Midea WQP147713F

Midea WQP147713F Integrated Dishwasher User Manual

Model: WQP147713F

1. INTRODUCTION

Thank you for choosing the Midea WQP147713F Integrated Dishwasher. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your appliance. Please read these instructions carefully before using the dishwasher and keep them for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for household use only. Do not attempt to repair or replace any part of your dishwasher unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher, especially when the door is open.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Sharp items should be loaded with points down to prevent injury.

3. PRODUCT OVERVIEW

The Midea WQP147713F is a fully integrated dishwasher designed to blend seamlessly with your kitchen cabinetry. It offers a 14 place setting capacity, making it suitable for medium to large households. The appliance features top push-button controls and multiple wash programs for various cleaning needs.

Fully Integrated Dishwasher

Feel the different taste



Figure 3.1: Midea WQP147713F Integrated Dishwasher in a kitchen setting. This image shows the dishwasher integrated into kitchen cabinetry, highlighting its hidden design.



Figure 3.2: Front panel of the Midea WQP147713F Dishwasher. This image displays the energy efficiency rating (A+++), the number of programs (5), capacity (14 place settings), and sound level (49 dB), along with a description of the Half Load Cleaning option.

4. SETUP AND INSTALLATION

Due to its integrated design, professional installation is highly recommended for the Midea WQP147713F dishwasher. Ensure that the installation area meets the required dimensions and that proper water and electrical connections are available. The appliance operates on 220V and 60Hz.

4.1. Installation Dimensions

Refer to the diagram below for precise installation measurements to ensure a proper fit within your kitchen cabinetry.

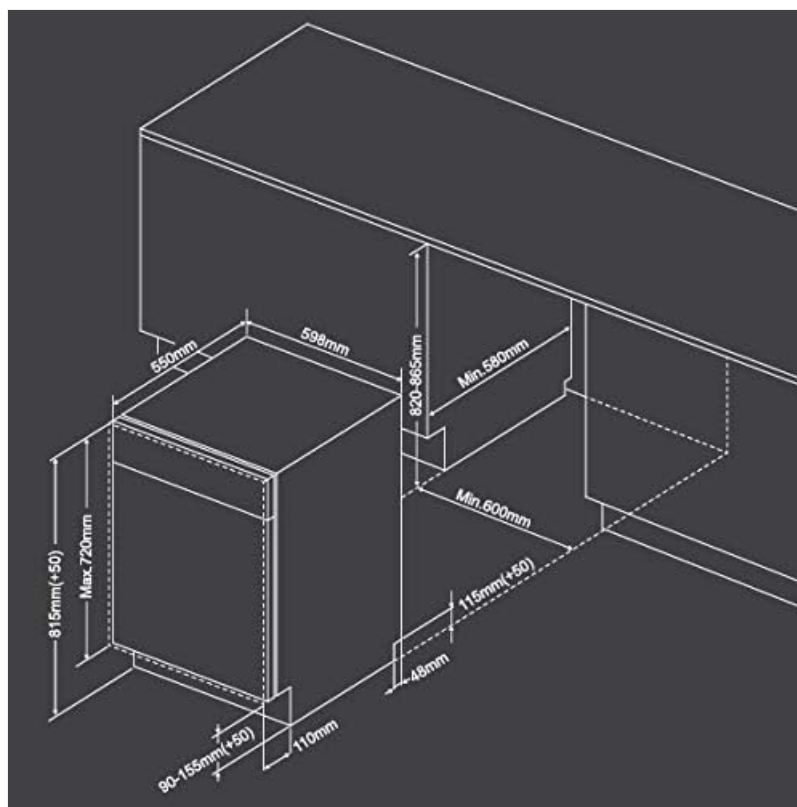


Figure 4.1: Installation dimensions for the Midea WQP147713F Dishwasher. This diagram illustrates the required cabinet space, including depth (650mm), width (598mm), and height (820-865mm), along with kick plate and door panel measurements. The overall product dimensions are approximately 65 cm (Depth) x 89 cm (Width) x 65 cm (Height).

5. OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Midea dishwasher, from loading dishes to selecting wash programs.

5.1. Control Panel

The dishwasher features top push-button controls for program selection and options. LED indicators provide feedback on the cycle status, salt, and rinse aid levels.



Figure 5.1: Top control panel of the Midea WQP147713F Dishwasher. This image shows the various push-buttons for program selection, options, and LED indicators for salt and rinse aid.

5.2. Loading the Dishwasher

Proper loading ensures optimal cleaning performance. Scrape off large food particles before loading. Place larger items in the lower rack and delicate items like glassware in the upper rack. Ensure spray arms can rotate freely.

5.3. Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Check the rinse aid dispenser and refill if the LED indicator signals low levels. Rinse aid helps with drying and prevents water spots.

5.4. Wash Programs

The dishwasher offers 5 wash programs:

- **Intensive:** For heavily soiled dishes, pots, and pans.
- **Normal:** For normally soiled daily dishes.
- **Eco:** Energy-saving program for normally soiled dishes.
- **90 min:** For lightly soiled dishes that need a quick wash.
- **Rapid:** A very quick wash for lightly soiled items without drying.

5.5. Special Options

- **Half Load:** Reduces water and energy consumption when the dishwasher is not fully loaded.
- **Extra Drying:** Provides enhanced drying performance for all wash programs.

5.6. Starting a Wash Cycle

1. Load the dishwasher and add detergent/rinse aid.
2. Close the dishwasher door securely.
3. Select the desired wash program using the control buttons.
4. Press the Start button to begin the cycle.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

6.1. Cleaning Filters

The filter system should be checked and cleaned regularly to prevent blockages and ensure efficient washing. Remove the filters, rinse them under running water, and brush away any food residue. Reassemble correctly.

6.2. Cleaning Spray Arms

Periodically check the spray arm nozzles for blockages. If necessary, remove the spray arms and clean the holes with a thin object like a toothpick.

6.3. Adding Dishwasher Salt

If your water supply is hard, you may need to add dishwasher salt to prevent limescale buildup. Refill the salt dispenser when the LED indicator illuminates.

6.4. Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press start.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, incorrect program.	Reload dishes correctly, clean spray arms and filters, use adequate detergent, select a more intensive program.

Problem	Possible Cause	Solution
Water remains in the tub	Clogged filter, blocked drain hose, pump malfunction.	Clean filters, check drain hose for kinks or blockages. If problem persists, contact service.
Excessive noise	Improper loading, foreign object in pump, appliance not level.	Ensure dishes are not obstructing spray arms, check for foreign objects, level the appliance.

8. SPECIFICATIONS

Brand	Midea
Model Number	WQP147713F
Product Type	Integrated Dishwasher
Installation Type	Integrated
Capacity	14 Place Settings
Product Dimensions (D x W x H)	65 cm x 89 cm x 65 cm
Item Weight	37.5 kg
Control Type	Push-button
Number of Programs	5
Special Features	Half Load, Extra Drying, LED indicators for salt and rinse aid
Noise Level	47 dB
Voltage	220 Volts
Operating Frequency	60 Hz
Material	Metal
Finish Type	Non-glossy
Included Components	User Manual

9. WARRANTY AND SUPPORT

Your Midea WQP147713F Integrated Dishwasher comes with a **2-year manufacturer's warranty**. This warranty covers manufacturing defects and ensures repair or replacement of faulty parts under normal use conditions.

For warranty claims, technical support, or service inquiries, please contact Midea customer service. Keep your purchase receipt and model number handy when contacting support.

- **Customer Service:** Refer to your purchase documentation or the Midea official website for local contact details.
- **Online Support:** Visit the Midea support page for FAQs and additional resources.

