

Leitmotiv PTG-LM1932CH

Leitmotiv Motif Pendant Lamp (Model PTG-LM1932CH) Instruction Manual

Model: PTG-LM1932CH

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for purchasing the Leitmotiv Motif Pendant Lamp. This manual provides essential instructions for the safe installation, operation, and maintenance of your new lighting fixture. Please read this manual thoroughly before installation and retain it for future reference.

Important Safety Instructions:

- Always disconnect power at the main circuit breaker before installation, maintenance, or bulb replacement.
- Installation must be performed by a qualified electrician in accordance with all local electrical codes.
- Do not exceed the maximum wattage specified for the bulb (25 Watts).
- Handle the glass shade with care to prevent breakage.
- Ensure the fixture is securely mounted to the ceiling structure.
- This product is designed for indoor use only.

2. PACKAGE CONTENTS

Please check that all components are present and undamaged before proceeding with installation. If any parts are missing or damaged, contact your retailer.

- 1 x Leitmotiv Motif Pendant Lamp (Blown Glass Shade, Chrome Fixture)
- 1 x Mounting Hardware Kit (screws, wire connectors, ceiling plate)
- 1 x Instruction Manual
- *Note: Light bulb is typically not included and must be purchased separately.*

3. SETUP AND INSTALLATION

Tools Required: Screwdriver, wire strippers, electrical tape, ladder, voltage tester.

Installation Steps:

1. **Turn off Power:** Locate the circuit breaker controlling the light fixture and turn it OFF. Verify power is off using a voltage tester.
2. **Prepare Mounting:** Carefully unpack the lamp. Attach the mounting bracket to the junction box in the ceiling using the provided screws. Ensure it is securely fastened.
3. **Wiring:** Connect the electrical wires from the ceiling to the lamp's wires. Typically, connect the live (black or brown) wire to the live wire of the lamp, the neutral (white or blue) wire to the neutral wire of the lamp, and the ground (green or green/yellow) wire to the ground wire of the lamp. Use wire connectors and secure with electrical tape.
4. **Secure Fixture:** Carefully lift the lamp fixture and attach it to the mounting bracket, ensuring all wires are tucked safely inside the canopy. Secure the fixture with the provided screws or nuts.
5. **Install Bulb:** Gently screw in a compatible light bulb (E27 base, max 25 Watts) into the lamp holder. Do not overtighten.
6. **Attach Glass Shade:** Carefully attach the blown glass shade to the fixture according to the design. Ensure it is stable and secure.
7. **Restore Power:** Turn the power back ON at the main circuit breaker.



Figure 1: The Leitmotiv Motif Pendant Lamp, featuring a round blown glass shade with a chrome finish, suspended from a ceiling mount. The internal light bulb is visible through the translucent glass.

4. OPERATING INSTRUCTIONS

The Leitmotiv Motif Pendant Lamp is operated via a standard wall switch connected to the electrical circuit. Once installed and powered, simply use the wall switch to turn the light ON or OFF.

5. MAINTENANCE

Regular cleaning will help maintain the appearance and performance of your lamp.

- **Cleaning:** Ensure the power is OFF before cleaning. Use a soft, dry, or slightly damp cloth to wipe the chrome finish and glass shade. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- **Bulb Replacement:** Always turn off the power at the circuit breaker before replacing the bulb. Allow the bulb to cool completely before touching. Replace with a bulb of the same type and wattage (E27, max 25W).

6. TROUBLESHOOTING

If you encounter issues with your lamp, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not light up.	No power to the fixture.	Check circuit breaker and wall switch.
	Bulb is loose or faulty.	Tighten or replace the bulb.
	Incorrect wiring.	Consult a qualified electrician to check wiring.
Light flickers.	Loose bulb connection.	Tighten the bulb.
	Faulty bulb.	Replace the bulb.
	Loose wiring connection.	Consult a qualified electrician to check wiring.

If the problem persists after trying these solutions, please contact customer support or a qualified electrician.

7. SPECIFICATIONS

Brand	Leitmotiv
Model Number	PTG-LM1932CH
Dimensions (L x W x H)	33 x 46 x 31.5 cm (approx. 13 x 18.1 x 12.4 inches)
Item Weight	14.2 Kilograms (approx. 31.3 lbs)
Material	Glass
Style	Modern
Finish Type	Painted
Number of Light Sources	1
Voltage	220 Volts (AC)
Wattage	25 Watts (Max)

Power Source	Electric Cable
Installation Type	Ceiling Mount
Batteries Required	No

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.