

TechniSat DIGITRADIO 370 CD BT

TechniSat DIGITRADIO 370 CD BT Stereo Digital Radio User Manual

Model: DIGITRADIO 370 CD BT

Introduction	Safety Instructions	Package Contents	Product Overview	Setup	Operation
	Maintenance	Troubleshooting	Specifications	Warranty & Support	

1. INTRODUCTION

Thank you for choosing the TechniSat DIGITRADIO 370 CD BT. This versatile compact system combines a digital radio (DAB+), FM radio, CD player, Bluetooth receiver, and USB playback with charging functionality. It also features an AUX input, headphone jack, alarm clock, and sleep timer, all controlled via an intuitive interface or the included remote control. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.

2. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before operating the device and keep them for future reference. Incorrect use may result in electric shock, fire, or other hazards.

- **Power Source:** Only connect the device to a power outlet with the specified voltage (AC 100-240V, 50/60Hz).
- **Ventilation:** Ensure adequate ventilation around the unit. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the device to rain, moisture, dripping, or splashing. Do not place objects filled with liquids, such as vases, on the apparatus.
- **Heat Sources:** Keep the device away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the device from the power outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **CD Player:** Do not insert foreign objects into the CD tray. Do not force the CD tray open or closed.

- **Antenna:** Fully extend the telescopic antenna for optimal reception.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- TechniSat DIGITRADIO 370 CD BT Unit
- Remote Control
- Instruction Manual
- Power Cord

4. PRODUCT OVERVIEW

4.1 Front Panel

The front panel features the main display, control buttons, and rotary knobs for volume and tuning/selection.



Image: Front view of the TechniSat DIGITRADIO 370 CD BT, showing the display, control buttons, and rotary knobs.

- **Power Button:** Turns the unit on/off.
- **Mode Button:** Switches between DAB+, FM, CD, Bluetooth, USB, and AUX modes.
- **Info Button:** Displays additional information (e.g., program details, signal strength).
- **Volume Knob:** Adjusts the audio volume.
- **Tuning/Enter Knob:** Navigates menus, tunes radio stations, and confirms selections.
- **Menu Button:** Accesses the system menu.
- **Preset Buttons:** Stores and recalls favorite radio stations.
- **2.4-inch Color Display:** Shows station information, track details, menu options, and time.
- **CD Tray:** For inserting audio CDs and MP3 CDs.

4.2 Rear Panel

The rear panel provides connectivity options for power, external devices, and headphones.

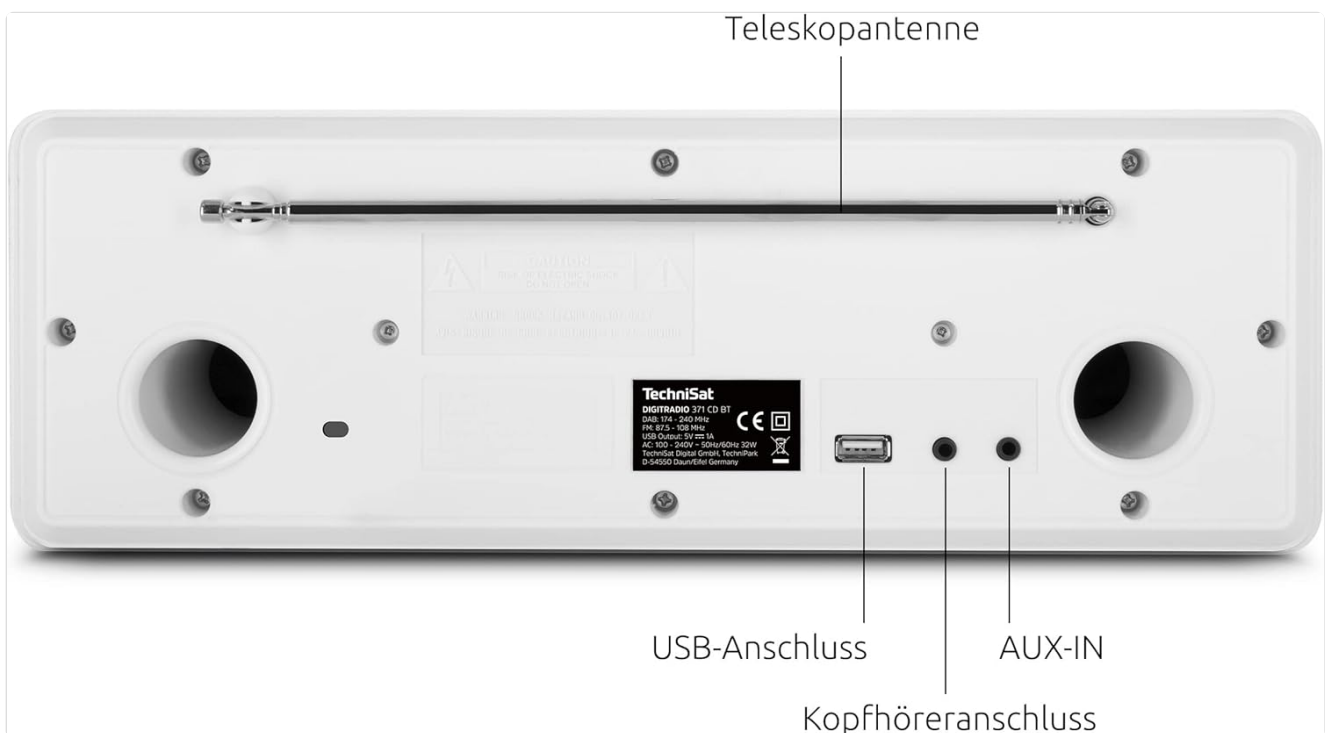 




Image: Rear view of the TechniSat DIGITRADIO 370 CD BT, highlighting the telescopic antenna, USB port, AUX-IN, and headphone jack.

- **Telescopic Antenna:** For DAB+ and FM radio reception. Extend fully for best signal.
- **USB Port:** For MP3 playback from USB storage devices and charging external devices.
- **AUX-IN:** 3.5mm stereo input for connecting external audio sources.
- **Headphone Jack:** 3.5mm stereo output for private listening.
- **Power Input:** Connect the supplied power cord here.

4.3 Remote Control

The included remote control allows convenient operation of all functions from a distance.

  Inkl. Fernbedienung

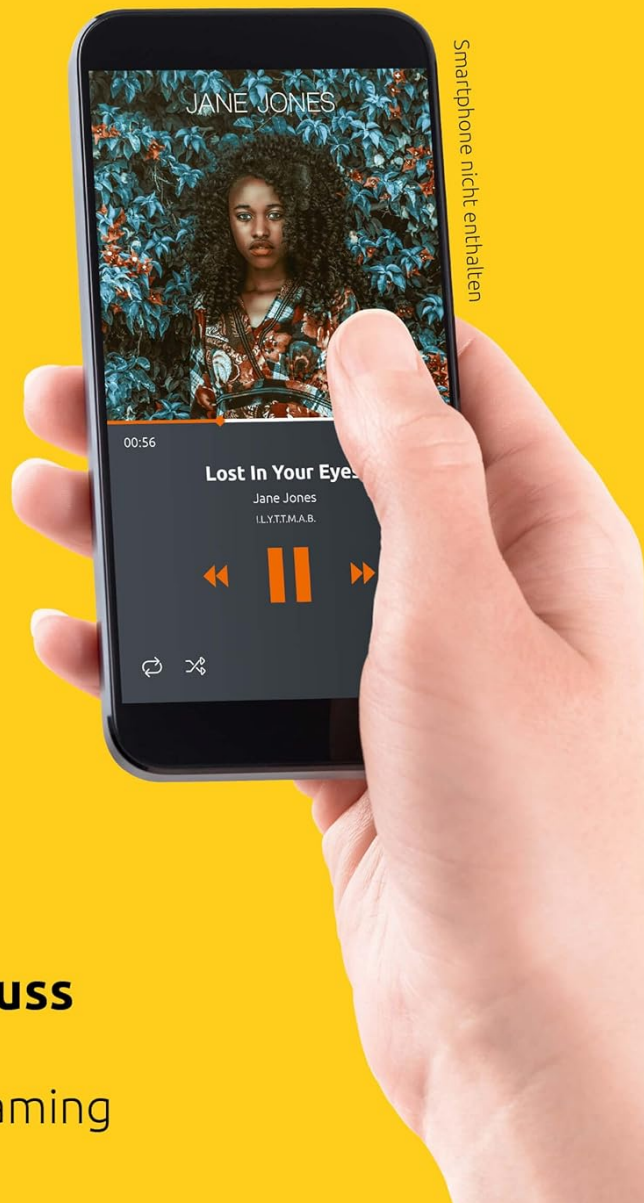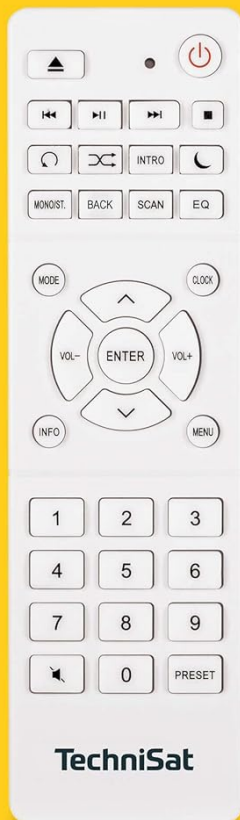

Drahtloser Musikgenuss

Mit Bluetooth-Audiostreaming

Image: The remote control for the DIGITRADIO 370 CD BT, showing various buttons for power, mode, volume, track control, and numeric presets.

Familiarize yourself with the buttons on the remote control, which mirror most functions available on the unit itself.

5. SETUP

5.1 Power Connection

1. Place the DIGITRADIO 370 CD BT on a stable, flat surface.
2. Ensure the unit is positioned to allow for proper ventilation.
3. Connect the power cord to the power input on the rear of the unit.
4. Plug the other end of the power cord into a wall outlet.

5.2 Antenna Setup

For optimal DAB+ and FM radio reception, fully extend the telescopic antenna located on the rear of the unit.

5.3 Initial Power On and Scan

1. Press the **Power** button on the unit or remote control to turn it on.
2. The unit will typically perform an automatic scan for DAB+ stations upon first use. This process may take a few minutes.
3. Once the scan is complete, the first available station will begin playing.
4. The current time will also be set automatically via DAB+ signal.

6. OPERATION

6.1 DAB+ Radio Mode



DAB+ und UKW/FM

Bundesweite und regionale Radio-Programmvielfalt in digitaler Qualität.

Image: The radio's display showing DAB+ station information, indicating digital radio reception.

1. Press the **Mode** button until "DAB+" is selected.
2. Use the **Tuning/Enter** knob to scroll through available stations. Press the knob to select a station.
3. Press the **Info** button repeatedly to cycle through different information displays (e.g., program type, signal strength, time).
4. **Storing Presets:** Tune to your desired station. Press and hold a **Preset** button (1-9 on remote, or use menu for more) until "Preset Stored" appears. To recall, simply press the corresponding **Preset** button.

6.2 FM Radio Mode

1. Press the **Mode** button until "FM" is selected.
2. **Automatic Scan:** Press and hold the **Tuning/Enter** knob to initiate an automatic scan for FM stations. The radio will stop at the next strong station.
3. **Manual Tuning:** Rotate the **Tuning/Enter** knob to manually adjust the frequency.
4. **Storing Presets:** Similar to DAB+ mode, tune to your desired station, then press and hold **Presets** button.

6.3 CD Player Operation



CD-Player mit MP3-Funktion


 
Spielt die Lieblings-CDs rauf und runter.

Image: The CD player of the DIGITRADIO 370 CD BT with the tray open, ready for disc insertion.

1. Press the **Mode** button until "CD" is selected.
2. Gently open the CD tray.
3. Place an audio CD or MP3 CD with the label side facing up into the tray.
4. Close the CD tray. The unit will read the disc and begin playback automatically.
5. Use the ► (Play/Pause), ◀◀ (Previous Track), and ▶▶ (Next Track) buttons on the unit or remote control to manage playback.

6.4 Bluetooth Audio Streaming

 Inkl. Fernbedienung

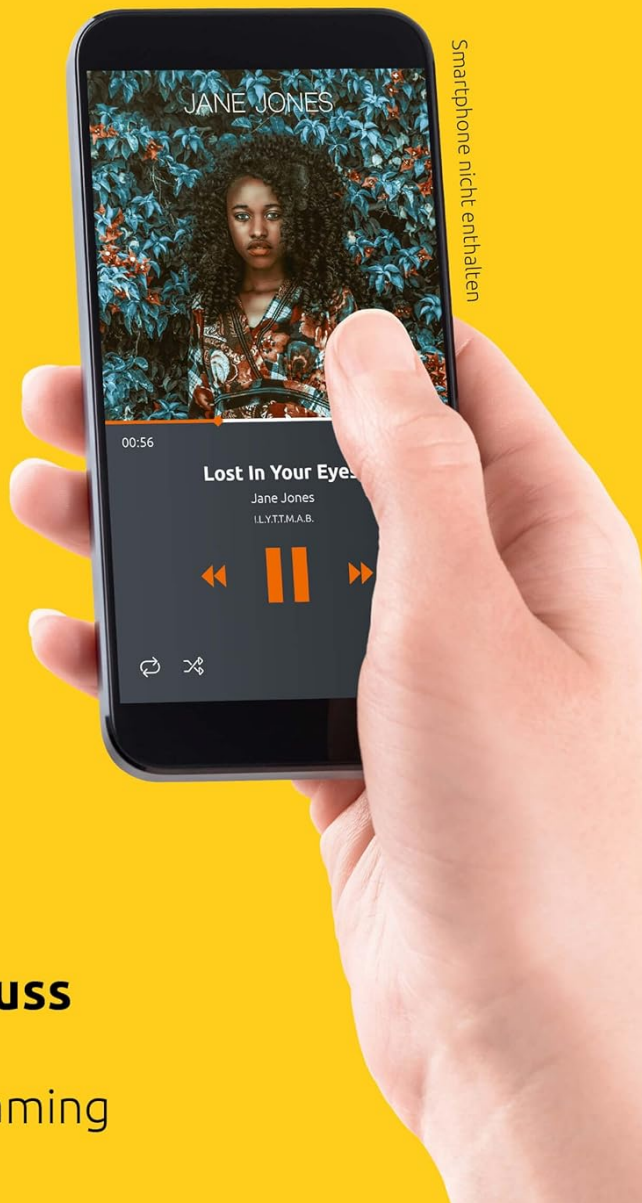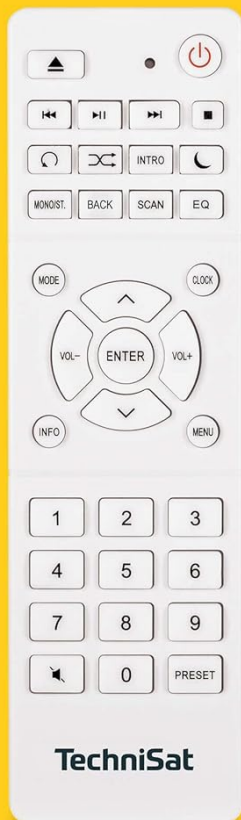

Drahtloser Musikgenuss

Mit Bluetooth-Audiostreaming

Image: A smartphone wirelessly streaming music to the DIGITRADIO 370 CD BT via Bluetooth, with the remote control also visible.

1. Press the **Mode** button until "Bluetooth" is selected. The display will show "Pairing" or "Waiting for connection".
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
3. Select "DIGITRADIO 370 CD BT" from the list of devices.
4. Once paired, you can stream audio from your device to the radio.
5. Use your connected device or the radio's controls to manage playback and volume.

6.5 USB Playback and Charging



USB-Playback

Schließen Sie einen USB-Datenträger über die USB-Schnittstelle an, um die Musik direkt abzuspielen.



USB-Playback

Sie können Geräte, wie z. B. Smartphones oder Musikplayer, über den USB-Anschluss aufladen.



Image: The DIGITRADIO 370 CD BT with a USB stick inserted into the front USB port, illustrating USB playback capability.

1. Insert a USB storage device (e.g., USB stick) containing MP3 audio files into the USB port on the front of the unit.
2. Press the **Mode** button until "USB" is selected. The unit will automatically detect and begin playing MP3 files.
3. Use the **Tuning/Enter** knob or the remote control to navigate through folders and tracks.
4. The USB port also provides a charging function for compatible devices (e.g., smartphones). Connect your device's charging cable to the USB port.

6.6 AUX Input

1. Connect an external audio device (e.g., MP3 player, smartphone) to the **AUX-IN** jack on the rear of the unit using a 3.5mm audio cable (not included).
2. Press the **Mode** button until "AUX" is selected.
3. Control playback and volume from your connected external device.

6.7 Headphone Jack

Connect standard 3.5mm stereo headphones to the **Headphone Jack** on the rear of the unit for private listening.

When headphones are connected, sound from the speakers will be muted.

6.8 Alarm Clock and Sleep Timer

The DIGITRADIO 370 CD BT includes an alarm clock and sleep timer function. Access these settings via the **Menu** button and navigate to the "System Settings" or "Alarm/Sleep" options. Follow the on-screen prompts to set your desired alarm time, source (e.g., DAB+, FM, Buzzer), and volume. The sleep timer allows you to set a duration after which the radio will automatically turn off.

7. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your device.

- **Cleaning:** Disconnect the power cord before cleaning. Use a soft, dry, lint-free cloth to wipe the exterior of the unit. Do not use abrasive cleaners, waxes, or solvents.
- **CD Tray:** Keep the CD tray free of dust and debris. Avoid touching the lens inside the CD player.
- **Storage:** If storing the unit for an extended period, unplug it from the power outlet and store it in a cool, dry place.

8. TROUBLESHOOTING

If you encounter issues with your DIGITRADIO 370 CD BT, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected properly; power outlet not active.	Check power cord connection. Try a different power outlet.
Poor DAB+/FM reception	Antenna not fully extended; weak signal area; interference.	Fully extend the telescopic antenna. Reposition the unit. Perform a full scan for stations.
No sound	Volume too low; headphones connected; incorrect source selected.	Increase volume. Disconnect headphones. Ensure correct mode (DAB+, FM, CD, Bluetooth, USB, AUX) is selected.
CD not playing	CD inserted incorrectly; disc scratched/dirty; unsupported format.	Ensure CD is inserted label-side up. Clean the disc. Try a different CD. Ensure it's an audio CD or MP3 CD.
Bluetooth pairing failed	Bluetooth not enabled on device; device too far; radio not in pairing mode.	Ensure Bluetooth is enabled on your device. Move device closer to the radio. Ensure radio is in Bluetooth mode and displaying "Pairing".

9. SPECIFICATIONS

Below are the technical specifications for the TechniSat DIGITRADIO 370 CD BT:

- **Brand:** TechniSat
- **Model:** DIGITRADIO 370 CD BT
- **Connectivity Technology:** Auxiliary, Bluetooth, USB
- **Color:** White

- **Speaker Type:** Stereo
- **Item Dimensions (W x H x D):** 35 x 12 x 21 cm
- **Power Source:** Corded Electric (AC 100-240V, 50/60Hz)
- **Compatible Devices:** MP3 Player, Smartphone, Personal Computer, Tablet
- **Item Weight:** 2.8 Kilograms
- **Wattage:** 10 Watts (2 x 5 Watt RMS)
- **Supported Standards:** DAB, MP3
- **Supported Audio Format:** MP3
- **Number of Speakers:** 2
- **Audio Output Mode:** Stereo
- **Display:** Dimmable 2.4-inch Color Display
- **Radio Tuner:** DAB+, FM
- **CD Player:** Yes, with MP3 function
- **Bluetooth:** Yes
- **USB:** Yes (MP3 playback and charging)
- **AUX In:** Yes
- **Headphone Jack:** Yes
- **Special Features:** Alarm clock, Sleep timer, Station memory (20 x DAB+ / 20 x FM), Remote control



Image: Diagram showing the dimensions of the TechniSat DIGITRADIO 370 CD BT: 35 cm (width) x 12 cm (height) x 21 cm (depth).

10. WARRANTY AND SUPPORT

The TechniSat DIGITRADIO 370 CD BT comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package or visit the official TechniSat website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance beyond this manual, or service inquiries, please contact TechniSat customer support through their official channels. Contact information can typically be found on the TechniSat

website or in the documentation provided with your product.