

## EasySMX ESM 9101

# EasySMX Wireless Receiver Dongle ESM 9101 Controller User Manual

## 1. INTRODUCTION

This manual provides instructions for the EasySMX Wireless Receiver Dongle ESM 9101. This USB receiver is designed to connect a compatible EasySMX 9101 wireless controller to your personal computer, enabling wireless gameplay.

## 2. COMPATIBILITY

- **Compatible Devices:** This USB receiver is exclusively designed to work with the EasySMX 9101 wireless controller.
- **Not Compatible:** This receiver does not support older version 9101 controllers that utilize a nano-receiver. Please ensure your controller is the correct version for this receiver.
- **Operating System:** Driver installation may be required if your PC runs Windows 7 or an earlier operating system.

## 3. SETUP INSTRUCTIONS

Follow these steps to connect your EasySMX 9101 wireless controller using the receiver dongle:

1. **Insert the Receiver:** Plug the EasySMX Wireless Receiver Dongle into an available USB port on your personal computer.
2. **Power On Controller:** Turn on your EasySMX 9101 wireless controller.
3. **Automatic Connection:** The 2.4 GHz wireless technology will automatically establish a connection between the receiver and the controller within a few seconds. A successful connection is typically indicated by a steady light on both the receiver and the controller.
4. **Driver Installation (Windows 7 or older):** If your PC is running Windows 7 or an older operating system, you may need to install specific drivers. Please visit the official EasySMX website for driver downloads and installation instructions.



Image: EasySMX 9101 Wireless Controller (black) shown with its compatible USB receiver dongle. The controller features standard gaming buttons, joysticks, and a D-pad. The dongle is a small black USB device.

## 4. OPERATING INSTRUCTIONS

Once the receiver and controller are successfully connected, your EasySMX 9101 wireless controller should be ready for use with compatible games and applications on your PC. Refer to your game's settings or the controller's specific manual for button mapping and advanced functionalities.

## 5. MAINTENANCE

- Keep the receiver dongle clean and free from dust. Use a soft, dry cloth for cleaning.
- Avoid exposing the dongle to extreme temperatures, humidity, or direct sunlight.
- Store the dongle in a safe place when not in use to prevent physical damage.

## 6. TROUBLESHOOTING

- **Controller Not Connecting:**
  - Ensure the receiver is fully inserted into a working USB port.

- Verify that your EasySMX 9101 wireless controller is powered on and has sufficient battery charge.
  - Confirm that the controller is within the effective range of the receiver.
  - If issues persist, try plugging the receiver into a different USB port on your PC.
- **Controller Not Responding in Game:**
    - Check in your PC's device manager or game controller settings to ensure the controller is recognized.
    - Ensure the game you are playing supports game controllers.
    - Restart your PC and try connecting again.
- **Driver Issues (Windows 7 or older):**
    - If you are using Windows 7 or an older OS and the controller is not recognized, download and install the necessary drivers from the official EasySMX support website.

## 7. SPECIFICATIONS

<b>Brand:</b>	EasySMX
<b>Model:</b>	ESM 9101 (Receiver)
<b>Connectivity Technology:</b>	USB, Wireless (2.4 GHz)
<b>Compatible Devices:</b>	Desktop (with EasySMX 9101 Wireless Controller)
<b>Hardware Platform:</b>	Sony PlayStation 3 (as listed, but primarily for PC with compatible controller)
<b>Package Dimensions:</b>	7.3 x 2.7 x 1.2 cm; 10 g
<b>Manufacturer:</b>	EasySMX
<b>UPC:</b>	610406042070
<b>GTIN:</b>	610406042070

## 8. WARRANTY AND SUPPORT

Specific warranty information for the EasySMX Wireless Receiver Dongle ESM 9101 is not provided within this document. For detailed warranty terms, technical support, or further assistance, please visit the official EasySMX website or contact their customer service directly.