

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VASAGLE](#) /

› [VASAGLE Shoe Bench LHS24WT Instruction Manual](#)

VASAGLE LHS24WT

VASAGLE Shoe Bench with Drawer and Open Compartments - Instruction Manual

Model: LHS24WT

1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety information before assembling and using this product. Failure to follow these instructions may result in injury or product damage.

- Maximum static load capacity of the bench: 200 kg (440 lbs).
- Maximum static load capacity of each compartment or drawer: 10 kg (22 lbs).
- Protect the wooden bench from water and excessive moisture.
- Ensure the bench is stable and properly assembled to prevent tipping.
- Keep small parts away from children during assembly.

2. PACKAGE CONTENTS

Before beginning assembly, ensure all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- 1 x Shoe Bench (main components)
- 1 x Accessory Package (screws, dowels, pins, etc.)
- 1 x Instruction Manual (this document)

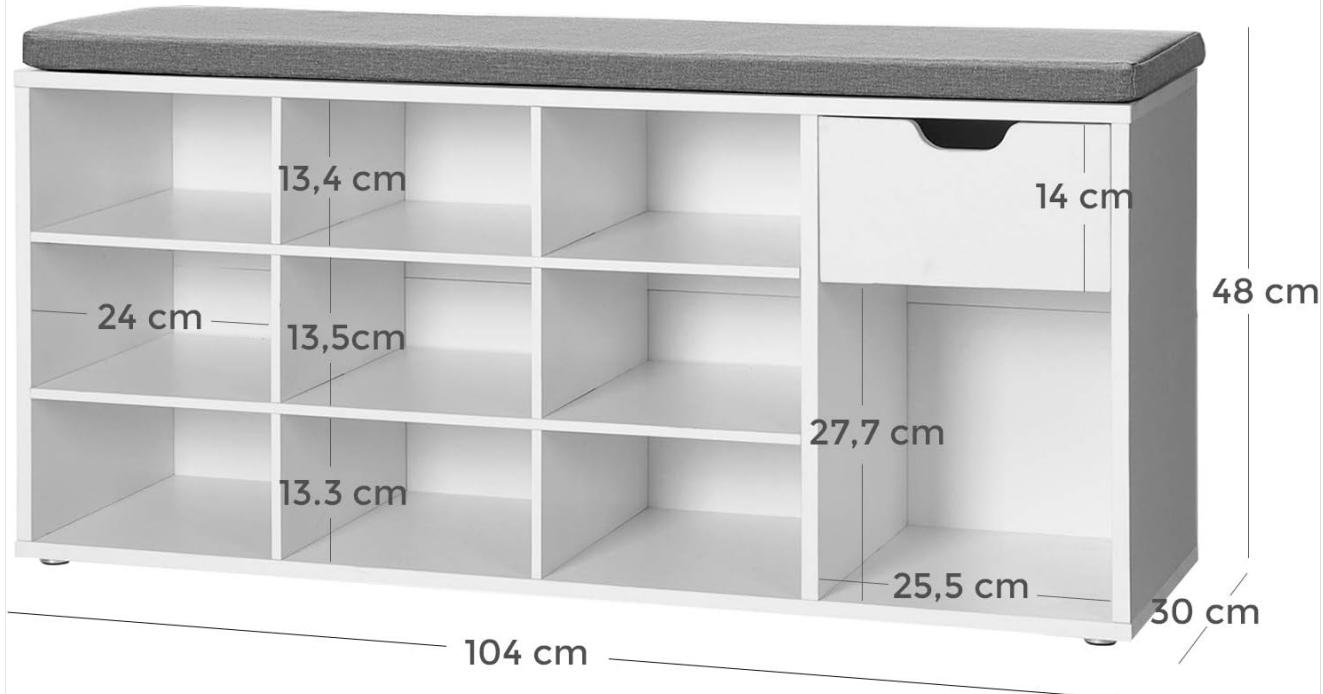
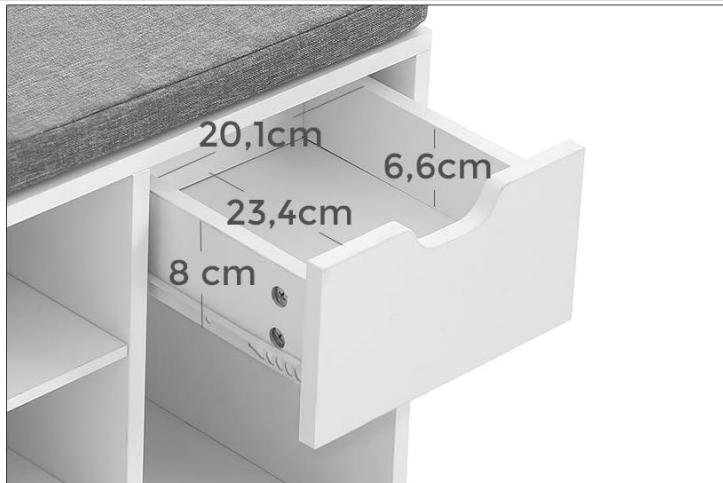


Image: Detailed diagram of the shoe bench with dimensions for each section and the drawer.

3. SETUP AND ASSEMBLY

Assembly is required for this shoe bench. Follow the numbered steps provided in the accessory package's instruction sheet. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

- 1. Unpack Components:** Carefully remove all parts from the packaging. Verify against the parts list in the included instruction sheet.
- 2. Identify Numbered Parts:** The components are typically numbered for easy identification. Match them with the diagrams in the assembly guide.
- 3. Assemble Frame:** Begin by connecting the main frame pieces using the provided hardware (dowels, screws). Ensure all connections are secure but do not overtighten until the unit is fully assembled.
- 4. Install Shelves:** Insert the shelf support pins into the pre-drilled holes. Place the shelves onto these pins. Ensure they are seated firmly.
- 5. Assemble and Install Drawer:** Follow the specific instructions for assembling the drawer. Once assembled, slide it into its designated slot.

6. **Attach Cushion:** The upholstered cushion attaches to the top surface of the bench. It typically uses Velcro fasteners for secure placement and easy removal.
7. **Final Tightening:** Once all components are in place, gently tighten all screws to ensure stability. Do not overtighten.
8. **Placement:** Position the assembled shoe bench in its desired location, ensuring it is on a level surface.



Image: The assembled shoe bench in a home environment, demonstrating its use.

4. OPERATING INSTRUCTIONS

The VASAGLE shoe bench is designed for convenient shoe storage and comfortable seating.

4.1. Shoe Storage

- **Open Compartments:** Utilize the various open compartments to store shoes of different sizes. The design includes both smaller and larger sections to accommodate various footwear, including boots.

- **Drawer:** The integrated drawer is suitable for storing smaller items such as keys, shoe care accessories, or other personal belongings.

4.2. Seating Function

- The upholstered top provides a comfortable surface for sitting while putting on or taking off shoes.
- The bench is designed to comfortably seat up to two individuals.



Image: A detailed view of the shoe bench's storage compartments, drawer, and cushioned seat.

5. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your VASAGLE shoe bench.

- **Wooden Surfaces:** Wipe the wooden surfaces with a dry cloth to remove dust and dirt. Avoid using abrasive cleaners or excessive moisture.
- **Cushion Cover:** The cushion cover is removable and machine washable for easy cleaning. Refer to the care

label on the cushion for specific washing instructions.

- **Spills:** In case of spills, wipe immediately with a clean, dry cloth to prevent staining or damage to the wood.
- **Regular Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.



Image: Details of the cushion, highlighting its removable and washable nature with Velcro fasteners.

6. TROUBLESHOOTING

If you encounter any issues with your shoe bench, refer to the following common solutions:

Problem	Possible Cause	Solution
Bench feels wobbly or unstable.	Screws are not fully tightened, or the bench is on an uneven surface.	Ensure all assembly screws are securely tightened. Move the bench to a level surface. If the issue persists, check if any parts were assembled incorrectly.

Problem	Possible Cause	Solution
Shelf pins fall out.	Pins may not be fully inserted, or shelves are overloaded.	Push the shelf pins firmly into their holes. Ensure the shelves are not overloaded beyond the 10 kg capacity per compartment.
Drawer does not slide smoothly.	Drawer runners are misaligned or obstructed.	Remove the drawer and check the runners for any obstructions or damage. Ensure the drawer was assembled correctly and the runners are aligned.

7. SPECIFICATIONS

Feature	Detail
Model Number	LHS24WT
Product Dimensions (L x W x H)	104 x 30 x 48 cm (40.9 x 11.8 x 18.9 inches)
Item Weight	18.5 kg (40.8 lbs)
Material	E1-grade particleboard, foam padding, imitation linen seat cover
Color	White + Grey (cushion)
Max. Static Load Capacity (Bench)	200 kg (440 lbs)
Max. Static Load Capacity (Compartment/Drawer)	10 kg (22 lbs)
Assembly Required	Yes
Care Instructions	Wipe with a dry cloth (for bench), machine washable (for cushion cover)

8. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For warranty details or customer support, please refer to the documentation included with your purchase or contact VASAGLE customer service directly through their official website or the retailer where the product was purchased.

For further assistance, please visit the [VASAGLE Store on Amazon](#).