

Hotpoint 869991616550

Hotpoint HSIC 3T127 C Slim Dishwasher User Manual

Model: 869991616550

Introduction	Safety Information	Product Overview	Setup & Installation	Operating Instructions
	Maintenance	Troubleshooting	Specifications	Warranty & Support

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of your new Hotpoint HSIC 3T127 C Slim Dishwasher. Please read this manual carefully before using the appliance to ensure safe and efficient operation. Keep this manual for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the dishwasher.
- This appliance must be grounded. Connect only to a properly grounded outlet.
- Do not operate a dishwasher with a damaged power cord or plug.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids recommended for dishwashers.
- Do not wash plastic items unless they are marked "dishwasher safe".
- Load sharp items so they are not likely to damage the door seal or interior.
- Do not touch the heating element during or immediately after use.
- Always disconnect the appliance from the power supply before cleaning or performing maintenance.

3. PRODUCT OVERVIEW

The Hotpoint HSIC 3T127 C is a slim 45 cm built-in dishwasher designed for efficient cleaning with a 10 place setting capacity. It features an Inverter Motor for quiet and energy-efficient operation, and an A++ energy class rating.



Figure 3.1: Front view of the Hotpoint HSIC 3T127 C Slim Dishwasher. This image displays the appliance with its door open, revealing the control panel at the top and the internal racks designed for dishes, glasses, and cutlery. The sleek design and compact size are evident.

Key Features:

- **Slim Design:** 45 cm width, ideal for smaller kitchens or spaces.
- **Capacity:** Accommodates up to 10 place settings.
- **Energy Efficiency:** Class A++ rating for reduced energy consumption.
- **Inverter Motor:** Ensures quiet operation and enhanced durability.
- **Multiple Wash Programs:** Includes Eco 45 °C, Express 50 min, Glass/delicate, Hygiene, Intensive, Mixed, Normal,

Pre-wash, and Silent programs.

- **Special Functions:** Features like AquaStop, delayed start timer, additional drying, half load option, and salt indicator.
- **Control Panel:** Full console with LED display for easy program selection and monitoring.

4. SETUP & INSTALLATION

The Hotpoint HSIC 3T127 C is designed for built-in installation. Proper installation is crucial for optimal performance and safety. It is recommended that installation be performed by a qualified technician.

Installation Requirements:

- **Type:** Built-in (Incorporato)
- **Dimensions:**
 - Width: 448 mm
 - Height: 820-900 mm (adjustable)
 - Depth: 555 mm
- **Electrical Connection:** Ensure a properly grounded 12 Volt power supply (*Note: Standard dishwashers typically require 230V. Please verify voltage requirements with a qualified electrician or the manufacturer's specific installation guide.*)
- **Water Supply:** Cold and hot water fill options available.
- **Drainage:** Connect to a suitable drain system.

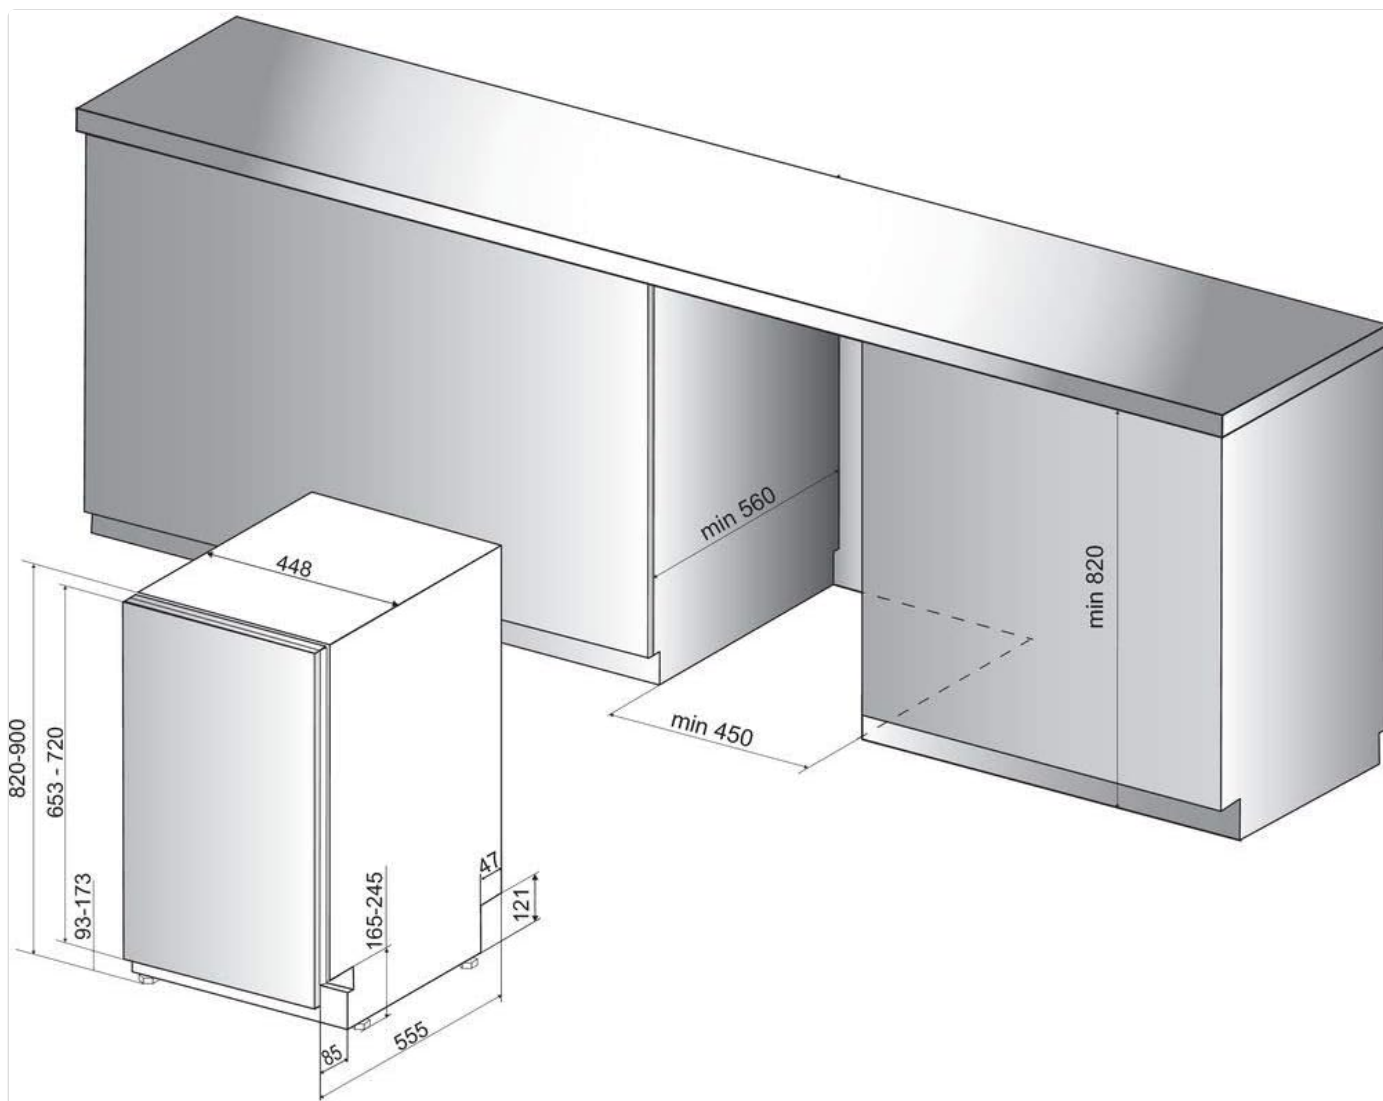


Figure 4.1: Installation dimensions for the Hotpoint HSIC 3T127 C Slim Dishwasher. This diagram illustrates the required cabinet space and clearances for built-in installation, including width, height, and depth measurements in millimeters.

Installation Steps (Summary):

1. Prepare the cabinet opening according to the specified dimensions.
2. Connect the water inlet hoses to the hot and/or cold water supply.
3. Connect the drain hose to the household drainage system.
4. Connect the power cord to a grounded electrical outlet.
5. Slide the dishwasher into the cabinet opening and secure it.
6. Level the appliance using the adjustable feet.
7. Attach the decorative front panel (not included) if applicable.

For detailed installation instructions, refer to the separate installation guide provided with your appliance or consult a professional installer.

5. OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Hotpoint dishwasher.

Control Panel:

The dishwasher features a full console with an LED display. Buttons allow for program selection, delayed start, and special functions.

Loading the Dishwasher:

- Scrape off large food particles from dishes.
- Load dishes, glasses, pots, pans, and cutlery according to the recommended loading patterns to ensure proper water circulation.
- Place glasses and delicate items in the upper rack.
- Place larger, heavily soiled items in the lower rack.
- Ensure no items block the spray arms.

Adding Detergent and Rinse Aid:

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Check the rinse aid indicator and refill the rinse aid dispenser as needed.
- If the salt indicator is illuminated, refill the salt reservoir with dishwasher salt.

Wash Programs:

The dishwasher offers 5 optional cycles with various programs to suit different washing needs:

Program Name	Description	Recommended Use
Eco 45 °C	Energy-efficient program for normally soiled dishes.	Daily wash for mixed loads.
Express 50 min	Quick wash program for lightly soiled dishes.	Lightly soiled items, quick turnaround.
Glass/Delicate	Gentle wash for fragile items like glassware.	Delicate items, crystal.
Hygiene	High-temperature wash for maximum sanitation.	Baby bottles, cutting boards, heavily soiled items requiring sanitization.
Intensive	Powerful wash for heavily soiled pots and pans.	Pots, pans, baked-on food.
Mixed	Versatile program for mixed loads of varying soil levels.	Standard daily use with mixed items.
Normal	Standard program for everyday dishes.	Regularly soiled dishes.
Pre-wash	Rinses dishes to prevent food from drying on.	Before a full wash cycle, or for dishes stored for a while.
Silent	Operates at a reduced noise level.	Overnight washing or in open-plan living areas.

Starting a Wash Cycle:

1. Load the dishwasher and add detergent/rinse aid/salt.
2. Close the dishwasher door securely.
3. Select the desired wash program using the control panel.
4. If desired, select additional functions like "Half Load" or "Additional Drying".

5. Press the Start button. The LED display will show the program status.

To use the delayed start timer, select the program, then set the desired delay time before pressing Start.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

Cleaning the Filters:

- The filter system should be checked and cleaned regularly to prevent blockages and ensure efficient washing.
- Refer to the appliance diagram for filter location. Twist and remove the coarse filter, then the fine filter.
- Rinse filters under running water to remove food particles. Use a brush if necessary.
- Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked.

Cleaning the Spray Arms:

- Periodically check the spray arm nozzles for blockages.
- If blocked, remove the spray arms and clear the holes with a thin wire or toothpick.
- Rinse and reattach the spray arms securely.

Exterior and Interior Cleaning:

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the door seal regularly with a damp cloth to remove food residue.
- Run a dishwasher cleaning cycle periodically using a specialized dishwasher cleaner to remove grease and limescale buildup.

Salt and Rinse Aid Refill:

- Refill dishwasher salt when the salt indicator light illuminates on the control panel.
- Refill rinse aid when the rinse aid indicator light illuminates.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start.	Power cord not plugged in; door not closed properly; fuse blown.	Ensure power cord is securely plugged in. Close the door firmly until it latches. Check household fuse/circuit breaker.
Dishes are not clean.	Improper loading; clogged spray arms; insufficient detergent; incorrect program.	Reload dishes correctly. Clean spray arm nozzles. Add more detergent. Select a more intensive program.
White film on dishes.	Hard water; insufficient rinse aid; too much detergent.	Check salt level and refill if necessary. Adjust rinse aid dispenser setting. Reduce detergent amount.
Dishwasher is noisy.	Items hitting spray arms; foreign object in pump; improper installation.	Rearrange dishes. Check for foreign objects in the filter area. Ensure dishwasher is level.

Problem	Possible Cause	Solution
Water not draining.	Clogged drain hose or filter; drain pump malfunction.	Clean the filter system. Check drain hose for kinks or blockages. Contact service if pump is suspected.

8. SPECIFICATIONS

Feature	Detail
Model Name	HSIC 3T127 C
Model Number	869991616550
Brand	Hotpoint
Installation Type	Built-in (Incorporato)
Place Settings Capacity	10
Product Dimensions (W x H x D)	448 mm x 820-900 mm x 555 mm (approximate, based on diagram)
Item Weight	29.6 kg (29600 Grams)
Voltage	12 Volt <i>(Please verify with manufacturer for correct operating voltage)</i>
Noise Level	47 dB
Energy Class	A++
Control Type	Full Console
Display Type	LED
Wash Programs	Eco 45 °C, Express 50 min, Glass/Delicate, Hygiene, Intensive, Mixed, Normal, Pre-wash, Silent
Special Features	AquaStop, Delayed Start, Additional Drying, Half Load, Automatic Power Interruption, Inverter Technology, Dosing Assistant, Overflow Safety, Salt Indicator
Water Fill Options	Cold, Hot
Recommended Uses	Dishes, glasses, pots, pans, and cutlery
Material	Acrylic <i>(Note: This typically refers to external paneling or trim. Interior is usually stainless steel)</i>
Included Components	1 package (Appliance only, installation kit may be separate)
First Available Date	March 5, 2020

9. WARRANTY AND SUPPORT

For specific warranty information regarding your Hotpoint HSIC 3T127 C Dishwasher, please refer to the warranty card included with your appliance or visit the official Hotpoint website. Warranty terms and conditions may vary by region. If you encounter issues that cannot be resolved using the troubleshooting guide, or require professional assistance, please contact Hotpoint customer support. Have your model number (869991616550) and serial number ready when contacting support.

For general return and refund policies related to your purchase, please consult the retailer's policies where the product was acquired.

© 2024 Hotpoint. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question