

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EGLO](#) /

› [EGLO USA 204545A Brandel Collection Outdoor Wall Mount 8.5-Inch Instruction Manual](#)

EGLO 204545A

EGLO USA 204545A Brandel Collection Outdoor Wall Mount 8.5-Inch Instruction Manual

Model: 204545A | Brand: EGLO

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before beginning installation. Failure to follow these instructions may result in electric shock, fire, or other hazards that could cause injury or property damage.

- Always turn off the main power supply at the circuit breaker before beginning installation, replacing bulbs, or performing any maintenance.
- Consult a qualified electrician if you are unsure about the installation process or have any electrical questions.
- Use only the bulb type and wattage specified for this fixture.
- Do not exceed the maximum wattage indicated on the fixture.
- This product is designed for outdoor use. Ensure all connections are properly sealed against moisture.
- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

PRODUCT OVERVIEW

The EGLO USA 204545A Brandel Collection Outdoor Wall Mount is a single-light fixture designed to provide illumination for exterior spaces. It features a durable metal construction with a rust finish and a clear glass shade, suitable for various outdoor architectural styles.



Image: Front view of the EGLO USA 204545A Outdoor Wall Mount, showing its dimensions: Length 8.5 inches, Width 9.5 inches, Height 14.5 inches.

PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, do not attempt to assemble or install the product. Contact customer support for assistance.

- One (1) Light Fixture (Model 204545A)
- Mounting Hardware (screws, wire nuts)
- Instruction Manual

Note: Bulb is not included and must be purchased separately.

INSTALLATION INSTRUCTIONS

Tools Required (Not Included):

- Phillips Head Screwdriver
- Flathead Screwdriver
- Wire Strippers
- Electrical Tape
- Safety Glasses

Step-by-Step Installation:

1. **Turn Off Power:** Locate the circuit breaker controlling the outdoor lighting circuit and turn off the power. Verify the power is off using a voltage tester.
2. **Prepare Mounting Surface:** If replacing an existing fixture, carefully remove it. Ensure the electrical junction box is securely mounted and clean.
3. **Attach Mounting Plate:** Secure the fixture's mounting plate to the junction box using the provided screws. Ensure the plate is level and tight.
4. **Make Electrical Connections:**
 - Connect the **black** wire from the fixture to the**black** (hot) wire from the junction box using a wire nut.
 - Connect the **white** wire from the fixture to the**white** (neutral) wire from the junction box using a wire nut.
 - Connect the **ground** wire (bare copper or green) from the fixture to the**ground** wire from the junction box (or to the green ground screw on the mounting plate) using a wire nut.Ensure all connections are secure and insulated with electrical tape if necessary.
5. **Mount the Fixture:** Carefully tuck all wires into the junction box. Align the fixture with the mounting plate and secure it using the provided screws.
6. **Install Bulb and Shade:** Insert a compatible incandescent bulb (not included) into the socket. Carefully attach the glass shade to the fixture according to the design.
7. **Restore Power:** Turn the power back on at the circuit breaker. Test the light fixture to ensure proper operation.



Image: The EGLO USA 204545A Outdoor Wall Mount installed and illuminated on an exterior brick wall, demonstrating its appearance in an outdoor setting.

OPERATING INSTRUCTIONS

This outdoor wall mount operates like a standard light fixture. Once properly installed and wired, it is controlled by the wall switch connected to its circuit.

- Ensure the correct incandescent bulb is installed.
- Flip the connected wall switch to the 'ON' position to illuminate the fixture.
- Flip the connected wall switch to the 'OFF' position to turn off the fixture.

MAINTENANCE

Cleaning:

- Always turn off the power to the fixture before cleaning.

- Wipe the fixture with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or glass.
- For glass components, a mild glass cleaner can be used, applied to a cloth first, not directly to the fixture.

Bulb Replacement:

- Turn off the power to the fixture at the circuit breaker.
- Allow the bulb to cool completely before touching it.
- Carefully remove the glass shade if necessary to access the bulb.
- Unscrew the old bulb counter-clockwise.
- Screw in a new, compatible incandescent bulb (120 Volts) clockwise until snug. Do not overtighten.
- Reattach the glass shade.
- Restore power and test the new bulb.

TROUBLESHOOTING

If your EGLO outdoor wall mount is not functioning correctly, refer to the following common issues and solutions:

- **Light does not turn on:**
 - Check if the power is on at the circuit breaker.
 - Ensure the wall switch is in the 'ON' position.
 - Verify the bulb is securely screwed into the socket and is not burnt out. Replace if necessary.
 - Check electrical connections for proper wiring (ensure all wires are securely connected).
- **Light flickers:**
 - Ensure the bulb is fully tightened in the socket.
 - Check for loose wire connections at the fixture or junction box.
 - Try a different bulb to rule out a faulty bulb.
- **Fixture appears loose:**
 - Turn off power at the circuit breaker.
 - Tighten the mounting screws that secure the fixture to the mounting plate and junction box.

If these steps do not resolve the issue, contact customer support for further assistance.

SPECIFICATIONS

Brand	EGLO
Model Name	204545A
Style	Outdoor Wall Light
Color	Rust
Material	Metal, Glass
Product Dimensions	9.5" L x 8.5" W x 14.5" H
Power Source	corded electric

Voltage	120 Volts
Light Source Type	Incandescent
Number of Light Sources	1
Indoor/Outdoor Usage	Outdoor
Mounting Type	Protruding
Assembly Required	Yes
Warranty Type	1 Year Manufacturer

WARRANTY INFORMATION

This EGLO USA 204545A Outdoor Wall Mount is covered by a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover damage caused by improper installation, misuse, abuse, accidents, modifications, or normal wear and tear. For warranty claims or service, please retain your proof of purchase and contact EGLO customer support.

CUSTOMER SUPPORT

For technical assistance, replacement parts, or warranty inquiries, please contact EGLO customer support.

- **Brand:** EGLO
- **Online Store:** [Visit the EGLO Store on Amazon](#)

Please have your model number (204545A) and proof of purchase ready when contacting support.