

[Manuals.plus](#) /

› [Kensington](#) /

› Kensington ClickSafe Universal Combination Laptop Lock K68106WW User Manual

Kensington K68106WW

Kensington ClickSafe Universal Combination Laptop Lock

MODEL: K68106WW

Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Kensington ClickSafe Universal Combination Laptop Lock, Model K68106WW. Please read these instructions carefully before using the product to ensure proper functionality and security.

Package Contents

- Kensington ClickSafe Universal Combination Laptop Lock
- Universal Adapters (T-bar, Nano, Wedge-shaped)
- Instruction Manual (this document)

Setup

1. Identifying Your Laptop Security Slot

The ClickSafe Universal Lock is designed to fit standard T-bar, nano, and wedge-shaped security slots found on most laptops. Examine your laptop's security slot to determine its type. The lock comes with various adapters to ensure compatibility.



Image: The Kensington ClickSafe lock head positioned next to a laptop's security slot, illustrating how the lock aligns with the port.



Image: The Kensington ClickSafe lock head displayed alongside three different universal adapters, demonstrating its compatibility with various laptop security slot types.

2. Setting Your Combination

Your lock is factory-set to a default combination, typically 0-0-0-0. To set your personal combination:

1. Ensure the lock is disengaged and the current combination is set to the opening code (factory default or previous personal code).
2. Locate the reset button or mechanism on the lock body. This is often a small button that requires a pen tip or similar pointed object to press.
3. Press and hold the reset button.
4. While holding the reset button, rotate the dials to your desired new 4-digit combination.
5. Release the reset button. Your new combination is now set.
6. **Important:** Write down your new combination and store it in a secure, memorable location. Kensington does not retain user combinations. For master-coded versions, IT administrators may have a master key or code to reset forgotten combinations.



Image: A close-up view of the Kensington ClickSafe lock head, highlighting the four combination dials used for setting and entering the security code.

Operating Instructions

1. Attaching the Lock to Your Laptop

1. Ensure the correct adapter is installed on the lock head for your laptop's security slot type.
2. Loop the carbon steel cable around a secure, immovable object (e.g., a desk leg, heavy furniture).
3. Align the lock head with your laptop's security slot.
4. Push the lock head firmly into the security slot until you hear a "click." This indicates the ClickSafe mechanism has engaged and the lock is secured. The combination does not need to be entered to attach the lock.
5. Gently pull on the lock head to ensure it is securely fastened.



Image: The Kensington ClickSafe laptop lock securely attached to the security slot of a laptop, with the cable looped around a stationary object.

2. Detaching the Lock from Your Laptop

1. Rotate the combination dials to your personal 4-digit combination.
2. Press the release button or mechanism on the lock head.
3. Gently pull the lock head out of the laptop's security slot.

3. Pivot and Rotate Cable Feature

The lock features a special hinge that allows the cable to pivot and rotate 360 degrees. This provides flexible movement and easier positioning of your laptop without straining the cable or the security slot.

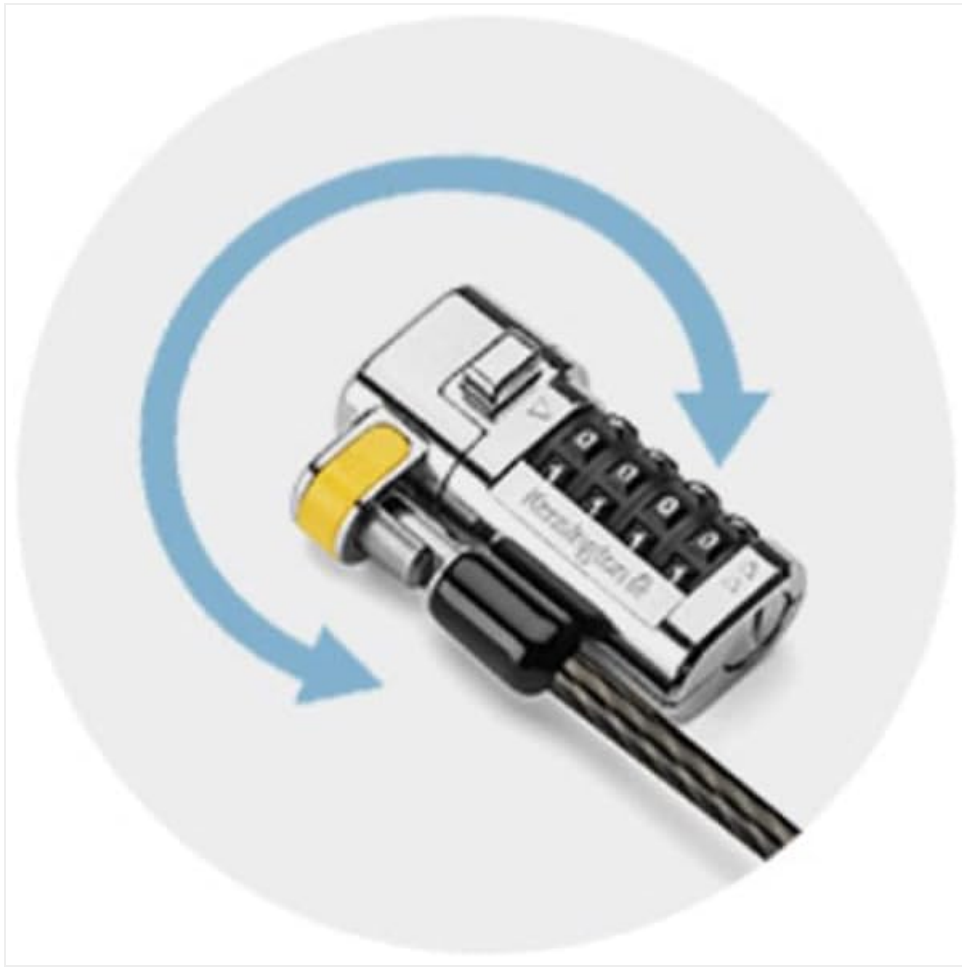


Image: A close-up of the Kensington ClickSafe lock head, showing circular arrows indicating its pivot and rotate functionality for flexible cable movement.

Maintenance

- Keep the lock mechanism clean and free from dust and debris.
- Avoid exposing the lock to extreme temperatures or harsh chemicals.
- Periodically check the cable for any signs of wear or damage. If the cable is damaged, replace the lock immediately.
- Do not attempt to lubricate the lock mechanism with oil-based products, as this can attract dirt and impair functionality.

Troubleshooting

- **Lock not engaging:** Ensure the correct adapter is used for your laptop's security slot. Push the lock head firmly until you hear a click.
- **Cannot detach lock:** Verify that the correct combination is entered. Ensure the release button is fully pressed.
- **Forgotten combination:** If you have forgotten your personal combination, and your lock is part of a master-coded system, contact your IT administrator for assistance. Otherwise, there is no way to reset the combination without the master code.
- **Cable damage:** If the carbon steel cable shows signs of fraying or damage, discontinue use and replace the lock.

Specifications

Brand	Kensington
-------	------------

Model Number	K68106WW
Lock Type	Combination Lock (Master Coded)
Cable Length	1.8m (5.91 ft)
Cable Material	Carbon Steel with Plastic Sheath
Device Supported	Notebooks with T-bar, Nano, or Wedge-shaped security slots
Item Dimensions (L x W x H)	28 x 16 x 3 Centimetres
Item Weight	249 g
UPC	085896681069

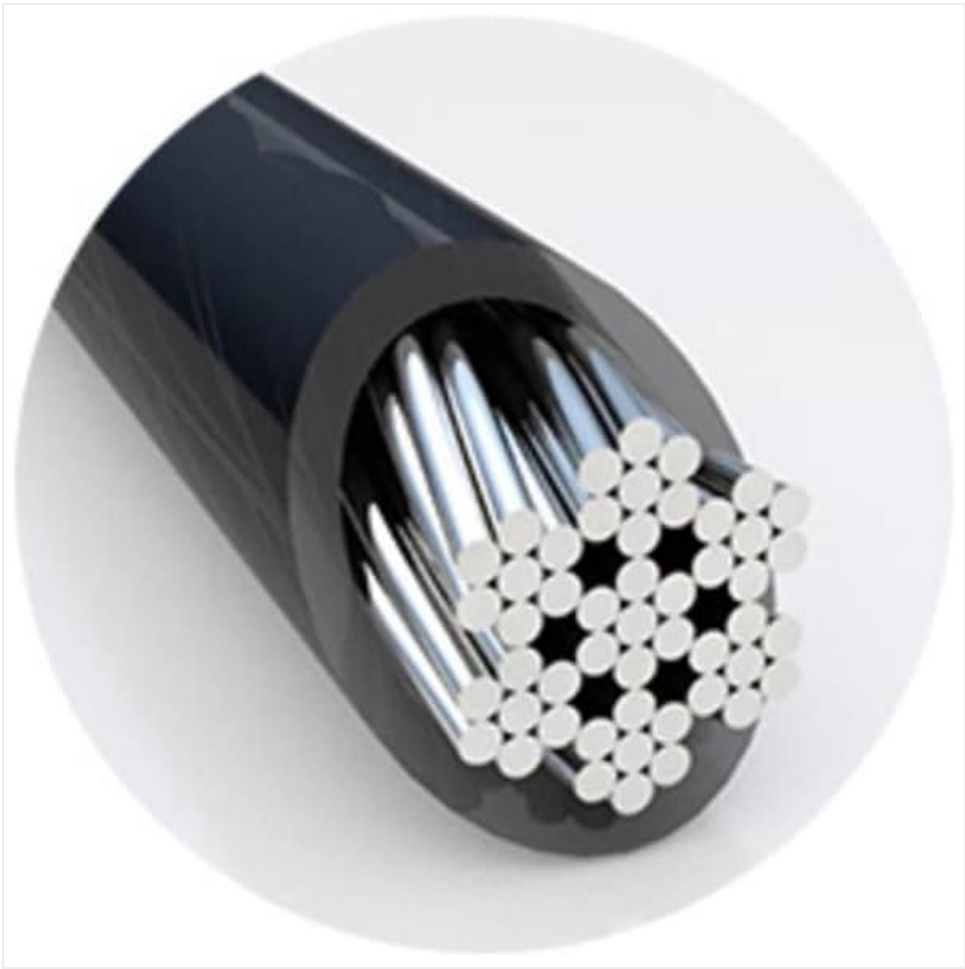


Image: A detailed cross-section illustrating the multiple strands of carbon steel wire within the protective plastic sheath of the security cable.

Warranty and Support

The Kensington ClickSafe Universal Combination Laptop Lock is covered by a **2-Year Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. For technical support, warranty claims, or further assistance, please visit the official Kensington website or contact Kensington customer service. Refer to the contact information provided with your product packaging or on the Kensington website.

Manufacturer Contact Information: Kensington, PE C0B 1M0, CA

