

IKEA Raskog-WH703.767.21

IKEA RÅSKOG Utility Cart User Manual

Model: Raskog-WH703.767.21 | Brand: IKEA

INTRODUCTION

The IKEA RÅSKOG Utility Cart is designed to provide versatile storage in various spaces within your home. Its robust construction and mobile design ensure ease of use and adaptability. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and effective use of your utility cart.

SETUP

Unpacking and Component Check

Before beginning assembly, carefully unpack all components and verify that all parts are present and undamaged. Refer to the included parts list for your specific model.

Assembly Instructions

Follow these steps to assemble your IKEA RÅSKOG Utility Cart and integrate a laptop workstation setup:

- Prepare the Cart:** Drill a hole in the top shelf of the IKEA RÅSKOG Utility Cart to accommodate the post of the monitor mount. Ensure the hole size is appropriate for a secure fit.
- Install Monitor Mount Post:** Insert the monitor mount post through the drilled hole.
- Add Spacers:** Place wood blocks or other suitable spacers beneath the monitor mount's base to provide stability and proper height for the clamp. Books can also be used as temporary spacers.
- Secure Clamps:** Secure the monitor mount's clamps firmly to the cart, ensuring the post is stable and upright.
- Install Height Stopper:** Install the stopper on the monitor mount post to set the desired height for the arm.
- Attach Arm:** Attach the adjustable arm to the monitor mount post.

7. **Attach Laptop Clamp:** Secure the laptop clamp to the end of the adjustable arm. Optionally, a USB-C hub can be glued to the back of the laptop clamp to expand connectivity and power options with a single USB-C connection to your laptop.
8. **Ensure Stability:** Place a heavy object, such as a power station, in the bottom section of the cart. This adds necessary weight to the base, preventing the cart from tipping over when the laptop arm is extended.



Image: The IKEA RÅSKOG Utility Cart, fully assembled and ready for use. This cart features three perforated tiers and four wheels for mobility.

Note: Official product assembly videos from the seller are not available for this specific modification. The assembly steps provided are based on common practices for integrating a laptop workstation with this utility cart.

OPERATING

Adjusting the Laptop Workstation

The adjustable arm allows for flexible positioning of your laptop. Loosen the arm's joints to adjust the height, angle, and distance of your laptop for optimal ergonomic comfort. Re-tighten all joints once the desired position is achieved to ensure stability.

Power and Connectivity

Utilize the optional USB-C hub attached to the laptop clamp to connect multiple peripherals and provide power to your laptop through a single connection. A heavy power station placed in the bottom tier of the cart can serve as a portable power source for your laptop and other accessories, enhancing mobility.

External Display Connection

An HDMI cable can be connected to your laptop via the USB-C hub (if supported) to facilitate connection to a large 4K external monitor, expanding your workspace capabilities.

MAINTENANCE

Cleaning

To maintain the appearance and longevity of your utility cart, wipe it with a dry cloth regularly. Avoid using abrasive cleaners or harsh chemicals that may damage the finish.

Stability Check

Periodically check all clamps and connections on the monitor mount and laptop arm to ensure they remain tight and secure. Verify that sufficient weight is maintained in the bottom section of the cart to prevent instability, especially when the laptop arm is extended or repositioned.

TROUBLESHOOTING

Common Issues

- **Cart Tipping Over:** If the cart feels unstable or tips, ensure that adequate weight (e.g., a heavy power station) is placed in the bottom tier to lower the center of gravity and provide counterbalance.
- **Loose Laptop Arm/Mount:** If the laptop arm or monitor mount becomes loose, re-tighten all securing clamps and bolts. Ensure the post is firmly seated in the drilled hole.
- **Power/Connectivity Issues:** Check all USB-C and HDMI cable connections. Ensure the power station is charged and functioning correctly. Verify that the USB-C hub (if used) is properly connected to both the laptop and peripherals.

SPECIFICATIONS

Feature	Detail
Product Dimensions	13.75"D x 17.75"W x 12.11"H
Shelf Type	Tiered Shelf
Frame Material	Alloy Steel
Brand	IKEA
Color	White
Furniture Finish	Painted/White
Style	Modern
Maximum Weight Recommendation	50 Pounds
Product Care Instructions	Wipe with Dry Cloth
Assembly Required	Yes
Number of Shelves	3
Item Weight	15.4 pounds
Item Model Number	Raskog-WH703.767.21

WARRANTY AND SUPPORT

Warranty information for your IKEA RÅSKOG Utility Cart is typically provided with your purchase documentation. Please refer to those materials for details regarding coverage and terms.

For further assistance, technical support, or to inquire about replacement parts, please contact IKEA customer service directly. Contact information can usually be found on the IKEA website or on your purchase receipt.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question