

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Enbrighten](#) /

› [Enbrighten Wi-Fi Smart Yard Stake, Model 51492 - Instruction Manual](#)

## Enbrighten 51492

# Enbrighten Wi-Fi Smart Yard Stake

Model: 51492

## PRODUCT OVERVIEW

The Enbrighten 6-Outlet Wi-Fi Smart Yard Stake (Model 51492) provides wireless control for your outdoor electrical devices. This heavy-duty smart stake allows you to manage connected lights and appliances through a dedicated app or voice commands, offering convenience for landscape lighting, holiday decorations, and more.





Image: The Enbrighten Wi-Fi Smart Yard Stake, showing its six outlets and integrated ground stake.

## Key Features:

- **Voice Control:** Compatible with popular voice assistants (no hub required).
- **Easy-to-Use App:** Control and schedule devices from your smartphone.
- **2.4GHz Wi-Fi Compatible:** Connects directly to your home Wi-Fi network.
- **Simple Setup:** Quick and straightforward installation process.
- **Heavy-Duty Design:** Built for outdoor use and durability.

## IMPORTANT SAFETY INFORMATION

---

Please read and understand all safety instructions before installing or operating this device. Failure to follow these instructions may result in fire, electric shock, injury, or property damage.

- **Outdoor Use Only:** This product is designed for outdoor use. Do not immerse in water.
- **Grounding:** Ensure the product is properly grounded. Use only with a Ground Fault Circuit Interrupter (GFCI) protected outlet.
- **Electrical Rating:** Do not exceed the electrical ratings of the device or connected appliances.
- **Placement:** Place the stake in a location where it will not be a tripping hazard and is protected from direct water spray from sprinklers.

- **Maintenance:** Unplug the device from the power source before performing any cleaning or maintenance.
- **Children and Pets:** Keep children and pets away from the device and connected cords.
- **Damage:** Do not use if the cord, plug, or housing is damaged.

## SETUP INSTRUCTIONS

---

### 1. Physical Installation

1. **Choose Location:** Select a suitable outdoor location for the yard stake. Ensure it is within range of your 2.4GHz Wi-Fi network.
2. **Insert Stake:** Firmly push the integrated ground stake into soft soil. Ensure the main unit is upright and stable.
3. **Plug In:** Connect the yard stake's power cord to a GFCI-protected outdoor electrical outlet.





Image: The Enbrighten Wi-Fi Smart Yard Stake with its ground stake ready for insertion into the soil.

## 2. App Installation and Wi-Fi Connection

- Download App:** Download the Enbrighten app from your smartphone's app store (iOS or Android).
- Create Account:** Open the app and follow the on-screen instructions to create a new account or log in.
- Add Device:** In the app, select the option to add a new device. Choose the 'Smart Yard Stake' or similar option.
- Connect to Wi-Fi:** Follow the app's prompts to connect the yard stake to your 2.4GHz Wi-Fi network. Ensure your phone is also connected to the 2.4GHz network during setup. *Note: This device is not compatible with 5GHz Wi-Fi networks.*
- Name Device:** Assign a name to your yard stake for easy identification (e.g., "Backyard Lights").

## 3. Voice Assistant Integration (Optional)

If you wish to use voice control, follow these steps:

- Link Account:** Open your voice assistant app (e.g., Amazon Alexa, Google Home).
- Enable Skill:** Search for and enable the "Enbrighten" skill or action.
- Authorize:** Link your Enbrighten account with your voice assistant account.
- Discover Devices:** Ask your voice assistant to discover new devices. Your yard stake should appear.

## OPERATING INSTRUCTIONS

---

### 1. Using the Enbrighten App

The Enbrighten app provides full control over your smart yard stake.

- **Manual Control:** Tap the device icon in the app to turn all connected outlets ON or OFF instantly.
- **Scheduling:** Set custom schedules for your devices to turn ON or OFF at specific times, days of the week, or based on sunrise/sunset.
- **Timers:** Use countdown timers for temporary control.
- **Important Note:** All six outlets on the Enbrighten 51492 Smart Yard Stake operate as a single unit. Individual outlets cannot be controlled independently. When you turn the device ON or OFF, all six outlets will respond simultaneously.





Image: A detailed view of the six power outlets on the Enbrighten Wi-Fi Smart Yard Stake.

## 2. Voice Commands

Once integrated with a voice assistant, you can use simple commands:

- "Alexa, turn on [Device Name]"
- "Hey Google, turn off [Device Name]"
- Replace "[Device Name]" with the name you assigned in the Enbrighten app (e.g., "Backyard Lights").

## MAINTENANCE

---

- **Cleaning:** Disconnect the yard stake from the power source before cleaning. Wipe the exterior with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Weather Protection:** The heavy-duty design is built to withstand outdoor conditions. However, for prolonged periods of extreme weather (e.g., heavy snow, ice storms), consider temporarily relocating or covering the unit.
- **Storage:** When not in use for extended periods, unplug the device and store it in a cool, dry place.

## TROUBLESHOOTING

---

- **Device Not Connecting to Wi-Fi:**
  - Ensure your Wi-Fi network is 2.4GHz. The device does not support 5GHz networks.
  - Check that the yard stake is within range of your Wi-Fi router. Wi-Fi signal strength can be weaker outdoors.
  - Restart your Wi-Fi router and try the connection process again.
  - Confirm your smartphone is connected to the 2.4GHz network during setup.
- **Device Not Responding:**
  - Verify the yard stake is plugged into a working GFCI outlet.
  - Check the app for the device's status. Ensure it shows as online.
  - If using voice control, ensure the Enbrighten skill/action is enabled and your accounts are linked.
  - Unplug the yard stake for 10 seconds and plug it back in to perform a soft reset.

- **Outlets Not Working:**

- Confirm the yard stake is powered ON via the app or voice command.
- Ensure connected devices are properly plugged into the outlets and are functional.
- Remember that all six outlets operate together; individual control is not available.

- **Intermittent Connection Issues:**

- Poor Wi-Fi signal strength is a common cause. Consider moving the yard stake closer to your router or using a Wi-Fi extender.
- Obstructions like walls, trees, or other electronic devices can interfere with the Wi-Fi signal.

## SPECIFICATIONS

---

<b>Model Number</b>	51492
<b>Manufacturer</b>	Jasco Products Company, LLC
<b>Product Dimensions</b>	2.6 x 3.15 x 6.1 inches
<b>Item Weight</b>	1.34 pounds
<b>Color</b>	Green
<b>Style</b>	Heavy-duty
<b>Power Source</b>	AC
<b>Voltage</b>	240 Volts ( <i>Note: Typically for US products, 120V is standard. Please verify compatibility with your local power supply.</i> )
<b>Plug Format</b>	Type B
<b>Special Features</b>	Wireless
<b>Included Components</b>	Yard Stake

## WARRANTY INFORMATION

---

This Enbrighten product is backed by a **5-year limited warranty**. For detailed terms and conditions, please refer to the warranty documentation included with your purchase or visit the manufacturer's official website.

## SUPPORT

---

For further assistance, technical support, or to report issues, please contact Enbrighten customer service. Contact information can typically be found on the product packaging or the official Enbrighten website.

**Online Resources:** Visit the Enbrighten support page for FAQs, additional guides, and software updates.