

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ALLIMITY](#) /

› [ALLIMITY Replacement Remote Control User Manual for LG LCD LED TVs \(Models AKB73615315, AKB73615316, AKB73655806\)](#)

ALLIMITY AKB73615315, AKB73615316, AKB73655806

ALLIMITY Replacement Remote Control User Manual

For LG LCD LED TVs (Models AKB73615315, AKB73615316, AKB73655806)

1. INTRODUCTION

This manual provides instructions for the ALLIMITY replacement remote control, designed for use with various LG LCD LED television models. This remote control operates using infrared (IR) technology and requires no programming; simply insert batteries to begin use.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.





Figure 1: Rear view of the remote control with the battery compartment open for AAA battery insertion. The remote control is now ready for use. No additional programming or pairing is required.

3. OPERATING INSTRUCTIONS

Point the remote control directly towards the infrared sensor on your LG TV. Ensure there are no obstructions between the remote and the TV sensor.





Figure 2: Front view of the remote control displaying various function buttons.

3.1 Basic Functions

- **Power (Red Button):** Turns the TV on or off.
- **TV:** Switches to TV mode.
- **Ratio:** Adjusts the screen aspect ratio.
- **Input:** Selects the input source (e.g., HDMI, AV).
- **Energy Saving:** Activates or deactivates energy-saving modes.
- **Number Buttons (0-9):** Direct channel selection.
- **FLASHBK:** Returns to the previously viewed channel.
- **LIST:** Displays the channel list.
- **FAV:** Accesses favorite channels.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels.
- **MUTE:** Mutes or unmutes the TV audio.
- **3D:** Activates or deactivates 3D mode (if supported by TV).
- **PAGE ^/v:** Navigates through pages in menus or lists.
- **SETTINGS:** Accesses the TV settings menu.
- **INFO:** Displays information about the current program or input.
- **Q.MENU:** Opens the Quick Menu for common settings.
- **Navigation Pad (Up/Down/Left/Right/OK):** Navigates through menus and confirms selections.
- **Back (Curved Arrow):** Returns to the previous screen or menu.
- **AV MODE:** Selects audio/video modes.
- **EXIT:** Exits the current menu or function.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain TV applications or menus.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.

4. COMPATIBLE TV MODELS

This replacement remote control is compatible with a wide range of LG LCD LED TV models. Please refer to the lists below to confirm compatibility with your specific TV model.

4.1 Compatible with AKB73615315

- 32LM5800, 42CM565, 47CM565, 42LM5800, 47LM4600, 47LM5800, 47LM5850, 55LM4600, 55LM5800,

4.2 Compatible with AKB73615316

- 32LS5600, 37LS5600, 42LS5600, 42LS5650, 42PA4900, 47LS4600, 47LS5600, 47LS5650, 50PA4500, 50PA4510, 50PA4900, 50PA5500, 50PA550C, 50PA6500, 55LS4600, 55LS5600, 55LS5650, 60PA5500, 60PA550C, 60PA6500, 32LS5600-UC, 37LS5600-UC, 42LS5600-UC, 42LS5650-UD, 42PA4900-UD, 42PA4900-UF, 47LS4600-UA, 47LS5600-UC, 47LS5650-UD, 50PA4500-UF, 50PA4500-UM, 50PA4510-UC, 50PA4900-UD, 50PA4900-UF, 50PA5500-UA, 50PA5500-UG, 50PA550C-UA, 55LS4600-UA, 55LS5600-UC, 55LS5600-UD, 55LS5650-UD, 60PA5500-UA, 60PA5500-UG, 60PA550C-UA

4.3 Compatible with AKB73655806

- 26CS460, 32CS460, 42CS530, 32CS560, 37CS560, 42CS560, 32CS461, 42PA4500, 32LS3400, 42LS3400, 22LS3500, 26LS3500, 32LS3500, 32LS3450, 42LS3450, 22LS3510, 26LS3510, 32LS3510, 47LS4500, 55LS4500, 32CS461-UA, 32CS460-UC, 42CS530-UB, 32CS560-UE, 37CS560-UE, 42CS560-UE, 22LS3500-UD, 26LS3500-UD, 32LS3500-UD, 32LS3400-UA, 42LS3400-UA, 32LS3450-UA, 42LS3450-UA, 22LS3510-UA, 26LS3510-UA, 32LS3510-UA, 47LS4500-UD, 55LS4500-UD, 50PA450C-UF, 50PA450C-UM

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote control becomes unresponsive or its range decreases significantly. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries or different types of batteries.

5.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics or finish.

6. TROUBLESHOOTING

Issue	Possible Cause	Solution
Remote control is not working.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote control has limited range or intermittent response.	Weak batteries; obstruction between remote and TV sensor; remote sensor on TV is dirty or blocked.	Replace batteries. Ensure a clear line of sight to the TV's IR sensor. Clean the TV's IR sensor if necessary.
Specific buttons are unresponsive.	Dirt or debris under the button; internal malfunction.	Clean the remote control. If the issue persists, the remote may require replacement.

Issue	Possible Cause	Solution
Remote works for some functions but not others.	TV model not fully compatible with all remote functions.	Verify your TV model is listed in the compatibility section. Some advanced TV features may require the original remote.

7. SPECIFICATIONS

- **Product Dimensions:** 7 x 2 x 0.7 inches
- **Item Weight:** 2.82 ounces
- **Batteries Required:** 2 x AAA (not included)
- **Connectivity Technology:** Infrared (IR)
- **Max Number of Supported Devices:** 1 (Television)
- **Compatible Devices:** LG LCD LED Televisions
- **Model Numbers:** AKB73615315, AKB73615316, AKB73655806

8. WARRANTY AND SUPPORT

For any questions or support regarding this ALLIMITY replacement remote control, please refer to the seller's contact information or the platform where the product was purchased. Specific warranty details may vary by retailer.