

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Elekpia](#) /

› NS-RC4NA-16 Universal Remote Control Replacement for All Insignia TV User Manual

## Elekpia NS-RC4NA-16

# User Manual for Elekpia NS-RC4NA-16 Universal Remote Control

Model: NS-RC4NA-16

## INTRODUCTION

---

This manual provides instructions for the setup, operation, and maintenance of your Elekpia NS-RC4NA-16 Universal Remote Control. This remote is designed as a direct replacement for various Insignia LED HDTV models, requiring no programming or pairing.

## PRODUCT OVERVIEW

---



The image above displays the Elekpia NS-RC4NA-16 Universal Remote Control. It is a black, rectangular remote with clearly labeled buttons for power, input, numerical selection, navigation, volume, channel, and media playback.

The model number 'NS-RC4NA-16' is printed at the bottom.

## SETUP

### Battery Installation

The NS-RC4NA-16 remote control requires two (2) 1.5V AAA alkaline batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for immediate use with compatible Insignia TV models, requiring no

additional programming.

## OPERATING INSTRUCTIONS

---

This section details the functions of the buttons on your NS-RC4NA-16 remote control.

- **Power Button** (Top Left): Turns the TV on or off.
- **INPUT Button** (Top Right): Cycles through available input sources (HDMI, AV, Component, etc.).
- **Number Buttons (0-9)**: Used for direct channel selection or numerical input.
- **Dash (-) Button**: Used for entering sub-channels (e.g., 7-1).
- **Return/Recall Button** (Recycle icon): Returns to the previously viewed channel.
- **Navigation Pad (Up, Down, Left, Right Arrows)**: Navigates through menus and options.
- **ENTER Button** (Center of Navigation Pad): Confirms selections in menus.
- **MENU Button** (Left of Navigation Pad): Opens the TV's main menu.
- **EXIT Button** (Left below Navigation Pad): Exits the current menu or screen.
- **INFO\* Button** (Right below Navigation Pad): Displays program information or current status.
- **Home Button** (House icon, Top Right of Navigation Pad): Returns to the TV's home screen or smart TV interface.
- **ASPECT Button**: Adjusts the screen aspect ratio (e.g., 16:9, 4:3).
- **CCD Button**: Activates or deactivates Closed Captioning.
- **VOL +/- Buttons** (Large buttons, Left): Increases or decreases the volume level.
- **MUTE Button** (Center): Mutes or unmutes the TV audio.
- **CH +/- Buttons** (Large buttons, Right): Changes the TV channel up or down.
- **SLEEP Button**: Sets a sleep timer for the TV.
- **FAVORITE Button**: Accesses favorite channels list.
- **GAME Button**: Switches to Game picture mode or activates game-related settings.
- **PICTURE Button**: Cycles through picture modes (e.g., Standard, Movie, Vivid).
- **Media Playback Buttons (Play, Pause, Stop, Rewind, Fast Forward, Previous, Next)**: Controls media playback functions for connected devices or built-in media players.

## COMPATIBILITY

---

This remote control is compatible with the following Insignia TV models:

- NS-19D220MX16
- NS-19D220NA16
- NS-24D220MX16
- NS-24D220NA16
- NS-24D420NA16
- NS-28D220NA16
- NS-28DD220NA16
- NS-32D220NA16
- NS-32D420NA16
- NS-32D421NA16

- NS-32DD220NA16
- NS-39D220NA16
- NS-40D420MX16
- NS-40D420NA16
- NS-43D420NA16
- NS-48D420NA16
- NS-50D420MX16
- NS-50D420NA16
- NS-50D421NA16
- NS-55D420NA16
- NS-55D421NA16
- NS-60E440MX16
- NS-60E440NA16

## SPECIFICATIONS

Feature	Detail
Product Dimensions	6.5 x 1.9 x 0.7 inches
Item Weight	2.71 ounces
Item Model Number	Elekpia NS-RC4NA-16
Brand	Elekpia
Special Feature	Universal
Max Number of Supported Devices	1
Compatible Devices	Television
Connectivity Technology	Infrared
Manufacturer	Elekpia Factory
Date First Available	March 7, 2020

## TROUBLESHOOTING

### Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with proper polarity (+/-) and are not depleted. Replace with new 1.5V AAA alkaline batteries if necessary.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control and the TV's infrared (IR) sensor. Obstructions can block the signal.
- **Distance:** Operate the remote within a reasonable distance from the TV (typically up to 20 feet).
- **TV Compatibility:** Verify that your TV model is listed in the 'Compatibility' section of this manual. This remote is specifically designed for Insignia TVs.

## Specific Buttons Not Working

- **Clean Remote:** Dust or debris might be interfering with button contacts. Gently clean the remote surface.
- **Battery Check:** Even if some buttons work, low battery power can cause intermittent issues. Replace batteries.

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Removal:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage.

## WARRANTY AND SUPPORT

---

This product is a replacement remote control. Please refer to the original product packaging or seller information for details regarding warranty and customer support. Batteries and additional instructions are not included with the remote control.

