

[Manuals.plus](#) /

> [Nova](#) /

> NOVA NG 1152 Cordless Rechargeable Multi Grooming Trimmer User Manual

Nova NG 1152

NOVA NG 1152 Cordless Rechargeable Multi Grooming Trimmer User Manual

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your NOVA NG 1152 Cordless Rechargeable Multi Grooming Trimmer. Please read these instructions carefully before first use and retain them for future reference. The NOVA NG 1152 is designed for versatile personal grooming, offering precision for various hair types and styles.

2. SAFETY INFORMATION

Important Safety Precautions:

- Keep the trimmer away from water. This appliance is not waterproof.
- Use only on dry skin to avoid electric shock or damage to the device.
- Do not immerse the trimmer in water or other liquids.
- Ensure the appliance is switched off before cleaning or maintenance.
- Keep out of reach of children.
- Do not use if the blades are damaged or bent, as this may cause injury.
- Only use the provided charging cable.

3. PACKAGE CONTENTS

The NOVA NG 1152 Multi Grooming Trimmer package includes the following components:

- NOVA NG 1152 Trimmer Unit
- Design Trimmer Head
- Full Size Trimmer Head
- Precision Trimmer Head
- Nose/Ear Trimmer Head
- Micro Shaver Trimmer Head
- 4 Guide Combs (various lengths)
- 1 Adjustable Comb
- Trimmer Stand (Dedicated Grooming Station)
- USB Charging Cable
- Cleaning Brush
- Lubricating Oil (may be included)

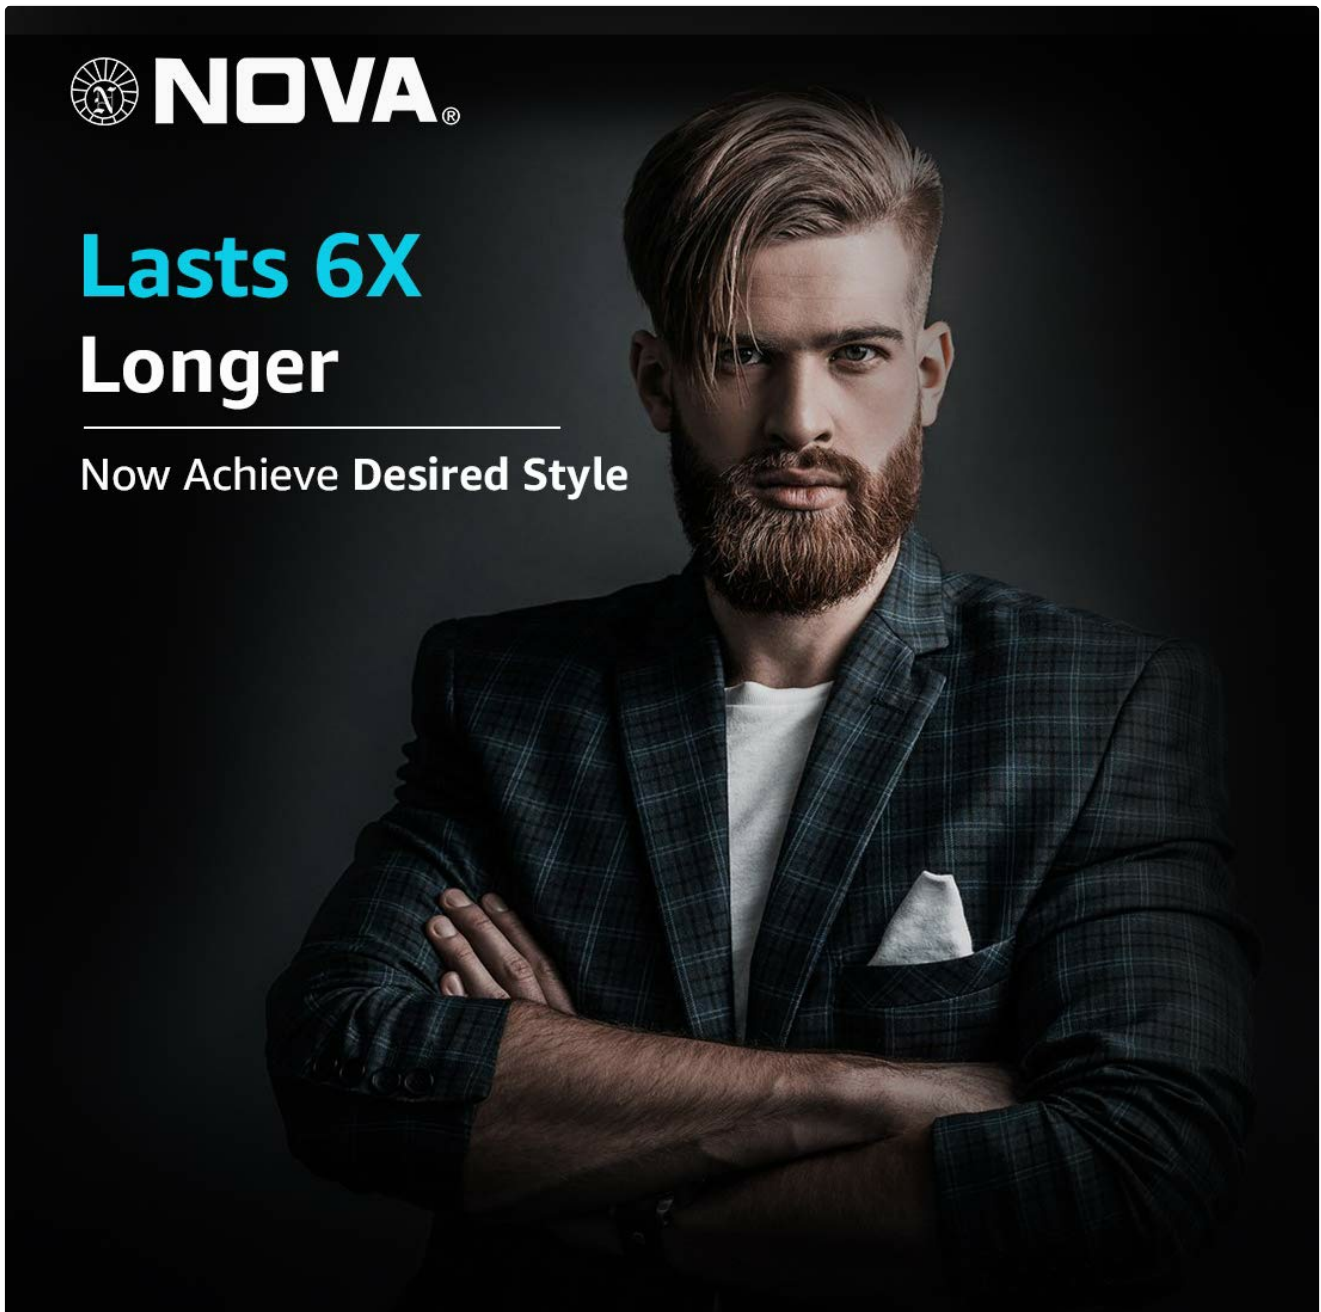


Image 1: NOVA NG 1152 Trimmer and its various attachments, including different trimmer heads, guide combs, and the USB

charging cable.



Image 2: The dedicated grooming station for organizing the trimmer and its attachments.

4. PRODUCT FEATURES

- **Cordless Operation:** Provides flexibility and ease of use without being tethered to an outlet.
- **Rechargeable Battery:** Offers up to 60 minutes of runtime on a full charge.
- **Stainless Steel Blades:** High-precision blades designed for efficient and smooth trimming.
- **Multi-Grooming Capability:** Includes various interchangeable heads for different grooming needs (beard, hair, nose/ear, precision detailing).
- **Multiple Length Settings:** Achieved with various guide combs for desired hair lengths from 0.5mm to 15mm.
- **USB Charging:** Convenient charging via a standard USB cable.



**Stainless Steel
Blades**



5 Length Settings



USB Charging



**Precision
(0.5 to 12mm)**

Image 3: Key features of the NOVA NG 1152 Trimmer, including stainless steel blades, multiple length settings, USB charging, and precision trimming.

5. CHARGING THE TRIMMER

Before first use, fully charge the trimmer for approximately 8 hours. Subsequent charges typically take 1.5 to 4 hours for a full charge, providing up to 60 minutes of cordless runtime.

1. Ensure the trimmer is switched off.
2. Connect the USB charging cable to the charging port at the bottom of the trimmer.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port on a computer.
4. The charging indicator light on the trimmer will illuminate, typically red, to show that it is charging.
5. Once fully charged, the indicator light may change color or turn off, depending on the model. Disconnect the trimmer from the charging cable.

Note: An adapter is not provided; only a USB cable is included for charging.



Image 4: The NOVA NG 1152 Trimmer connected to a USB power source for charging.

6. SETUP AND ASSEMBLY

The trimmer comes with various interchangeable heads and guide combs for different grooming tasks.

6.1 Attaching/Detaching Trimmer Heads

1. To attach a trimmer head, align the head with the main body of the trimmer and gently push it down until it clicks into place.
2. To detach a trimmer head, hold the trimmer body firmly and push the head upwards or press the release button (if available) to remove it.

6.2 Attaching Guide Combs

1. Ensure the desired trimmer head is securely attached to the trimmer body.
2. Select the appropriate guide comb for your desired hair length.
3. Slide the guide comb onto the trimmer head until it locks into position. Ensure it is firmly attached before use.
4. To remove, gently push the comb upwards and off the trimmer head.

7. OPERATING INSTRUCTIONS

Always ensure your skin and hair are clean and dry before trimming. For best results, trim against the direction of hair growth.

7.1 Powering On/Off

- To turn on the trimmer, press the power button located on the front of the device.
- To turn off the trimmer, press the power button again.

7.2 Using Different Trimmer Heads

- **Full Size Trimmer:** Ideal for general beard and hair trimming. Use with or without guide combs for various lengths.
- **Precision Trimmer:** For creating sharp lines and detailed styling around the beard, mustache, or sideburns.
- **Design Trimmer:** Used for intricate designs and patterns in hair.
- **Nose/Ear Trimmer:** Gently insert the trimmer into the nostril or ear canal. Do not insert too deeply.
- **Micro Shaver Trimmer:** For a close finish on small areas, such as edges or detailing.

General Usage Tip: Use the trimmer gently without applying too much pressure on the skin, especially when operating without a comb, to prevent irritation.

NOVA[®]

Multi Grooming Kit



Design Trimmer



Precision Trimmer



Nose/ Ear Trimmer



Micro Shaver Trimmer



Full Size Trimmer

Image 5: Examples of the multi-grooming kit in action, demonstrating the use of different trimmer heads for various areas.



CREATE YOUR OWN STYLE



Stubble
Short



Stubble
Medium



Mutton
Chop



Anchor



French
Fork



Circle
Beard



Winter Beard



Imperial



Beardless

Image 6: Visual guide to various beard styles that can be created or maintained using the trimmer, such as stubble, anchor, and French fork.

8. MAINTENANCE AND CARE

8.1 Cleaning the Trimmer

1. Ensure the trimmer is switched off and disconnected from the charging cable before cleaning.
2. Remove the trimmer head.
3. Use the provided cleaning brush to remove any hair clippings from the blades and the trimmer body.
4. Do not rinse the trimmer body under water. The trimmer heads may be rinsed under running water, but ensure they are completely dry before reattaching.

8.2 Blade Lubrication

The trimmer blades come with a prior lubricant coating. With usage, this lubricant may dry up, potentially causing

increased friction and heating. It is recommended to use a small amount of coconut oil to lubricate the underside of the blade if required. Apply a drop or two to the blades after cleaning and before storage.

8.3 Storage

Store the trimmer and its attachments in the dedicated grooming station in a dry place, away from direct sunlight and moisture, when not in use.

9. TROUBLESHOOTING

- **Trimmer not turning on:** Ensure the battery is charged. Connect to the charger and wait a few minutes before attempting to turn it on.
- **Reduced performance or pulling hair:** The blades may be dull or require lubrication. Clean the blades thoroughly and apply a drop of lubricating oil. If the issue persists, consider replacing the blade head if possible.
- **Short battery runtime:** Ensure the trimmer is fully charged. Battery performance may decrease over time with prolonged use.
- **Overheating:** Clean the blades and ensure they are properly lubricated. Excessive friction can cause heat. If overheating persists, discontinue use and contact customer support.

10. SPECIFICATIONS

Feature	Specification
Model Number	NG 1152
Power Source	Battery Powered (Rechargeable)
Battery Type	1 AA battery required (included)
Charging Time	1.5 - 4 hours (8 hours for first charge)
Run Time	Up to 60 minutes
Blade Material	Stainless Steel
Minimum Cutting Length	0.5 Millimetres
Maximum Cutting Length	15 Millimetres
Connector Type	USB
Item Weight	450 Grams
Product Dimensions (LxWxH)	5.1 x 17.3 x 18.4 Centimeters
Country of Origin	China

11. WARRANTY INFORMATION

The NOVA NG 1152 Multi Grooming Trimmer comes with a **1-year Nova India Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your purchase receipt as proof of purchase for warranty claims. The warranty does not cover damage resulting from misuse, accident, unauthorized service, or normal wear and tear.

12. CUSTOMER SUPPORT

For any queries, service, or support regarding your NOVA NG 1152 Trimmer, please contact:

- **Manufacturer:** NOVA MANUFACTURING INDUSTRIES LTD, HONGKONG
- **Importer:** OMNI EXIM PVT LTD, KATHA BAZZAR, MUMBAI - 400009

Please refer to the product packaging or official Nova website for the most current contact details.