

## TecTake 800774

# TecTake Racing Office Chair Instruction Manual

Model: 800774

## 1. INTRODUCTION

Thank you for choosing the TecTake Racing Office Chair, Model 800774. This manual provides essential information for the safe assembly, operation, and maintenance of your new chair. Please read these instructions carefully before use and retain them for future reference.

## 2. SAFETY INFORMATION

### WARNING:

- Always follow the assembly instructions carefully to ensure the chair is correctly assembled and stable.
- Exercise caution when adjusting the chair's height using the safety gas spring to prevent injuries.
- Do not exceed the maximum weight capacity of 120 kg (264 lbs) to maintain the chair's stability and safety.
- Ensure all screws are tightened securely after assembly and periodically check for any loosening.

## 3. PRODUCT FEATURES

The TecTake Racing Office Chair is designed for comfort and functionality, featuring:

- Modern and ergonomic design.
- Robust and resistant structure.
- Thick padding for comfortable seating.
- Upholstered in soft synthetic leather with breathable mesh inserts.
- Continuously adjustable height with safety gas lift.
- Adjustable tilt mechanism.
- 360-degree rotation.

- Stable base with 5 floor-friendly double castors.
- Curved and resistant armrests.

**tectake**<sup>®</sup>  
OFFICE

**CARACTERÍSTICAS**

**XXL**

**Tapicería extra gruesa**  
para una experiencia de  
asiento extremadamente  
cómoda



**Respaldo ergonómico**  
se adapta perfectamente  
a la espalda



**Cómodo reposacabezas**  
zona de la cabeza y el  
cuello especialmente  
reforzada



**Tejido de malla fina**  
para una mayor  
transpirabilidad



**Altura regulable**  
gracias al estable y seguro  
resorte de gas a presión




**Función de balanceo  
flexible**  
para aliviar la musculatura  
de la espalda



**Base sólida**  
con 5 ruedas dobles  
silenciosas que protegen  
el suelo



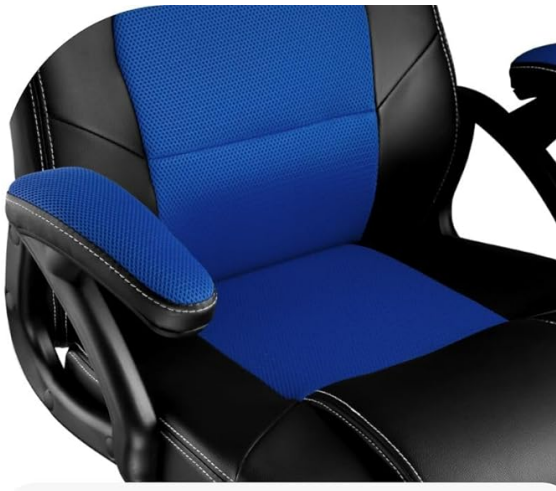 Figure 1: Key features of the TecTake Racing Office Chair.



1. Tapicería muy cómoda y suave



2. Reposabrazos acolchados y curvados



3. Tejido de malla muy transpirable



4. Palanca de altura y respaldo basculante

Figure 2: Detailed view of upholstery, armrests, mesh, and control lever.

## 4. ASSEMBLY INSTRUCTIONS

The TecTake Racing Office Chair is designed for quick and straightforward assembly. Please ensure all components are present before beginning.

### 4.1 Unpacking

1. Carefully remove all components from the packaging.
2. Verify that all parts listed in the included assembly guide are present and undamaged.

### 4.2 Step-by-Step Assembly

Refer to the detailed assembly instructions provided in the box. General steps typically include:

1. Attach the castors to the chair base.
2. Insert the gas lift cylinder into the base.
3. Secure the seat mechanism to the underside of the seat cushion.
4. Attach the armrests to the seat. Note that armrests may be side-specific; ensure correct orientation.

5. Connect the backrest to the seat and armrests. This step may require some force to align holes due to the curved design.
6. Place the assembled seat and backrest onto the gas lift cylinder.

**Tip:** For attaching the backrest to the seat, it may be easier with two people or by positioning the seat on a stable surface with the backrest hanging to apply necessary pressure for screw alignment.

## 5. OPERATING INSTRUCTIONS

---

Your TecTake Racing Office Chair offers several adjustable features to customize your seating experience.

### 5.1 Height Adjustment

To adjust the chair's height:

1. To raise the chair: Lift the lever located under the right side of the seat while taking your weight off the seat. The chair will rise automatically.
2. To lower the chair: Lift the lever located under the right side of the seat while seated. The chair will lower under your weight.
3. Release the lever to lock the chair at the desired height.

### 5.2 Tilt Mechanism

The chair features an adjustable tilt mechanism for reclining:

1. To enable tilt: Pull the same lever used for height adjustment outwards.
2. To lock the chair in an upright position: Push the lever inwards.

The tension of the tilt mechanism can often be adjusted by a knob located under the front of the seat. Turn clockwise to increase tension (making it harder to tilt) and counter-clockwise to decrease tension (making it easier to tilt).





Figure 3: Chair recline range and adjustment points.

### 5.3 360-Degree Rotation

The chair is designed to rotate 360 degrees freely on its base, allowing for easy movement and access within your workspace.

## 6. MAINTENANCE

Proper care and maintenance will extend the life of your TecTake Racing Office Chair.

### 6.1 Cleaning

- For general cleaning, wipe the chair with a damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the synthetic leather and mesh fabric.
- For spills, blot immediately with a clean, dry cloth.

### 6.2 Periodic Checks

- Periodically check all screws and bolts to ensure they are tight. Retighten if necessary to maintain

stability and safety.

- Inspect the castors for any debris (hair, lint) that might hinder smooth movement. Clean as needed.
- Ensure the gas lift operates smoothly. If it becomes stiff or inconsistent, contact customer support.

## 7. TROUBLESHOOTING

If you encounter any issues with your chair, refer to the following common problems and solutions.

### 7.1 Chair Sinks or Does Not Hold Height

- **Cause:** Gas lift cylinder malfunction or lever not fully engaged.
- **Solution:** Ensure the height adjustment lever is fully released after setting the height. If the issue persists, the gas lift cylinder may need replacement. Contact customer support.

### 7.2 Chair Wobbles

- **Cause:** Loose screws or uneven assembly.
- **Solution:** Check and tighten all assembly screws, especially those connecting the seat to the mechanism and the backrest to the seat/armrests. Ensure the chair is on a flat, even surface.

### 7.3 Castors Not Rolling Smoothly

- **Cause:** Debris caught in castors or damaged castors.
- **Solution:** Turn the chair over and carefully remove any hair, lint, or other debris from the castor wheels. If a castor is damaged, it may need replacement.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	800774
Overall Dimensions (W x D x H)	Approx. 65 x 66 x 111.5 – 121.5 cm
Seat Height	Approx. 47 – 57 cm
Seat Surface (W x D)	Approx. 51 x 50 cm
Padding Thickness	Up to 11 cm
Backrest Height	Approx. 68 cm
Armrest Height from Floor	Approx. 67 – 77 cm
Internal Distance Between Armrests	Approx. 49 cm
Base Diameter	Approx. 67 cm
Castor Diameter/Width	Approx. 5 / 5.6 cm
Maximum Load Capacity	120 kg (264 lbs)
Product Weight	Approx. 14.7 kg

Feature	Detail
Materials	Polyurethane (PU), Polyvinyl Chloride (PVC), Polypropylene (PP), Nylon
Color	Black/Blue

### MEDIDAS



**Dimensiones totales**

Anchura: aprox. 65 cm  
Fondo: aprox. 66 cm  
Altura: aprox. 111,5-121,5 cm

**Altura del asiento**  
aprox. 47-57 cm

**Altura del respaldo**  
aprox. 68 cm

**Dimensiones del asiento**  
aprox. 51 x 50 cm



**Capacidad de carga**  
120 kg

**Peso**  
aprox. 14,7 kg

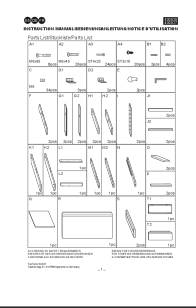 
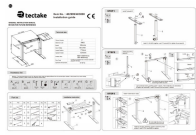 
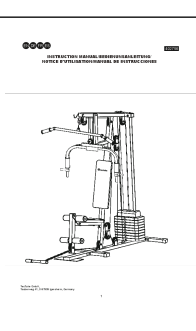 

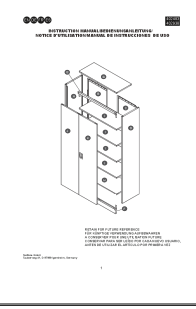 
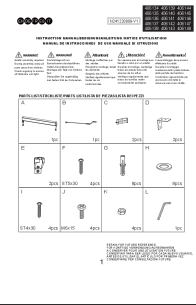 


Figure 4: Detailed product dimensions and weight capacity.

### 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official TecTake website. Keep your proof of purchase for any warranty claims.

Related Documents - 800774

	<p><a href="#">TecTake 400926/400927 Lift Desk Assembly Instructions</a></p> <p>Step-by-step assembly guide for the TecTake 400926 and 400927 lift desk, including a detailed parts list and safety warnings.</p>
	<p><a href="#">tectake Height-Adjustable Desk Frame Installation Guide</a></p> <p>Installation guide for the tectake height-adjustable desk frame (Item No. 402999/403000). Includes technical specifications, parts list, assembly steps, operation, and troubleshooting.</p>
	<p><a href="#">TecTake 402756 Home Gym Assembly and Exercise Guide</a></p> <p>Instruction manual for the TecTake 402756 home gym, covering assembly, safety precautions, and exercise guidance. Includes preparation tips and warm-up/cool-down routines.</p>
	<p><a href="#">TecTake 400777 Semi-Automatic Washing Machine User Manual and Instructions</a></p> <p>This user manual provides comprehensive instructions for the TecTake 400777 semi-automatic washing machine, covering installation, operation, safety guidelines, and maintenance. Learn how to effectively wash and spin your clothes with this efficient appliance.</p>
	<p><a href="#">TecTake Cabinet Assembly Instructions - Models 402483, 402938</a></p> <p>Comprehensive assembly guide for TecTake cabinets (models 402483, 402938), featuring a detailed parts list and step-by-step instructions with textual descriptions of diagrams.</p>
	<p><a href="#">Roller Blind Installation Manual</a></p> <p>Comprehensive instruction manual for the installation of a roller blind, including parts list, assembly steps, and contact information for tectake.</p>