

[Manuals.plus](#) /

› [Lunar](#) /

› Lunar Turntable Belt Instruction Manual for Fisher MT-6010, MT-6020

Lunar GEN-FBM-25-0-M42

Lunar Turntable Belt Instruction Manual

For Fisher Models MT-6010, MT-6020

Model: GEN-FBM-25-0-M42

INTRODUCTION

This document provides comprehensive instructions for the installation, operation, and maintenance of your new Lunar turntable belt. This replacement belt is designed to ensure optimal performance for compatible turntable models, specifically the **Fisher MT-6010** and **Fisher MT-6020**. Proper installation and care are crucial for extending the life of your turntable and maintaining sound quality.

A turntable belt is a critical component that transfers rotational energy from the motor to the platter, allowing records to spin at the correct speed. Over time, belts can stretch, crack, or lose elasticity, leading to inconsistent playback speed or complete failure. Replacing a worn belt restores proper function.

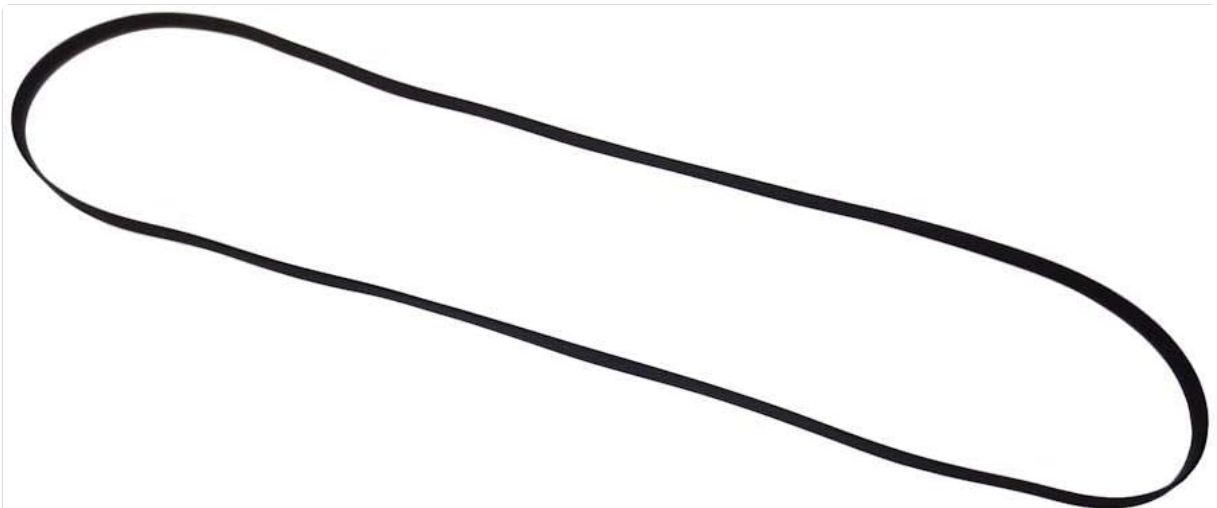


Image: The Lunar turntable belt, a black rubber band designed for precise power transmission in compatible turntables.

SETUP AND INSTALLATION

Before beginning installation, ensure your turntable is unplugged from the power outlet to prevent accidental operation or electrical shock. Handle the new belt with clean hands to avoid transferring oils or dirt, which can affect its performance and lifespan.

1. **Access the Turntable Platter:** Carefully remove the rubber mat from the turntable platter. Depending on your specific Fisher model (MT-6010 or MT-6020), you may need to lift the platter directly or remove a retaining clip/screw. Consult your turntable's original manual if you are unsure how to remove the platter.
2. **Remove the Old Belt:** Locate the old belt, which will likely be stretched, loose, or broken. Gently remove it from around the platter and the motor pulley. Dispose of the old belt responsibly.
3. **Clean the Platter and Pulley:** Use a clean, lint-free cloth and a small amount of isopropyl alcohol to gently clean the surface where the belt sits on the platter and the motor pulley. This removes any residue from the old belt and ensures optimal grip for the new one. Allow to dry completely.
4. **Install the New Belt:**
 - Carefully stretch the new Lunar belt around the inner rim of the turntable platter. Ensure it sits evenly and is not twisted.
 - Locate the motor pulley. While holding the belt on the platter, gently guide a section of the belt over the motor pulley. The belt should be taut but not excessively stretched.
 - Rotate the platter manually a few times to ensure the belt is properly seated on both the platter and the motor pulley and moves smoothly without catching.
5. **Reassemble the Turntable:** Carefully place the platter back onto the spindle, ensuring it is seated correctly. Replace any retaining clips or screws if applicable. Place the rubber mat back on the platter.
6. **Test Operation:** Plug the turntable back into the power outlet. Select a speed (e.g., 33 RPM) and start the turntable. Observe the platter's rotation to ensure it spins smoothly and at a consistent speed.

OPERATING CONSIDERATIONS

Once the new belt is installed, the turntable should operate as intended. The primary function of the belt is to maintain consistent platter speed. If you notice speed fluctuations or inconsistent playback, re-check the belt installation for proper seating and tension.

- Avoid touching the belt directly during operation.
- Ensure the turntable is placed on a stable, level surface to prevent vibrations that could affect belt performance.
- Always turn off the turntable when not in use to prolong the life of the motor and belt.

MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your turntable belt.

- **Periodic Inspection:** Every 6-12 months, or if you notice any performance issues, inspect the belt for signs of wear, stretching, cracking, or brittleness.
- **Cleaning:** If dust or debris accumulates on the belt or motor pulley, carefully clean them using a dry, lint-free cloth. Avoid using harsh chemicals.
- **Storage:** If the turntable will be stored for an extended period, it is advisable to remove the belt to

prevent it from developing flat spots or stretching under constant tension. Store the belt in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Platter not spinning or spinning slowly.	Belt is broken, stretched, or dislodged.	Inspect the belt. Re-seat it if dislodged. Replace if broken or excessively stretched.
Inconsistent playback speed (wow and flutter).	Belt is worn, dirty, or slipping.	Clean the belt and pulley. If the issue persists, the belt may be worn and require replacement.
Belt repeatedly comes off.	Improper installation, platter/pulley misalignment, or incorrect belt size.	Ensure the belt is seated correctly. Verify the belt is the correct size for your model. Check for any physical obstructions or damage to the platter or pulley.

SPECIFICATIONS

- Brand:** Lunar
- Model Number:** GEN-FBM-25-0-M42
- Compatible Devices:** Turntable (Fisher MT-6010, MT-6020)
- Material:** Rubber (typical for turntable belts)
- UPC:** 700387412525
- Item Weight:** Approximately 1.6 ounces (0.1 Pounds)
- Package Dimensions:** 4 x 2 x 1 inches
- Manufacturer:** Lunar

WARRANTY INFORMATION

Specific warranty details for this product are not provided in the available information. For warranty inquiries, please refer to the retailer's return policy or contact the manufacturer directly. Generally, replacement parts like turntable belts may have a limited warranty against manufacturing defects.

CUSTOMER SUPPORT

If you encounter issues not covered in this manual or require further assistance, please contact your retailer or the manufacturer, Lunar, through their official support channels. When contacting support, please have your product model number (GEN-FBM-25-0-M42) and purchase details readily available.

For general information or to find official contact details, you may visit the Lunar brand's website or the platform where the product was purchased.

