

[Manuals.plus](#) /

› [Lunar](#) /

› Lunar Turntable Belt Instruction Manual for JC Penney Models MCS-6500, MCS-6502

Lunar GEN-FBM-23-6-M72

Lunar Turntable Belt Instruction Manual

For JC Penney Models MCS-6500, MCS-6502 and Sanyo Models TP-242A, TP-243A, TP-600SA


INTRODUCTION

This manual provides essential instructions for the proper installation, use, and maintenance of your Lunar turntable belt. This belt is designed to provide reliable power transmission for compatible turntable models, ensuring optimal audio playback quality. Please read these instructions carefully before proceeding with installation or use.

SETUP AND INSTALLATION

Proper installation of the turntable belt is crucial for correct operation. Follow these steps to replace or install your new belt:

1. **Preparation:** Disconnect your turntable from the power source. Carefully remove the turntable platter to expose the motor pulley and the sub-platter (or inner rim of the platter, depending on your model).
2. **Remove Old Belt (if applicable):** If replacing an old belt, gently remove it from the motor pulley and sub-platter. Inspect for any debris or residue and clean the surfaces if necessary.
3. **Install New Belt:** Carefully loop the new Lunar turntable belt around the motor pulley. Then, stretch the belt gently around the sub-platter or the inner rim of the main platter. Ensure the belt is seated evenly and not twisted.

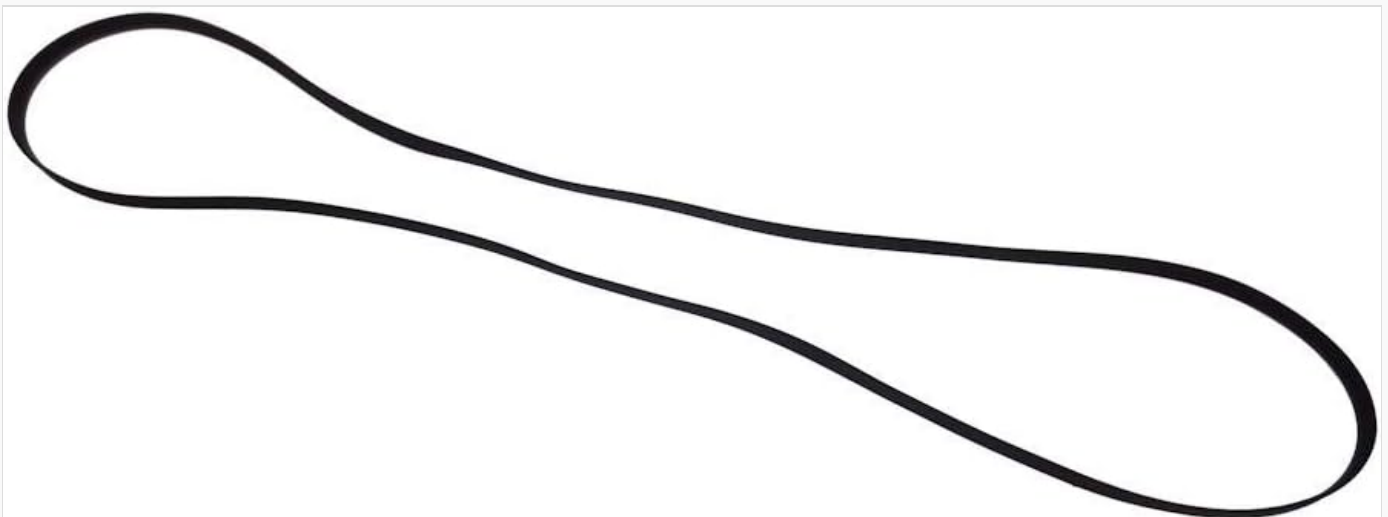

An image showing the black rubber turntable drive belt, designed for smooth rotation of the turntable platter.

4. **Verify Placement:** Gently rotate the sub-platter by hand a few times to ensure the belt remains securely in place on both the motor pulley and the sub-platter.
5. **Reassemble:** Carefully place the main turntable platter back onto the spindle. Ensure it sits correctly and rotates freely.
6. **Test:** Reconnect the turntable to the power source and test its operation at various speeds to confirm the belt is functioning correctly.

OPERATING INSTRUCTIONS

Once the belt is installed, the turntable operates as usual. Ensure the belt is always properly seated before playing records. If you notice any unusual sounds or inconsistent platter speed, re-check the belt's placement and condition.

MAINTENANCE

To ensure the longevity and optimal performance of your turntable belt:

- **Keep Clean:** Periodically inspect the belt, motor pulley, and sub-platter for dust, dirt, or oil. Clean these surfaces gently with a lint-free cloth. Avoid using harsh chemicals.
- **Avoid Stretching:** Do not overstretch the belt during installation or handling, as this can reduce its elasticity and lifespan.
- **Storage:** If the turntable is to be stored for an extended period, it is advisable to remove the belt to prevent it from developing flat spots or losing tension. Store it in a cool, dry place.
- **Replacement:** Belts naturally wear out over time. If you notice a decrease in speed stability, slippage, or if the belt appears cracked or brittle, it is time for a replacement.

TROUBLESHOOTING

If you encounter issues after installing the belt, consider the following:

- **Platter Not Spinning:**
 - Ensure the belt is correctly seated on both the motor pulley and the sub-platter.
 - Check if the motor is receiving power.
- **Inconsistent Speed / Wow and Flutter:**
 - The belt might be dirty or oily; clean it and the pulleys.
 - The belt might be worn out and losing elasticity; consider replacement.
 - Ensure the belt is not twisted.
- **Belt Slipping Off:**
 - Verify the belt is the correct size for your turntable model.
 - Check for any obstructions or uneven surfaces on the motor pulley or sub-platter.

SPECIFICATIONS

Feature	Detail
Brand	Lunar
Model Number	GEN-FBM-23-6-M72

Compatible Turntable Models	JC Penney MCS-6500, MCS-6502; Sanyo TP-242A, TP-243A, TP-600SA
Item Weight	0.176 ounces (0.01 Kilograms)
Package Dimensions	5.79 x 2.83 x 0.35 inches
UPC	700387412815

WARRANTY AND SUPPORT

For warranty information regarding this turntable belt, please refer to the seller or manufacturer's terms of sale. If you require technical assistance or have questions about installation or compatibility, please contact the retailer where the product was purchased. Always ensure your turntable's power is disconnected before performing any maintenance or installation procedures.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question