

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Valberg](#) /

› [Valberg FRS-93T EL Fire Resistant Safe User Manual](#)

Valberg FRS-93T EL

Valberg FRS-93T EL Fire Resistant Safe User Manual

Model: FRS-93T EL

PRODUCT OVERVIEW

The Valberg FRS-93T EL is a fire-resistant safe designed to protect documents and valuables from fire hazards. It features a robust construction with fire-resistant concrete filling, offering 60 minutes of fire protection. The safe is equipped with both an electronic combination lock and a key lock for enhanced security. It includes internal storage features such as a lockable drawer and two height-adjustable shelves.



Image: Valberg FRS-93T EL Fire Resistant Safe, showing the exterior with digital keypad and key lock.

SETUP INSTRUCTIONS

1. Unpacking and Placement

Carefully remove the safe from its packaging. Ensure the safe is placed on a stable, level surface. The safe is equipped with removable wheels for easier positioning. If desired, these wheels can be removed.

2. Battery Installation for Electronic Lock

The electronic lock requires 4 AAA 1.5V batteries (not supplied). These batteries are installed within the safe lock mechanism. Open the safe using the emergency key (if provided) or the factory default code (refer to specific lock instructions if available, otherwise assume it's a new setup). Locate the battery compartment, insert the batteries, and close the compartment.

3. Securing the Safe (Optional)

For added security, the safe can be anchored to the floor. An anchor bolt is not included. Locate the pre-drilled holes at the base of the safe. Use appropriate anchor bolts for your floor type to secure the safe firmly.

OPERATING INSTRUCTIONS

1. Initial Code Setting

Upon first use or after battery installation, you will need to set your personal electronic code. The electronic lock allows for a 4 to 6 digit code combination. Refer to the specific instructions provided with the electronic lock for the exact procedure to set your code. It is crucial to choose a memorable code and keep it confidential.

2. Opening the Safe with Electronic Lock

1. Enter your 4 to 6 digit personal code on the keypad.
2. Press the confirmation button (usually 'E' or '#').
3. If the code is correct, a signal (light/sound) will indicate successful entry. Turn the handle within a few seconds to open the door.

3. Opening the Safe with Key Lock

The safe can also be locked and opened using the key lock. Insert the key into the keyhole and turn it to unlock or lock the safe. This can be used independently or in conjunction with the electronic lock.

4. Closing and Locking the Safe

Close the safe door firmly. Turn the handle to engage the locking bolts. For electronic locking, ensure the handle is turned to the locked position. For key locking, turn the key to the locked position and remove it.

5. Internal Features

- **Adjustable Shelves:** The safe includes two height-adjustable shelves. To adjust, remove the shelves, reposition the shelf supports to the desired height, and place the shelves back.
- **Lockable Drawer:** A convenient lockable drawer is provided for smaller, more sensitive items. Use the dedicated key for this drawer.

MAINTENANCE

1. Battery Replacement

The electronic lock will provide an indication when the batteries are discharged below a permissible level. It is recommended to replace all 4 AAA 1.5V batteries promptly when this indication appears. Even if the batteries are fully discharged, your code will remain stored in the safe's memory.

2. General Care

Clean the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents. Periodically check the

door hinges and locking bolts for smooth operation.

TROUBLESHOOTING

1. Safe Does Not Open with Electronic Code

- Incorrect Code:** Ensure you are entering the correct 4 to 6 digit code.
- Low Batteries:** If the battery low indicator is active or the keypad is unresponsive, replace the 4 AAA 1.5V batteries.
- Automatic Lockout:** After three unsuccessful attempts to open the safe with the electronic lock, the safe will automatically block for a certain period of time. Wait for the lockout period to expire before trying again.
- Emergency Key:** If the electronic lock fails, use the provided key to open the safe.

2. Door Does Not Close Properly

Check for any obstructions around the door frame or hinges. Ensure shelves and contents are not preventing the door from closing completely.

SPECIFICATIONS

Feature	Detail
Brand	Valberg
Model	FRS-93T EL
Type	Fire Resistant Safe
Lock Type	Digital Lock + Key Lock (Electronic Combination Lock)
Fire Protection	60 minutes (GOST P 50862-2005, 60B class)
External Dimensions (H x W x D)	972 x 565 x 450 mm
Internal Dimensions (H x W x D)	786 x 426 x 301 mm
Weight	145 kg
Capacity	98 Liters
Shelves	2, height-adjustable
Power Source (Electronic Lock)	4 x AAA 1.5V batteries (not supplied)
Mounting Type	Floor Mount (anchor bolt not included)
Water Resistance Level	Not Water Resistant

WARRANTY AND SUPPORT

Specific warranty information for the Valberg FRS-93T EL Fire Resistant Safe is not provided in this manual. Please refer to the documentation included with your purchase or contact Valberg customer support for details regarding warranty coverage and technical assistance.

For support, please visit the official Valberg website or contact their authorized service centers.

