

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Xerox](#) /

› [Xerox PrimeLink B9000, B9100, B9110, B9125, B9136 Black Toner Cartridge \(006R01766\) User Manual](#)

Xerox 006R01766

Xerox PrimeLink B9000 Series Black Toner Cartridge (006R01766) User Manual

Model: 006R01766 | Compatible with PrimeLink B9000, B9100, B9110, B9125, B9136

INTRODUCTION

This manual provides essential instructions for the safe and effective installation and maintenance of your Xerox PrimeLink Black Toner Cartridge (Model 006R01766). Please read this manual thoroughly before use to ensure optimal performance and longevity of your printer and toner cartridge.



Image 1: Xerox PrimeLink Black Toner Cartridge (Model 006R01766) shown with its retail packaging. The cartridge is a cylindrical unit, primarily light gray, with a black end cap containing the electrical contacts and gears. The packaging is a brown cardboard box with Xerox branding and product information.

SAFETY INFORMATION

- Keep toner cartridges out of reach of children.
- Do not incinerate used toner cartridges.
- Avoid inhaling toner dust. If toner comes into contact with skin or eyes, wash thoroughly with water.
- Store cartridges in a cool, dry place, away from direct sunlight.

SETUP AND INSTALLATION

Follow these steps to properly install the toner cartridge into your Xerox PrimeLink printer.

1. **Power Off Printer:** Ensure the printer is turned off and unplugged from the power source before beginning installation.
2. **Open Front Cover:** Open the front access cover of your Xerox PrimeLink printer. Refer to your printer's specific manual for exact location.
3. **Remove Old Cartridge (if applicable):** If replacing an existing cartridge, carefully grasp the old toner cartridge and pull it straight out of the printer. Place it in a sealed bag for recycling.
4. **Unpack New Cartridge:** Remove the new Xerox 006R01766 toner cartridge from its packaging. Avoid touching the green drum surface or electrical contacts.
5. **Shake Cartridge:** Gently shake the new toner cartridge horizontally 5-6 times to distribute the toner evenly inside.
6. **Remove Protective Seals:** Carefully remove any protective tapes or seals from the cartridge as indicated by the instructions on the cartridge itself.
7. **Insert New Cartridge:** Align the new toner cartridge with the guide rails inside the printer and push it firmly until it clicks into place.
8. **Close Front Cover:** Close the front access cover of the printer.
9. **Power On Printer:** Plug in and power on the printer. The printer will typically perform a self-test and calibrate the new cartridge.

OPERATING CONSIDERATIONS

Once installed, the toner cartridge operates automatically as part of your printer's system. Monitor toner levels through your printer's control panel or software utility. Replace the cartridge when the printer indicates low toner or print quality degrades significantly.

- **Toner Yield:** This cartridge is designed to yield approximately 71,500 pages based on ISO/IEC 19752 standards. Actual yield may vary significantly based on images printed, print settings, and other factors.
- **Print Quality:** For best print quality, use genuine Xerox paper and ensure your printer's firmware is up to date.

MAINTENANCE

The toner cartridge itself requires minimal maintenance. Focus on maintaining the printer environment.

- **Storage:** Store unused toner cartridges in their original sealed packaging in a cool, dry place.
- **Cleaning:** If toner spills, use a dry cloth to wipe it up. Do not use water, as toner is designed to be water-resistant. A small vacuum cleaner designed for toner spills can also be used.
- **Recycling:** Xerox encourages responsible recycling of used toner cartridges. Visit the official Xerox website for recycling programs and instructions. [Xerox Recycling Program](#)

TROUBLESHOOTING COMMON ISSUES

If you encounter issues after installing the toner cartridge, consider the following:

- **"Toner Low" or "Replace Toner" Message:** Ensure the cartridge is fully seated. If the message persists with a new cartridge, restart the printer. If it's an old cartridge, it's time for replacement.
- **Poor Print Quality (Fading, Streaks):** Gently shake the cartridge horizontally to redistribute toner. Check for any protective seals that might not have been fully removed. Ensure the printer's drum unit (if separate) is clean and functioning correctly.
- **Cartridge Not Recognized:** Power off the printer, remove the cartridge, check for any obstructions or damage to the electrical contacts on both the cartridge and the printer, then reinsert and power on.

For more detailed troubleshooting, refer to your specific Xerox PrimeLink printer's user manual or contact Xerox support.

SPECIFICATIONS

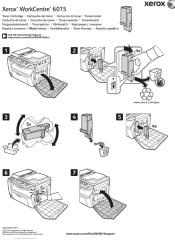
| | |
|----------------------------|---|
| Brand | Xerox |
| Model Number | 006R01766 |
| Compatible Printers | Xerox PrimeLink B9000, B9100, B9110, B9125, B9136 |
| Ink Color | Black |
| Page Yield | Approximately 71,500 pages (ISO/IEC 19752) |
| Item Weight | 5.85 pounds (2.65 kg) |
| UPC | 095205890037 |
| Included Components | 1x Toner Cartridge |

WARRANTY AND SUPPORT

Xerox toner cartridges are typically covered by a limited warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official Xerox website.

For technical support, product information, or to locate authorized service centers, please visit the official Xerox support page:

[Xerox Support Website](#)

| | |
|---|---|
|  | <p>Xerox WorkCentre 6015 Toner Cartridge Replacement Guide</p> <p>Step-by-step instructions for replacing the toner cartridge in a Xerox WorkCentre 6015 printer, including visual descriptions and important notes.</p> |
|  | <p>Xerox Smart Start User Guide</p> <p>A user guide for Xerox Smart Start software, detailing its features, installation process, and troubleshooting for Xerox printers.</p> |
|  | <p>Xerox B230, B225, B235 Printers: Features, Specs, and Benefits for Small Business</p> <p>Explore the Xerox B230 Printer and B225/B235 Multifunction Printers. Discover key features, detailed specifications, and benefits for small businesses and home offices, including speed, connectivity, and cost-effectiveness.</p> |
|  | <p>5</p> <p>Xerox Phaser 3330, WorkCentre 3335/3345 Service Manual: Parts Lists & Maintenance</p> <p>Comprehensive service manual for Xerox Phaser 3330, WorkCentre 3335, and WorkCentre 3345 printers, detailing parts lists, serial number information, and maintenance procedures.</p> |
|  | <p>Xerox AltaLink C80XX Series Color Multifunction Printer User Guide</p> <p>This official user guide from Xerox provides comprehensive instructions for the AltaLink® C80XX Series Color Multifunction Printer. It covers setup, operation, customization, Xerox Apps, core functions like copy, scan, fax, print, maintenance, troubleshooting, and safety guidelines. Visit Xerox support for more details.</p> |
|  | <p>Xerox PrimeLink C9065/C9070 Copier/Printers Security Guide</p> <p>This security guide provides comprehensive information on the security features and functions of the Xerox PrimeLink C9065/C9070 Copier/Printers. It covers aspects like data protection, network security, and device security controls.</p> |