

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VINABTY](#) /

› [VINABTY MKJ32022814 Replacement Remote Control User Manual for LG TVs](#)

VINABTY MKJ32022814

VINABTY MKJ32022814 Replacement Remote Control User Manual

Model: MKJ32022814

INTRODUCTION

This manual provides detailed instructions for the VINABTY MKJ32022814 replacement remote control. It covers setup, button functions, maintenance, and troubleshooting to ensure optimal use with your compatible LG television.

PRODUCT OVERVIEW

The VINABTY MKJ32022814 is a replacement remote control designed for various LG TV models. It offers a direct replacement experience, requiring no programming or setup beyond battery installation.



Image of the VINABTY MKJ32022814 replacement remote control. The remote is black with various grey and colored buttons, including a numeric keypad, navigation controls, and function buttons.

Compatible LG TV Models:

- 50PT85, 50PS8000, 50PC56-ZD
- 47LF65
- 42PT85-ZB, 42PT85, 42LT75-ZA, 42LT75, 42LF65-ZC, 42LC55-ZA, 42LC46-ZC (and its variants), 42LC45-ZA (and its variants), 42LC46, 42LC45
- 37LT75, 37LF65, 37LC45-ZA
- 32LT75-ZA, 32LT75, 32LC56-ZC, 32LC55-ZA, 32LC55, 32LC4D-ZA, 32LC45-ZA, 32LB75-ZB, 32LB75
- 26LC7DC, 26LC55-ZA, 26LC46-ZC, 26LC45-ZA, 26LB76-ZF, 26LB75-ZE

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.

The remote control is now ready for use. No programming or pairing is required.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your VINABTY MKJ32022814 remote control.

Power and Input Selection

POWER (Green button with power symbol): Turns the TV on or off.

INPUT D/A: Selects digital/analog input sources.

TV/RADIO: Switches between TV and Radio modes.

INPUT (Square icon button): Cycles through available input sources.

MODE TV: Sets the remote to control the TV.

DVD: Sets the remote to control a DVD player.

VCR: Sets the remote to control a VCR.

Display and Information

BRIGHT (- / +): Adjusts screen brightness.

SIMPLINK (Text button and icon button): Activates LG Simplink (HDMI-CEC) functions for connected devices.

TEXT: Displays teletext information.

INFO: Displays current program information.

LIVE TV (Green button): Switches to live television broadcast.

Color Buttons (Red, Green, Yellow, Blue)

These buttons perform various functions depending on the on-screen menu or application. Refer to your TV's on-screen guide for specific uses.

Playback Controls

Stop (Square icon): Stops playback.

Play (Green triangle): Starts or resumes playback.

Pause (Two vertical bars): Pauses playback.

Record (Red circle): Initiates recording (if supported by connected device).

Rewind (Double left arrow): Rewinds playback.

Fast Forward (Double right arrow): Fast forwards playback.

Previous Track (Left double arrow with bar): Skips to the previous track/chapter.

Next Track (Right double arrow with bar): Skips to the next track/chapter.

Navigation and Menu Controls

BACK: Returns to the previous menu or screen.

DVR: Accesses Digital Video Recorder functions.

MENU: Opens the main menu.

EXIT: Closes the current menu or function.

GUIDE: Displays the electronic program guide.

Directional Pad (Up, Down, Left, Right Arrows): Navigates through menus and options.

OK: Confirms a selection or enters a menu.

Time Shift

TIME SHIFT: Activates or controls time shift functions (e.g., pausing live TV).

Volume and Channel Controls

VOL (+ / -): Increases or decreases the volume.

PR (+ / -): Changes the channel (Program Up/Down).

MUTE (Crossed-out speaker icon): Mutes or unmutes the audio.

Numeric Keypad and Quick Access

0-9: Directly enters channel numbers or other numerical inputs.

LIST: Displays a list of channels or other content.

Q.VIEW: Quickly switches to the previously viewed channel.

Special Functions

MARK: Marks content or selections.

FAV: Accesses favorite channels or content.

UPDATE: Checks for system updates (TV dependent).

INDEX: Accesses index functions.

TIME: Displays time-related information or functions.

SLEEP: Sets the sleep timer.

HOLD: Holds teletext pages.

REVEAL: Reveals hidden teletext information.

SUBTITLE: Toggles subtitles on or off.

RATIO: Changes the screen aspect ratio.

I/II: Selects audio language or dual sound modes.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place.

TROUBLESHOOTING

Remote control is not responding:

Ensure the batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new ones. Check for any obstructions between the remote and the TV's infrared sensor.

Some buttons are not working:

Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris. If the issue persists, the button may be faulty, or the TV model may not support that specific function.

Missing 'Home' button functionality:

For some LG Smart TV models, the 'DVR' button on this remote may function as the 'Home' button. Test this button to see if it brings up the Smart TV home screen.

SPECIFICATIONS

Brand	VINABTY
Model Number	MKJ32022814
Color	Black
Connectivity Technology	Infrared
Special Features	No programming required, Ergonomic design
Compatible Devices	Television (various LG models)
Number of Buttons	25
Controller Type	Button Control
Maximum Range	10 Meters
Batteries Required	2 AAA batteries

WARRANTY AND SUPPORT

This product comes with a 90-day warranty. If you encounter any issues or require assistance with your VINABTY MKJ32022814 remote control, please contact the seller or manufacturer directly for support, exchange, or refund options.

