

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ROMOSS](#) /

› [ROMOSS Large Capacity Portable Charger User Manual](#)

## ROMOSS Large Capacity Portable Charger

**ROMOSS**  
CHARGING MASTER

# ROMOSS Large Capacity Portable Charger User Manual

Model: Large Capacity Portable Charger (ASIN: B085RSRFQS)

## 1. INTRODUCTION

Thank you for choosing the ROMOSS Large Capacity Portable Charger. This device is designed to provide reliable and efficient power to your mobile devices on the go. Please read this manual carefully before use to ensure proper operation and to maximize the lifespan of your product.

## 2. SAFETY INFORMATION

To prevent injury or damage to your device, please observe the following safety precautions:

- Do not expose the power bank to extreme temperatures (above 60°C/140°F or below 0°C/32°F).
- Avoid dropping, disassembling, or attempting to repair the device yourself.
- Keep away from water, moisture, and flammable materials.
- Use only certified charging cables and adapters.
- Keep out of reach of children.
- Dispose of the product responsibly according to local regulations.

## 3. PRODUCT OVERVIEW

The ROMOSS Large Capacity Portable Charger features multiple ports for versatile charging and an LED indicator for battery status.



*Image: Front view of the ROMOSS Portable Charger, showing input/output ports and LED battery indicators.*

## Components:

- **Power Button:** Press once to check battery level, press and hold to activate/deactivate (if applicable).
- **LED Indicators:** Display the remaining battery capacity.
- **Input Ports:** Used to charge the portable charger itself (e.g., Type-C, Micro USB, Lightning).
- **Output Ports:** Used to charge other devices (e.g., USB-A, Type-C).

## 4. SETUP

### 4.1 Initial Charge

Before first use, fully charge your ROMOSS portable charger. This ensures optimal battery performance and accuracy of the battery indicator.

1. Connect the portable charger to a power source (e.g., wall adapter, computer USB port) using a compatible charging

cable (e.g., Type-C cable).

2. The LED indicators will illuminate to show the charging progress.
3. Once all LED indicators are solid, the portable charger is fully charged. Disconnect it from the power source.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Charging Your Devices

To charge your mobile phone, tablet, or other USB-powered devices:

1. Connect your device to an output port on the portable charger using its charging cable.
2. The portable charger should automatically begin charging your device. If not, press the power button once.
3. The LED indicators will show the remaining battery level of the portable charger during charging.
4. Once your device is fully charged, disconnect it from the portable charger.

### 5.2 Checking Battery Level

To check the remaining battery capacity of the portable charger:

- Press the power button once.
- The LED indicators will light up, showing the current battery level. For example, four solid LEDs typically indicate a full charge, while one blinking LED indicates a low battery.

## 6. MAINTENANCE

---

### 6.1 Cleaning

Wipe the portable charger with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.

### 6.2 Storage

Store the portable charger in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the device to approximately 50-75% capacity every three months to maintain battery health.

### 6.3 Battery Care

To prolong battery life, avoid fully discharging the portable charger frequently. It is recommended to recharge it before it completely runs out of power.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Portable charger not charging	Cable issue, power source issue, or charger fault.	Try a different charging cable and wall adapter. Ensure the power source is active.
Device not charging from portable charger	Portable charger is out of power, cable issue, or device compatibility.	Recharge the portable charger. Try a different charging cable. Ensure your device is compatible with USB charging.
Slow charging	Cable quality, device input limit, or portable charger output limit.	Use a high-quality charging cable. Check if your device supports faster charging. Ensure the portable charger's output port supports the desired speed.

Problem	Possible Cause	Solution
LED indicators not working	Device fault.	If the device is still charging/discharging normally, this might be a minor fault. If not, contact customer support.

If you encounter issues not listed here or if the problem persists, please contact ROMOSS customer support.

## 8. SPECIFICATIONS

Feature	Detail
Brand	ROMOSS
Model	Large Capacity Portable Charger
ASIN	B085RSRFQS
Input	Type-C (specific voltage/current not provided in source data)
Output	USB-A, Type-C (specific voltage/current not provided in source data)
Certification	PSE Certified
First Available Date (Amazon.co.jp)	July 25, 2019

## 9. WARRANTY AND SUPPORT

ROMOSS products come with a standard warranty. For detailed warranty information, please refer to the warranty card included with your product or visit the official ROMOSS website. For technical support, troubleshooting assistance, or warranty claims, please contact ROMOSS customer service through their official channels.

You can find more information and contact details on the [ROMOSS Brand Store on Amazon](#).