

Behringer 140 DUAL ENVELOPE/LFO

Behringer 140 Dual Envelope/LFO Eurorack Module User Manual

Model: 140 DUAL ENVELOPE/LFO

Brand: Behringer

1. INTRODUCTION

The Behringer 140 Dual Envelope/LFO is a versatile Eurorack module designed to provide two independent ADSR (Attack, Decay, Sustain, Release) envelope generators and a powerful Low Frequency Oscillator (LFO). This module is an essential tool for shaping the dynamics of your sounds and creating complex modulations within your modular synthesis system. Its intuitive controls and robust design make it suitable for both beginners and experienced modular enthusiasts.



Figure 1: Front panel of the Behringer 140 Dual Envelope/LFO module. This image shows the layout of the two envelope sections at the top and middle, and the LFO section at the bottom, with all controls and jacks clearly visible.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read and follow these safety instructions carefully to ensure safe operation and to prevent damage to the module or your Eurorack system.

- **Power Supply:** Only connect the module to a Eurorack power supply that meets the required specifications (+12V, -12V, +5V if applicable) and provides sufficient current. Incorrect power can damage the module.
- **Installation:** Ensure your Eurorack case is powered off before installing or removing any modules. Always connect the ribbon cable correctly, paying attention to the red stripe indicating -12V.
- **Environment:** Do not expose the module to water, moisture, excessive heat, or direct sunlight. Operate in a dry, temperate environment.
- **Servicing:** Do not attempt to service this module yourself. Refer all servicing to qualified service personnel.
- **Connections:** Use high-quality patch cables for all connections. Avoid excessive force when inserting or removing cables.

3. SETUP

3.1 Unpacking

Carefully remove the Behringer 140 module from its packaging. Verify that all components are present:

- Behringer 140 Dual Envelope/LFO module
- Ribbon power cable
- Mounting screws

3.2 Module Installation

To install the 140 module into your Eurorack case:

1. Ensure your Eurorack case's power supply is turned **OFF**.
2. Locate an available space in your Eurorack case that matches the module's width.
3. Connect the ribbon power cable to the module's power header. The red stripe on the ribbon cable indicates the -12V line and should align with the corresponding pin on the module's power header (usually marked with a white stripe or 'RED STRIPE -12V').
4. Connect the other end of the ribbon cable to your Eurorack power bus board, again ensuring the red stripe aligns with the -12V pin.
5. Carefully place the module into the desired position in your Eurorack case.
6. Secure the module using the provided mounting screws. Do not overtighten.
7. Once installed, you can power on your Eurorack system.



Figure 2: Angled view of the Behringer 140 module, showcasing its compact design and the rear power connector. This perspective helps visualize how the module fits into a Eurorack system.

4. OPERATING INSTRUCTIONS

4.1 Overview of Controls

The Behringer 140 module is divided into three main sections: two identical ADSR Envelope Generators (ENV 1 and ENV 2) and one Low Frequency Oscillator (LFO).



Figure 3: Top-down view of the Behringer 140 module, highlighting the clear labeling of each control and input/output jack for easy identification during operation.

4.2 Envelope Generators (ENV 1 & ENV 2)

Each envelope generator is an ADSR type, meaning it has four stages: Attack, Decay, Sustain, and Release. These stages control how a sound evolves over time.

- **MANUAL GATE Button:** Pressing this button manually triggers the envelope, allowing you to test the envelope shape without an external gate signal.
- **GATE IN Jack:** Connect a gate or trigger signal from another module (e.g., a sequencer or keyboard) to initiate the envelope cycle.
- **A (Attack) Slider:** Controls the time it takes for the envelope to reach its peak level after being triggered.
- **D (Decay) Slider:** Controls the time it takes for the envelope to fall from its peak level to the Sustain level.
- **S (Sustain) Slider:** Controls the level at which the envelope holds as long as the gate signal is high. Unlike Attack and Decay, Sustain is a level, not a time.
- **R (Release) Slider:** Controls the time it takes for the envelope to fall from the Sustain level (or current level if the gate is released during Attack/Decay) to zero after the gate signal goes low.
- **ENV OUT Jack:** Outputs the generated envelope voltage, which can be patched to control parameters like VCA amplitude, filter cutoff, or pitch.

4.3 Low Frequency Oscillator (LFO)

The LFO section generates periodic control voltages at sub-audio frequencies, ideal for creating rhythmic or evolving modulations.

- **FREQ CV IN Jack:** Accepts an external control voltage to modulate the LFO's frequency.
- **TRIGGER Switch:** This switch can be used to reset the LFO cycle.
- **FREQ RANGE Switch (HIGH/MID/LOW):** Selects the overall frequency range of the LFO. Use HIGH for faster modulations, LOW for very slow, evolving changes.
- **FREQ Slider:** Adjusts the LFO's frequency within the selected range.
- **DELAY Slider:** Controls the time it takes for the LFO to reach its full amplitude after being triggered.

- **WAVEFORM Knob:** Selects one of five available LFO waveforms: Sine, Triangle, Square, Ramp, and Sawtooth. Each waveform has a distinct characteristic for modulation.
- **OUTPUT LEVEL Slider:** Adjusts the amplitude (strength) of the LFO output voltage.
- **LFO OUT Jack:** Outputs the generated LFO voltage, which can be patched to modulate various parameters in your modular system.

4.4 Basic Operation Examples

Here are some basic patching ideas to get started:

- **Amplitude Modulation:** Patch an ENV OUT to the CV input of a VCA (Voltage Controlled Amplifier) and the VCA's output to your mixer. This will shape the volume of your sound.
- **Filter Sweeps:** Patch an ENV OUT or LFO OUT to the CV input of a VCF (Voltage Controlled Filter) to create dynamic filter sweeps.
- **Pitch Modulation (Vibrato/Glide):** Patch an LFO OUT (especially Sine or Triangle waveform) to the 1V/Oct input of a VCO (Voltage Controlled Oscillator) for vibrato effects. For glide, use an envelope.
- **Rhythmic Effects:** Use a Square wave LFO to trigger another module, or to create rhythmic on/off patterns with a VCA.

5. MAINTENANCE

The Behringer 140 module is designed for durability and requires minimal maintenance. Follow these guidelines to keep your module in optimal condition:

- **Cleaning:** Use a soft, dry cloth to wipe down the module's front panel. For stubborn dirt, a slightly damp cloth with a mild cleaning solution can be used, but ensure no liquid enters the module. Avoid abrasive cleaners.
- **Dust:** Regularly remove dust from the module and your Eurorack case using a soft brush or compressed air. Dust accumulation can affect performance and longevity.
- **Storage:** If storing the module outside of a Eurorack case, keep it in an anti-static bag or a protective container to prevent dust and static damage.
- **Jacks and Sliders:** Keep all jacks and sliders free from dust and debris. Avoid spraying contact cleaner directly into the module unless specifically instructed by a qualified technician.

6. TROUBLESHOOTING

If you encounter issues with your Behringer 140 module, consult the table below for common problems and their solutions.

Problem	Possible Cause	Solution
No output from Envelope Generator	No gate signal received or ADSR settings are too short.	Ensure a gate signal is connected to the GATE IN jack or press the MANUAL GATE button. Adjust Attack, Decay, and Release sliders to longer times.
LFO not oscillating or very slow	FREQ slider is too low or FREQ RANGE switch is set to LOW.	Increase the FREQ slider. Try setting the FREQ RANGE switch to MID or HIGH.

Problem	Possible Cause	Solution
Module not powering on	Incorrect power cable connection or insufficient power from the Eurorack case.	Turn off case power. Verify the ribbon cable is connected correctly (red stripe to -12V) on both the module and the bus board. Check your case's power supply capacity.
Unexpected behavior or erratic output	Loose connections, static discharge, or module conflict.	Ensure all patch cables are securely connected. Power cycle your Eurorack system. If the issue persists, try the module in a different slot or with fewer modules connected.

7. SPECIFICATIONS

Detailed technical specifications for the Behringer 140 Dual Envelope/LFO module:

 
Feature	Detail
Model	140 DUAL ENVELOPE/LFO
Module Type	Dual Envelope Generator / LFO
Envelope Types	ADSR (Attack, Decay, Sustain, Release)
LFO Waveforms	Sine, Triangle, Square, Ramp, Sawtooth
Dimensions (L x W x H)	6.15 x 3.85 x 2.05 inches (156 x 98 x 52 mm)
Item Weight	8.2 ounces (0.23 kg)
Color	Grey
Connector Type	Auxiliary (for patch cables)
Manufacturer	Music Tribe

8. WARRANTY AND SUPPORT

Behringer products are built to high standards and come with a limited warranty. For specific warranty terms and conditions, please refer to the warranty information provided with your purchase or visit the official Behringer website. For technical support, service, or to find authorized service centers, please visit the Behringer support page on their official website. You can also find FAQs, drivers, and software updates there.

Online Support: www.behringer.com



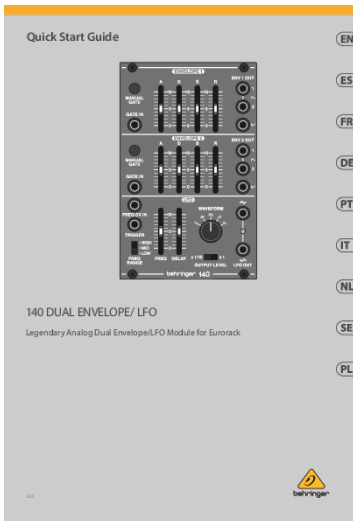


[\[pdf\] Quick Start Guide Specifications Guide](#)

Quick Start Guide 140 DUAL ENVELOPE LFO LFO_QSG_WW mediadl musictribe media PLM data docs P0DVD

Quick Start Guide 140 DUAL ENVELOPE/ LFO Legendary Analog Dual Envelope/LFO Module for Eurorack V 2.0 2 140 DUAL ENVELOPE/ LFO LEGAL DISCLAIMER DNI LGAL LEGAL RENUNCIANTE Music Tribe accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon ...


lang:es score:53 filesize: 1.12 M page_count: 13 document date: 2021-04-08

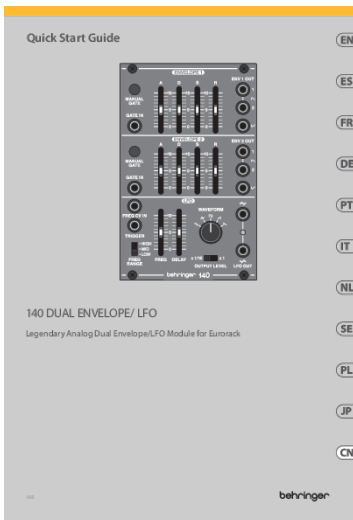

[Behringer 140 Dual Envelope/LFO Module Quick Start Guide](#)

Get started quickly with the Behringer 140 Dual Envelope/LFO Eurorack module. This guide provides essential setup and operational information for this legendary analog dual envelope and LFO module, enabling users to easily integrate it into their modular synthesizer systems.


lang:en score:51 filesize: 1.13 M page_count: 16 document date: 2024-04-16

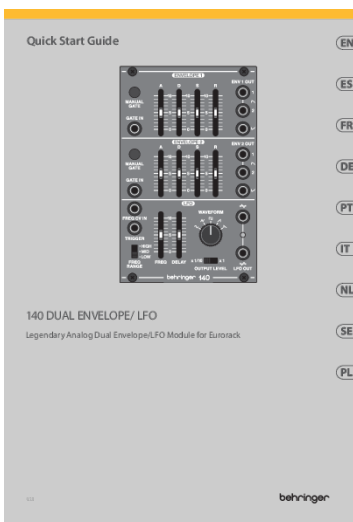

[Behringer 140 Dual Envelope/LFO Module Quick Start Guide](#)

Quick start guide for the Behringer 140 Dual Envelope/LFO module, detailing its controls, power connection, installation, and specifications for Eurorack systems.

lang:es score:51 filesize: 327.67 K page_count: 13 document date: 2023-06-16

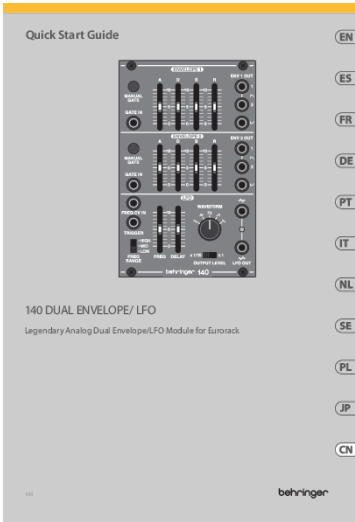


[\[pdf\]](#) Quick Start Guide Installation Guide Instructions Specifications Guide Accessories

Quickstart Guide1 1 MBBehringer 140 Dual Envelope LFO Module DUAL ENVELOPE B

Hv1bphotovideo lit files 1192870 |||

Quick Start Guide 140 DUAL ENVELOPE/ LFO Legendary Analog Dual Envelope/LFO Module for Eurorack V 4.0 2 140 DUAL ENVELOPE/ LFO EN Safety Instruction 1. Please read and follow all instructions. 2. Keep the apparatus away from water, except for outdoor products.. 3. Clean only with a dry cloth. 4...

 lang:en score:39 filesize: 1.13 M page_count: 16 document date: 2024-04-16

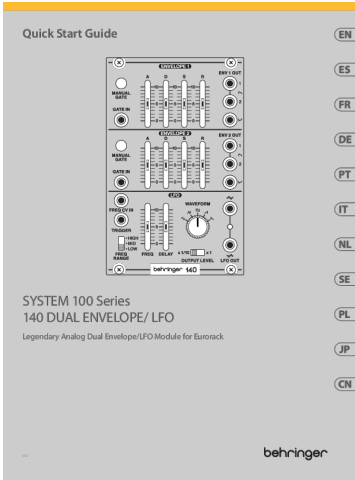

[\[pdf\]](#) Quick Start Guide Installation Guide Instructions Specifications Guide Accessories


SYSTEM 100 Series 140 DUAL ENVELOPE LFO MediaValet Legendary Analog Dual Envelope

Behringer Bugera Aston Microphones e Coolaudio são marcas ou marcas QSG BE 0720 AAD WW cdn

mediavalet aunsw musictribe UjGPV6VShkODXIQzNmTvWQ I KFGt070GLD8Vy o 49w Original |||

Quick Start Guide SYSTEM 100 Series 140 DUAL ENVELOPE/ LFO Legendary Analog Dual Envelope/LFO Module for Eurorack V 5.0 2 140 DUAL ENVELOPE/ LFO EN Safety Instruction 1. Please read and follow all instructions. 2. Keep the apparatus away from water, except for outdoor products. 3. Clean only wi...

 lang:en score:37 filesize: 1.52 M page_count: 17 document date: 2024-11-26

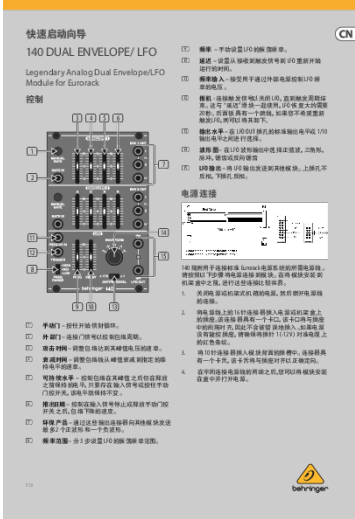


[\[pdf\]](#) Quick Start Guide Warranty

140 DUAL ENVELOPE LFO LFO_QSG_CN mediadl musictribe media PLM data docs P0DVD

140 DUAL ENVELOPE/ LFO Legendary Analog Dual Envelope/LFO Module for Eurorack 3 4 5 6 1 7 2 9 LFO 10 LFO 11 LFO 12 - LFO LFO 20 LFO 13 LFO OUT 1/10 14 LFO 15 LFO LFO 11 14 12 15 8 9 10 13 1 2 ...

lang:id score:37 filesize: 1.02 M page_count: 2 document date: 2021-04-08

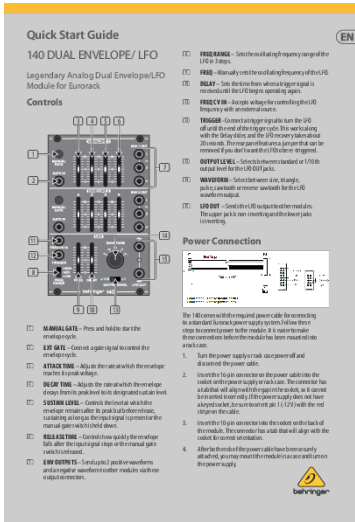


[pdf] User Manual Quick Start Guide Guide

CREA DOCU1 PH1 QSG P0DVD 140 DUAL ENVELOPE LFO EN A5 2019 10 30 Rev 6 indd john elona
Quick Start Guide FREQ RANGE Music Tribe Manual gate switch Envelope cycle start Frequency range
low 0 05 1 8 Hz mid 2 9 high 5 frequency Delay operation delay 7 s Waveform rotary Sine triangle pulse
sawtooth rev Output level V pk Power supply Eurorack Legendary Analog Dual Module for Controls
MANUAL GATE Press and hold to the comes with the required power cable connecting Tannoy
Turbosound TC Electronic Helicon Behringer Bugera Auratone mediadl musictribe media PLM data docs
media63 music group

Quick Start Guide 140 DUAL ENVELOPE/ LFO Legendary Analog Dual
Envelope/LFO Module for Eurorack Controls 3 4 5 6 1 7 2 11 14 12 15 8 8 FREQ
RANGE Sets the oscillating frequency range of the LFO in 3 steps. 9 FREQ Manually
sets the oscillating frequency of the LFO....

 
lang:en score:36 filesize: 475.72 K page_count: 2 document date: 2019-10-30

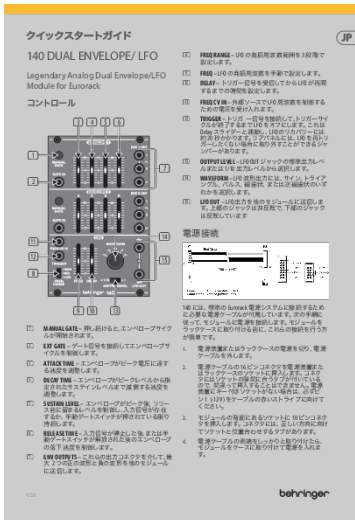

[pdf] User Manual Quick Start Guide

140 DUAL ENVELOPE LFO QSG BE 0720 AAD JP mediadl musictribe media PLM data docs P0DVD |||
140 DUAL ENVELOPE/ LFO Legendary Analog Dual Envelope/LFO Module for
Eurorack 3 4 5 6 1 7 2 11 14 12 15 8 8 FREQ RANGE LFO 3 9 FREQ LFO 10 DELAY
LFO 11 FREQ CV IN LFO 12 TRIGGER LFO Delay LFO 20 LFO 13 OUTPUT LEVEL
LFO OUT 1/10 ...

lang:es score:36 filesize: 212.45 K page_count: 2 document date: 2023-06-16

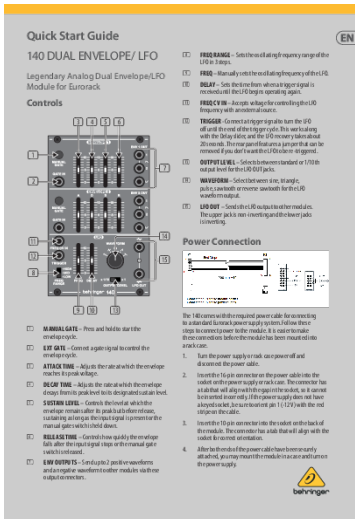

[pdf] User Manual Quick Start Guide Guide

CREA DOCU1 PH1 QSG P0DVD 140 DUAL ENVELOPE LFO EN A5 2019 10 30 Rev 6 indd john elona
Behringer Dual Envelope USAViewProductAttachment ResolveManualURLmusicstore INTERSHOP web
WFS MusicStore MusicStoreShop Site en US ms us USD ViewProductAttachment ResolveManualURL
File SYN0007424 000 |||
Quick Start Guide 140 DUAL ENVELOPE/ LFO Legendary Analog Dual
Envelope/LFO Module for Eurorack Controls 3 4 5 6 1 7 2 11 14 12 15 8 8 FREQ
RANGE Sets the oscillating frequency range of the LFO in 3 steps. 9 FREQ Manually
sets the oscillating frequency of the LFO....

lang:en score:31 filesize: 475.72 K page_count: 2 document date: 2019-10-30



[\[pdf\]](#)

Behringer 140 Dual Envelope LFO MUSIC STORE professional ViewProductAttachment

ResolveManualURL File DE SYN0007424 000 musicstore de INTERSHOP web WFS MusicStore

MusicStoreShop Site EUR |||

...

lang:en score:19 filesize: 734.34 K page_count: 0 document date: 0000-00-00