

[Manuals.plus](#) /

› [WONNIE](#) /

› WONNIE 17.9" Portable DVD/CD Player User Manual

WONNIE W-1458

WONNIE 17.9" Portable DVD/CD Player User Manual

Model: W-1458

1. INTRODUCTION

Thank you for choosing the WONNIE 17.9" Portable DVD/CD Player. This device is designed to provide a versatile and enjoyable media experience on the go, featuring a large 15.4-inch HD swivel screen, long-lasting rechargeable battery, and support for various media formats. This manual will guide you through the setup, operation, and maintenance of your new portable DVD player.



The WONNIE 17.9" Portable DVD/CD Player and its remote control.

2. PRODUCT FEATURES

- **Swivelable HD Screen:** Features a 17.9-inch full-size unit with a 15.4-inch widescreen display (1366x768 TFT LCD) that can rotate 270° and flip 180° for optimal viewing angles.



BIGGER IS BETTER

***15.4" HD Larger Display Screen for More
Breathtaking Experience***

The 15.4-inch HD display provides a clear and immersive viewing experience.

- **Long-lasting Rechargeable Battery:** Equipped with a built-in 5000mAh Li-polymer battery providing approximately 6 hours of playback. Includes an AC adapter and car charger for flexible power options.

BUILD-IN RECHARGEABLE BATTERY

Enjoy The Happiness Brought By Movies And Music Anytime, Anywhere

Great For Kids Car Road Trips



3 Charger Systems



Enjoy movies and music anywhere with the built-in rechargeable battery and included chargers.

- **Dual Powerful Stereo Speakers:** Integrated stereo speakers deliver clear audio. A headphone jack is also available for private listening.

BUILT-IN DUAL STEREO SPEAKERS

Hearing Every Moment Loud and Clear




The dual stereo speakers provide a rich audio experience.

- **Sync Screen & Last Memory Function:** Connect to a TV or projector using the provided RCA cable for a larger viewing experience. The last memory function resumes playback from where you left off.

ENJOY WONDERFUL FAMILY MOVIE TIME

Sync Screen to TV with the 3.5mm RCA Cable (Included)

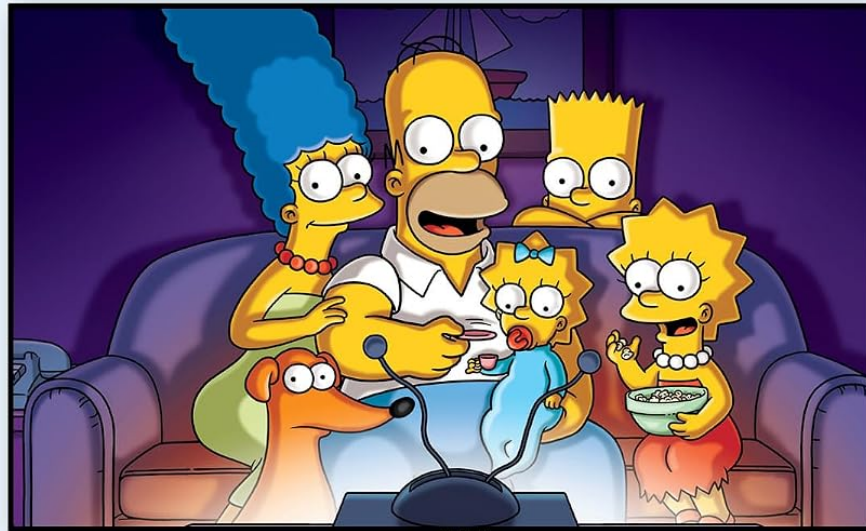

Easily sync the player's screen to a larger display for shared viewing.

- **Region Free & Multi-formats Support:** Plays DVDs from all regions and supports various disc formats (DVD, DVD+R/-R, DVD+RW/-RW, CD, CD+R/-R, CD+RW/-RW, VCD, SVCD). Also supports media playback via USB/SD card (max 32GB FAT32, 720*576 pixels) for JPG, JPEG, MP3, WMA, VOB, AVI, MPEG 1, MPEG 2, XVID files. Note: Does not support Blu-ray discs or MP4 format.
- **Upgraded Operating Technologies:** Incorporates new chip technology and reading technologies like breakpoint resume, anti-shock, and pre-reading for smooth and stable disc playback.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present:

ORIGINAL PACKAGE



17.9" Portable DVD Player



Remote Control



5 ft RCA Cable



6 ft Car Charger



5 ft AC Adapter



User Manual

The complete package includes the DVD player and all necessary accessories.

- 17.9" Portable DVD Player
- Remote Control
- 5 ft RCA Cable
- 6 ft Car Charger

- 5 ft AC Adapter
- User Manual

4. SETUP

4.1 Charging the Battery

Before first use, fully charge the portable DVD player. Connect the AC adapter to the DC IN port on the player and plug it into a wall outlet. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, depending on the model. A full charge provides approximately 6 hours of playback.



Charge the player using the included AC adapter.

4.2 Initial Power On

Press the POWER ON/OFF button to turn on the device. The screen will light up, and the WONNIE logo will appear. You can adjust the screen angle using the swivel and flip features for comfortable viewing.

5. OPERATING INSTRUCTIONS

5.1 Playing Discs (DVD/CD)

1. Open the disc cover gently.
2. Place a DVD or CD onto the disc spindle with the label side facing up.
3. Close the disc cover securely.
4. The player will automatically detect the disc and begin playback. If not, press the PLAY button on the player or remote.

5.2 Using USB/SD Card

1. Insert a USB flash drive into the USB port or an SD card into the SD CARD slot.
2. Use the MODE button on the player or remote to select USB or SD mode.
3. Navigate through your files using the arrow keys and press ENTER to select and play.

REGION FREE & MULTIPLE FORMATS

 **DVD Formats:** DVD,DVD+R, DVD-R, DVD+RW, DVD-RW, CD, CD+R, CD-R, CD+RW, CD-RW, VCD, SVCD

 **Video Formats:** VOB,AVI, MPEG1, MPEG2, XVID

 **Audio Formats:** MP3, WMA

 **Image Formats:** JPG, JPEG

 **USB/SD card**(max to 32GB FAT32 and 720*576 pixels)

NOTE: MP4, Blu-Ray NOT Support



The player supports various media formats via USB and SD card.

5.3 Connecting to External Displays (TV/Projector)

To view content on a larger screen, use the provided RCA cable:

1. Connect one end of the RCA cable to the AV OUT port on the portable DVD player.
2. Connect the other end of the RCA cable to the corresponding AV IN ports on your TV or projector.
3. Select the correct AV input source on your TV or projector.
4. The player's screen content will now be mirrored on the external display.



Connect to a TV for a larger viewing experience.



Connect to a projector for an even larger display.

5.4 Swivel Screen Functionality

The screen can be rotated 270 degrees clockwise and flipped 180 degrees. This allows for various viewing positions, including folding the screen flat against the base to resemble a tablet.

ENJOY THE JOY OF MOVIES ANYTIME, ANYWHERE



FOLDABLE & ROTATABLE SCREEN



The screen offers flexible rotation and flip capabilities.

180° & 270° SWIVEL SCREEN

You Could Adjust The Most Comfortable Angle To Watch Videos



Adjust the screen to your most comfortable viewing angle.

5.5 Last Memory Function

The player features a built-in Last Memory function. To enable it, navigate to the SETUP page in the player's menu and set the "Last Memory" function to "ON". This will allow the player to resume playback from the exact point where it was last turned off.

LAST MEMORY FUNCTION

No More Worry About Power Off Suddenly

(NOTE: Set "Last Memory" function to "ON" at SETUP page)



Playing



Power off



Power on



The Last Memory function ensures you can continue watching from where you left off.

6. MAINTENANCE

6.1 Cleaning the Device

- Use a soft, dry cloth to clean the exterior of the player.
- For the screen, use a soft, lint-free cloth specifically designed for electronics. Do not use abrasive cleaners or solvents.
- To clean the disc lens, use a specialized DVD/CD lens cleaning disc.

6.2 Battery Care

- Avoid fully discharging the battery frequently.

- If storing the player for an extended period, charge the battery to about 50% and store it in a cool, dry place.
- Do not expose the battery to extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your WONNIE Portable DVD Player, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Player does not power on.	Battery is depleted. Connect the AC adapter or car charger. Ensure the power switch is in the ON position.
Disc not reading / "No Disc" error.	Disc is dirty or scratched. Clean the disc. Disc is inserted incorrectly. Reinsert the disc with the label side up. Disc format is not supported (e.g., Blu-ray, MP4). Ensure the disc format is compatible.
No sound.	Volume is too low. Increase the volume. Headphones are connected. Disconnect headphones if you want sound from speakers. Audio settings are incorrect. Check audio settings in the player's menu.
No picture / Distorted picture.	Screen brightness/contrast settings are incorrect. Adjust display settings. If connected to TV, ensure correct AV input is selected and cables are securely connected.
Remote control not working.	Batteries are depleted or inserted incorrectly. Replace batteries. Obstruction between remote and player. Ensure clear line of sight.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	WONNIE
Model	W-1458
Screen Size	15.4 Inches (inner), 17.9 Inches (full unit)
Display Type	LCD
Display Resolution	1366x768
Battery Type	Lithium Polymer
Battery Capacity	5000mAH (approx. 6 hours playback)
Power Source	AC Adapter, Car Charger, Battery

Feature	Detail
Supported Disc Formats	DVD, DVD+R, DVD-R, DVD+RW, DVD-RW, CD, CD+R, CD-R, CD+RW, CD-RW, VCD, SVCD (Not Blu-ray or MP4)
Supported Media Formats (USB/SD)	Pictures: JPG, JPEG; Audio: MP3, WMA; Videos: VOB, AVI, MPEG 1, MPEG 2, XVID
Max USB/SD Capacity	32GB (FAT32), 720*576 pixels
Connectivity	RCA (AV In/Out), USB, SD Card, Headphone Jack
Product Dimensions	14.1 x 16.5 x 8.1 cm
Item Weight	2.5 Kilograms

9. WARRANTY AND SUPPORT

WONNIE is committed to providing high-quality products and excellent customer service. Your portable DVD player comes with comprehensive support:

- **365-Day Replacement or Full Refund:** We offer a new replacement or full refund within 365 days of purchase.
- **12-Month Replacement:** Replacement available within 12 months for product defects.
- **60-Day No Worry Return:** Easy returns within 60 days.
- **24/7 Professional Customer Service:** Our support team is available around the clock to assist you with any questions or issues.
- **Lifetime After-Sales Consult and Technical Support:** We provide ongoing support for the lifetime of your product.



WONNIE's commitment to customer satisfaction and support.

If you have any questions or require assistance, please do not hesitate to contact us. We are here to help.

