

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT Universal Remote Control Instruction Manual for Samsung Smart TVs (Models BN59-01198X, BN59-01199F, and compatible series)

USARMT BN59-01199F

USARMT Universal Remote Control Instruction Manual

Compatible with Samsung Smart HD LED LCD Televisions (e.g., BN59-01198X, BN59-01199F, BN59-01302A, and many UN-series models)

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your new USARMT Universal Remote Control. This remote is designed to be compatible with a wide range of Samsung Smart HD LED LCD Televisions, offering a convenient replacement or secondary control unit.

2. SETUP

2.1 Battery Installation

Proper battery installation is crucial for the remote's functionality. Please follow these steps:



Image: Rear view of the remote control, highlighting the battery cover.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch to open it.

3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.

Note: Always replace both batteries at the same time. Do not mix old and new batteries or different types of batteries. Remove batteries if the remote will not be used for an extended period.

3. OPERATING INSTRUCTIONS

This section details the primary functions of the buttons on your USARMT Universal Remote Control.



Image: Front view of the remote control, displaying all buttons and their labels.

3.1 Button Functions Overview

- **Power (●):** Turns the television on or off.
- **Source:** Cycles through available input sources (e.g., HDMI 1, HDMI 2, TV).
- **Number Pad (0-9):** Directly enters channel numbers.
- **VOL (+/-):** Adjusts the volume level.

- **CH (▲/▼):** Changes the television channel up or down.
- **Mute:** Silences or restores the television audio.
- **Smart HUB:** Accesses the Samsung Smart Hub for apps and streaming services.
- **Menu:** Opens the television's main menu.
- **Tools:** Provides quick access to common settings or functions.
- **Guide:** Displays the electronic program guide (EPG).
- **Info:** Shows information about the current program or input.
- **Navigation Pad (▲ ▼ ◀ ▶ and Enter):** Navigates through menus and selects options.
- **Return:** Goes back to the previous screen or menu.
- **Exit:** Closes the current menu or application.
- **Color Buttons (A, B, C, D):** These buttons perform specific functions depending on the current menu or application, often indicated on-screen.
- **Media Control Buttons (Play, Pause, Stop, Fast Forward, Rewind):** Controls playback of media content.

4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Battery Care:** If the remote will not be used for an extended period (e.g., more than a month), remove the batteries to prevent leakage and potential damage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

5. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common problems and solutions:

- **Remote is not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the television's infrared sensor.
 - Point the remote directly at the TV's sensor.
- **Some buttons are not working:**
 - This could indicate low battery power; try replacing the batteries.
 - Ensure the remote is clean and there is no debris lodged under the buttons.
- **Remote works intermittently:**
 - Check battery connections; ensure they are snug.

- Verify that the remote's infrared emitter is not blocked or dirty.

If these steps do not resolve the issue, please contact customer support.

6. SPECIFICATIONS

Key technical specifications for the USARMT Universal Remote Control:

Feature	Detail
Product Dimensions	6.5 x 1.5 x 0.5 inches
Item Weight	3 ounces
Connectivity Technology	Infrared
Compatible Devices	Television
Max Number of Supported Devices	1
Special Feature	Universal
Manufacturer	USARMT

7. WARRANTY INFORMATION

For specific warranty details regarding your USARMT Universal Remote Control, please refer to the product packaging or contact the seller directly. Warranty terms typically cover manufacturing defects for a limited period from the date of purchase.

8. CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please reach out to the retailer or manufacturer's customer support channels. Have your product model number (BN59-01199F or compatible series) and purchase information ready when contacting support.