



[Manuals.plus](#) /

› [BrylaneHome](#) /

› BrylaneHome 60" H Pre-Lit Angel with Trumpet Instruction Manual

BrylaneHome 26027440043mk0

BrylaneHome 60" H Pre-Lit Angel with Trumpet Instruction Manual

Model: 26027440043mk0

INTRODUCTION

This manual provides detailed instructions for the safe setup, operation, and maintenance of your BrylaneHome 60-inch Pre-Lit Angel with Trumpet outdoor holiday decoration. Please read all instructions carefully before assembly and use to ensure proper function and longevity of the product.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- Do not operate in wet conditions.
- Unplug the decoration during severe weather conditions.
- Keep the product away from flammable materials.
- Do not allow children to play on or near the display.
- Always follow the manufacturer's instructions for proper setup, operation, and storage.
- Ensure the UL listed adapter is used as intended.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x BrylaneHome 60" H Pre-Lit Angel with Trumpet structure
- 1 x UL Listed Adapter
- Assembly hardware (e.g., tie wraps, ground stakes - *specific items may vary*)
- Instruction sheet (this manual)

If any parts are missing or damaged, do not proceed with assembly. Contact customer support for

assistance.

SETUP AND ASSEMBLY

Assembly is required for this product. It is recommended to assemble the angel in a dry, clear area.

1. Carefully remove all components from the packaging.
2. Unfold the metal frame structure of the angel. Ensure all sections are properly aligned and connected.
3. Secure the light strings to the frame using the provided tie wraps. Ensure lights are evenly distributed and securely attached to prevent tangling or damage.
4. Attach the trumpet component to the angel's hand.
5. Position the assembled angel in your desired indoor or outdoor location. For outdoor use, secure the base with ground stakes (if provided) to prevent tipping in windy conditions.
6. Connect the 18.75' lead wire to the UL listed adapter.



Figure 1: Assembled BrylaneHome 60-inch Pre-Lit Angel with Trumpet, illuminated.

OPERATING INSTRUCTIONS

1. Once the angel is fully assembled and securely placed, plug the UL listed adapter into a standard electrical outlet.
2. The 100 warm white LED lights will illuminate.
3. To turn off the decoration, simply unplug the adapter from the electrical outlet.
4. For outdoor use, ensure the electrical outlet is a GFCI (Ground Fault Circuit Interrupter) protected outlet and that all connections are protected from moisture.

MAINTENANCE

- **Cleaning:** Gently wipe the surface of the angel with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Light Inspection:** The LED lights are designed for long-term use. If a section of lights fails, inspect connections for looseness.
- **General Inspection:** Periodically inspect the power cord, adapter, and light strings for any signs of damage, fraying, or loose connections. Discontinue use if damage is found.

STORAGE

1. Before storing, ensure the angel is unplugged and completely dry.
2. Carefully disassemble the angel, reversing the assembly steps.
3. Gently coil the light strings to prevent tangling and damage.
4. Store all components in their original packaging or a suitable storage container in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------------|--|--|
| Lights do not illuminate. | Power cord not plugged in; faulty outlet; damaged adapter or wiring. | Ensure the adapter is securely plugged into a working outlet. Check for tripped circuit breakers. Inspect the cord and adapter for damage. |
| Angel is unstable or tips over. | Improper placement; insufficient securing. | Place on a flat, stable surface. For outdoor use, ensure ground stakes are properly installed and secured. |
| Parts are loose after assembly. | Tie wraps or connectors not fully secured. | Re-check all connection points and ensure tie wraps are tightened. Replace any broken tie wraps with suitable alternatives. |

SPECIFICATIONS

- **Model Number:** 26027440043mk0
- **Dimensions:** 39" (Depth) x 24" (Width) x 60" (Height)
- **Light Type:** 100 Warm White LED Lights
- **Lead Wire Length:** 18.75 feet

- **Power Source:** UL Listed Adapter
- **Materials:** Cotton thread, Metal, LED bulb (Frame: Metal; Overall: 50% Plastic, 40% Metal, 10% Others)
- **Item Weight:** 6 pounds
- **Manufacturer:** BrylaneHome

WARRANTY AND SUPPORT

Specific warranty information for the BrylaneHome 60" H Pre-Lit Angel with Trumpet is not provided in this manual. For warranty details, product support, or to inquire about replacement parts, please contact BrylaneHome customer service directly. Refer to the product packaging or the official BrylaneHome website for contact information.

You can visit the [BrylaneHome Store on Amazon](#) for more information.