

[Manuals.plus](#) /

> [Hoover](#) /

> Hoover MAXLife Pro Pet Swivel Upright Vacuum Cleaner User Manual

Hoover UH74220PC

Hoover MAXLife Pro Pet Swivel Upright Vacuum Cleaner

MODEL: UH74220PC - USER MANUAL

1. Setup and Assembly

Follow these steps to assemble your Hoover MAXLife Pro Pet Swivel Upright Vacuum Cleaner before first use.

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all accessories (crevice tool, dusting brush, pet upholstery tool) are present.
2. **Attach Handle:** Insert the handle assembly into the main vacuum body until it clicks securely into place.
3. **Connect Hose:** Securely attach the flexible hose to the designated port on the vacuum cleaner. Ensure a tight connection for optimal suction.
4. **Store Tools:** Place the included cleaning tools onto their onboard storage clips for easy access during operation.



Figure 1: Fully assembled Hoover MAXLife Pro Pet Swivel vacuum cleaner with its included accessories.

Initial Use

- **Power Connection:** Unwind the power cord and plug it into a standard electrical outlet.
- **Cord Management:** Use the cord clips on the handle to manage the power cord during operation, preventing tangles and ensuring safety.

2. Operating Instructions

Powering On/Off

To turn the vacuum on or off, locate the power button on the main unit or handle. Press once to activate the vacuum. The brush roll can be engaged or disengaged for different floor types using the multi-floor on/off brush roll

control.

Cleaning Modes and Surfaces

The Advanced Action brush roll is designed for effective cleaning on both carpets and hard floors. Adjust the brush roll setting as needed for optimal performance on your specific floor type.



Figure 2: The vacuum effectively cleans various floor types, including carpet and hard surfaces.

Using Attachments

Your vacuum includes several tools for specialized cleaning tasks. To use an attachment, detach the quick-release cleaning wand and connect the desired tool.

- **Crevice Tool:** Ideal for cleaning tight spaces, corners, and along baseboards.



Figure 3: The crevice tool allows access to narrow and hard-to-reach areas.

- **Dusting Brush:** Suitable for delicate surfaces, furniture, and blinds.



Figure 4: The dusting brush is effective for quick pickups on various surfaces.

- **Pet Upholstery Tool:** Designed to effectively remove pet hair and debris from upholstery and stairs.



Figure 5: The pet upholstery tool efficiently removes stubborn pet hair from fabric surfaces.

The vacuum offers 13 feet of extended reach with the cleaning wand, allowing you to clean high or distant areas.



Figure 6: The extended cleaning reach facilitates cleaning of elevated or distant surfaces.

Swivel Steering

The swivel steering feature provides enhanced maneuverability, allowing you to navigate around furniture and obstacles with ease.

3. Maintenance

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying the Dirt Cup

The vacuum features an XL dirt cup for extended cleaning sessions. To empty, press the bottom-release button over a trash receptacle. Ensure the dirt cup is securely reattached before next use.

Filter Maintenance

The MAXLife filtration system includes a sealed allergen HEPA filter. For best performance, regularly check and clean the rinsable MAXLife filter. Refer to the diagram below for filter location.



Figure 7: Key components of the Hoover MAXLife Pro Pet Swivel vacuum, including the rinsable MAXLife filter and sealed allergen system.

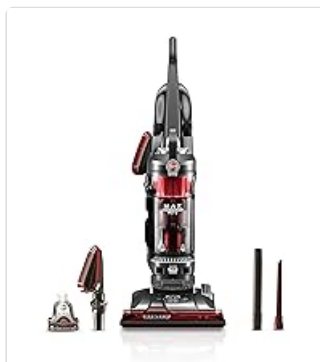


Figure 8: The rinsable MAXLife filter can be cleaned under running water to maintain filtration efficiency.

Brush Roll Cleaning

Periodically inspect the Advanced Action brush roll for tangled hair or debris. Turn off and unplug the vacuum before cleaning the brush roll. Use scissors to carefully cut away any wrapped hair and remove obstructions.

4. Troubleshooting

Refer to the table below for common issues and their potential solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	No power supply	Check if the power cord is securely plugged into a working outlet. Check circuit breaker.
Loss of suction	Full dirt cup, clogged filter, or hose obstruction	Empty the dirt cup. Clean or replace filters. Check hose and attachments for blockages.
Brush roll not spinning	Brush roll off, obstruction, or belt issue	Ensure brush roll is engaged. Turn off and unplug, then clear any debris from the brush roll. Inspect belt for damage.
Unusual noise	Obstruction in brush roll or hose, or damaged component	Turn off and unplug the vacuum. Inspect for and remove any foreign objects. If noise persists, contact customer support.

5. Specifications

Key technical specifications for the Hoover MAXLife Pro Pet Swivel Upright Vacuum Cleaner.

Feature	Detail
Brand	Hoover
Model Name	MAXLife Pro Pet
Model Number	UH74220PC
Product Dimensions	12.5"L x 11.5"W x 45"H
Item Weight	17 pounds
Capacity	1.5 Liters
Wattage	1320 watts
Hose Length	9 Feet
Filter Type	HEPA Filter
Special Features	Bagless, HEPA Filtration, WindTunnel Technology, MAXLife System, Swivel Steering
Included Components	Crevice Tool, Dusting Brush, Pet Upholstery Tool
Connectivity Technology	Wired
Indoor/Outdoor Usage	Indoor

6. Warranty and Support

This product is covered by a manufacturer's warranty. For detailed warranty information, please refer to the documentation included with your purchase or visit the official Hoover website.

For technical assistance, replacement parts, or further inquiries, please contact Hoover Customer Support. Contact details can typically be found on the Hoover website or in your product packaging.