

[Manuals.plus](#) /

› [FANGOR](#) /

› FANGOR 10.5 LCD Screen(Monitor) TH1011B User Manual

FANGOR TH1011B

FANGOR 10.5" LCD Screen TH1011B User Manual

Model: TH1011B | Brand: FANGOR

INTRODUCTION

This manual provides essential information for the proper use, setup, and maintenance of your FANGOR 10.5-inch LCD Screen, model TH1011B. This unit is designed exclusively as a **slave monitor replacement** for FANGOR 10.5 Dual Screen DVD Players. It is not a standalone device and requires connection to a compatible FANGOR main DVD player unit for operation. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

PRODUCT OVERVIEW



Figure 1: Front view of the FANGOR TH1011B LCD Screen, showing the 10.5-inch display and control buttons (Power, AV In/Out, Vol-, Vol+).

Menu, Volume Up/Down).



Figure 2: Side profile of the monitor, illustrating the slim design and the integrated kickstand extended for tabletop use.



Figure 3: Rear view of the monitor, showing the extended kickstand and mounting points. Product labels are visible.



Figure 4: Close-up of the rear panel, highlighting the connection ports for audio and video input/output, essential for linking with the main DVD player unit.

SETUP INSTRUCTIONS

1. Unpacking:

Carefully remove the LCD screen from its packaging. Retain all packaging materials for future storage or transport.

2. Placement:

Place the monitor on a stable, flat surface. The integrated kickstand can be extended for optimal viewing angle. Ensure adequate ventilation around the unit.

3. Connection to Main Unit:

Locate the AV input/output ports on the rear of the TH1011B monitor (refer to Figure 4). Using the appropriate connecting cables (typically supplied with your FANGOR 10.5 Dual Screen DVD Player, as this monitor does not include them), connect the TH1011B to the main DVD player unit. Ensure a secure connection for both video and audio cables.

4. Power:

The TH1011B receives power directly from the main FANGOR 10.5 Dual Screen DVD Player unit via the connecting cable. No separate power adapter is required for this slave monitor.

OPERATING INSTRUCTIONS

• Power On/Off:

The TH1011B monitor will power on automatically when the main FANGOR 10.5 Dual Screen DVD Player unit is powered on and connected correctly. To power off, turn off the main DVD player unit.

• Volume Control:

Adjust the volume using the 'VOL+' and 'VOL-' buttons located on the front panel of the monitor (refer to Figure 1). These buttons control the volume output from the TH1011B's integrated speakers.

• Display Adjustment:

Basic display settings (e.g., brightness, contrast) may be adjustable via the 'MENU' button on the front panel. Navigate through the on-screen display (OSD) menu using the directional buttons and confirm selections with the 'OK' button.

MAINTENANCE AND CARE

- Cleaning the Screen:**

Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a non-abrasive screen cleaner. Avoid using harsh chemicals or abrasive materials.
- Cleaning the Casing:**

Use a soft, dry cloth to clean the exterior casing. Do not use liquid cleaners directly on the unit.
- Storage:**

When not in use for extended periods, store the monitor in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to use the original packaging for storage.
- Handling:**

Handle the monitor with care. Avoid dropping or subjecting it to strong impacts, which can damage internal components or the screen.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No display/No power	- Loose or disconnected cable to main unit. - Main DVD player unit is off or not functioning. - Faulty connecting cable.	- Ensure all cables are securely connected between the TH1011B and the main DVD player. - Verify the main DVD player unit is powered on and operating correctly. - Try using a different, known-good connecting cable if available.
No sound from monitor	- Volume is too low or muted. - Audio cable is disconnected or faulty. - Audio output from main unit is off.	- Increase volume using the 'VOL+' button on the monitor. - Check the audio cable connection. - Ensure audio output is enabled on the main DVD player unit.
Distorted image/Poor picture quality	- Loose video cable connection. - Damaged video cable. - Incorrect display settings.	- Check and re-secure the video cable connection. - Replace the video cable if suspected to be damaged. - Adjust brightness, contrast, or other display settings via the 'MENU' button.

SPECIFICATIONS

Feature	Detail
Brand	FANGOR

Feature	Detail
Model	TH1011B
Screen Size	10.5 Inches
Display Type	LCD
Color	Black
Item Weight	1.37 pounds
Product Dimensions	11.8 x 10 x 2.4 inches
Special Features	Compact
Compatibility	FANGOR 10.5 Dual Screen DVD Players (slave monitor replacement)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your original FANGOR 10.5 Dual Screen DVD Player or visit the official FANGOR website. You can also contact FANGOR customer service directly for assistance with your TH1011B LCD screen.

Official FANGOR Store: [Visit the FANGOR Store on Amazon](#)

© 2024 FANGOR. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question