

[Manuals.plus](#) /

› [EVERSECU](#) /

› EVERSECU 13.3-inch 1080p IPS Monitor HD1330 User Manual

EVERSECU HD1330

EVERSECU 13.3-inch 1080p IPS Monitor HD1330 User Manual

Model: HD1330

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your EVERSECU 13.3-inch HD 1920x1080 IPS LCD Monitor (Model HD1330). This monitor is designed for various applications, including PC, CCTV security systems, DVRs, and other video display needs, offering a full HD resolution and wide viewing angles.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1x EVERSECU 13.3-inch Monitor
- 1x Monitor Stand
- 1x BNC Cable
- 1x User's Manual (this document)
- 1x Power Adapter

SETUP INSTRUCTIONS

Follow these steps to set up your EVERSECU monitor:

1. Assemble the Monitor Stand

Attach the monitor to the provided stand. Ensure it is securely fastened to prevent accidental tipping.



Image: Side profile of the EVERSECU 13.3-inch monitor mounted on its stand.

2. Connect Video Sources

The monitor supports multiple video inputs. Choose the appropriate cable for your device and connect it to the corresponding port on the back of the monitor.

- **HDMI:** For high-definition digital video and audio from devices like PCs, laptops, Raspberry Pi, or Fire TV Stick.
- **VGA:** For analog video input from computers.
- **BNC:** For professional security monitoring equipment, reducing signal interference.
- **AV (RCA):** For composite video input from devices like DVD players, VCD players, TV-Boxes, or CCTV cameras.
- **USB:** For media playback from a U Disk.
- **MicroSD Card Slot:** For media playback from a memory card.



Image: Rear view of the monitor displaying various input ports including HDMI, VGA, BNC, AV, and USB.



Image: Angled rear view of the monitor, highlighting the input ports and control buttons on the side.

3. Connect Power

Connect the provided power adapter to the DC 12V input port on the monitor and then plug it into a power outlet.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the **Power** button located on the side of the monitor to turn it on or off. The power LED indicator will show the monitor's status.

2. Selecting Input Source

To switch between connected video sources (HDMI, VGA, BNC, AV, USB), press the **Input Select** button on the monitor's side panel or use the remote control. Cycle through the available inputs until your desired source is displayed.

3. Adjusting Volume

Use the **Volume Up** and **Volume Down** buttons on the monitor or remote control to adjust the audio output level from the integrated speakers.

4. Menu Navigation

Press the **Menu** button to access the on-screen display (OSD) menu. Use the navigation buttons (often shared with volume/input select) to move through menu options. The primary function of the menu is input selection. Other advanced display settings like color, contrast, or brightness adjustments may be limited or not available through the OSD menu on this model.

SPECIFICATIONS

Detailed technical specifications for the EVERSECU 13.3-inch HD Monitor (Model HD1330):

Screen Size	13.3 Inches
Aspect Ratio	16:9
Screen Resolution	1920x1080 (Full HD)
Screen Brightness	420 cd/m2
Screen Contrast	800:1
View Angle	H-178 degrees, V-178 degrees (IPS Technology)
Response Time	8ms
Video Input	VGA, BNC, HDMI (x2), AV, USB, MicroSD
Audio	Built-in high-quality loudspeakers
Brightness Control	Yes (though OSD menu options may be limited as per user reviews)
Video System	PAL, NTSC
Menu Language	English, French, German, Chinese, Italian, Spanish, Etc.
Product Dimensions	Approx. 287 x 181 x 38 MM (12.6 x 7.9 x 0.6 inches)
Item Weight	Approx. 500g (1.1 pounds)
Storage Temperature	-10 degrees to 60 degrees Celsius

MAINTENANCE

Proper care and maintenance will ensure the longevity of your monitor.

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-specific cleaning solution. Avoid using harsh chemicals, alcohol, or abrasive materials.
- **Cleaning the Casing:** Use a soft, dry cloth to wipe the monitor casing.
- **Ventilation:** Ensure the monitor's ventilation openings are not blocked to prevent overheating.
- **Power Off When Not in Use:** Disconnect the power adapter if the monitor will not be used for an extended period.

TROUBLESHOOTING

If you encounter issues with your monitor, refer to the following common problems and solutions:

1. **No Power:**
 - Ensure the power adapter is securely connected to both the monitor and a working power outlet.
 - Verify the power outlet is functional by plugging in another device.
 - Press the power button firmly.
2. **No Signal / Blank Screen:**
 - Check that the video cable (HDMI, VGA, BNC, AV) is securely connected to both the monitor and the source device.
 - Ensure the source device is powered on and outputting a video signal.
 - Press the **Input Select** button to cycle through all available input sources until the correct one is displayed.

- If using a PC, ensure the display settings are configured to output to the external monitor.

3. **Poor Picture Quality / Incorrect Colors:**

- Ensure the video cable is not damaged and is properly connected.
- Try a different video cable if possible.
- Verify the resolution and refresh rate settings on your source device are compatible with the monitor's specifications (1920x1080 at 60Hz is recommended).
- Note that this monitor may have limited options for color and contrast adjustment through its OSD menu.

4. **No Sound / Low Sound:**

- Increase the volume using the **Volume Up** button or remote control.
- Ensure the audio source is not muted or set to a very low volume.
- If using HDMI, ensure the source device is configured to output audio via HDMI.

5. **Monitor Does Not Turn On Automatically with Signal:**

- Some monitors require manual power-on. Use the power button.
- Check if your source device has an auto-detect feature that needs to be enabled.

WARRANTY INFORMATION

Specific warranty details for the EVERSECU 13.3-inch HD Monitor (Model HD1330) are not provided in this document. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or contact EVERSECU customer support directly. Keep your purchase receipt as proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact EVERSECU customer support. You can typically find contact information on the manufacturer's official website or on the product packaging. For more information, you may visit the [EVERSECU Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B085Y1RLKJ>

More documents and user manuals: <https://manuals.plus/>