

MONODEAL MD909-WHITE

MONODEAL Portable CD Player User Manual

Model: MD909-WHITE

INTRODUCTION

Thank you for choosing the MONODEAL Portable CD Player. This device offers versatile audio playback options, including CD, Bluetooth, USB, FM radio, TF card, and AUX input/output. Designed for ease of use and portability, it features built-in dual speakers for clear sound and can be wall-mounted or placed on a desk. Please read this manual thoroughly to understand the product's functions and ensure proper operation.



Image: The MONODEAL Portable CD Player in white, shown with its remote control. The player features a transparent cover over the CD tray, revealing a black CD with a red center. Musical notes are depicted around the player, indicating its audio function.

WHAT'S IN THE BOX

Verify that all items listed below are included in your package:

- MONODEAL CD Player
- Remote Control
- 3.5mm Male-to-Male Audio Cable
- USB Adaptor
- Power Cord
- Wall Mount Plate
- Wall Mount Kit
- User Manual
- Desk Stand

KEY FEATURES

- **Multifunctional Playback:** Supports CD, CD-R, CD-RW, MP3, WMA formats, along with Bluetooth, USB, FM, TF card, and LINE/AUX input/output modes.
- **Built-in Dual Speakers:** Delivers high-quality, clear surround sound without the need for external headphones.
- **Bluetooth 5.1 Connectivity:** Functions as a Bluetooth speaker, allowing connection to Bluetooth-enabled devices like cellphones and tablets.
- **Flexible Placement:** Includes a wall-mount kit for space-saving installation and a desk stand for tabletop use.
- **User-Friendly Design:** Features a simple white matte square design, an LCD display for mode and track information, and a convenient remote control.
- **A-B Repeat Function:** Ideal for language learning or repeating specific audio segments.
- **Anti-Skip System:** Ensures stable playback during movement, suitable for portable use.

Multifunctional CD player

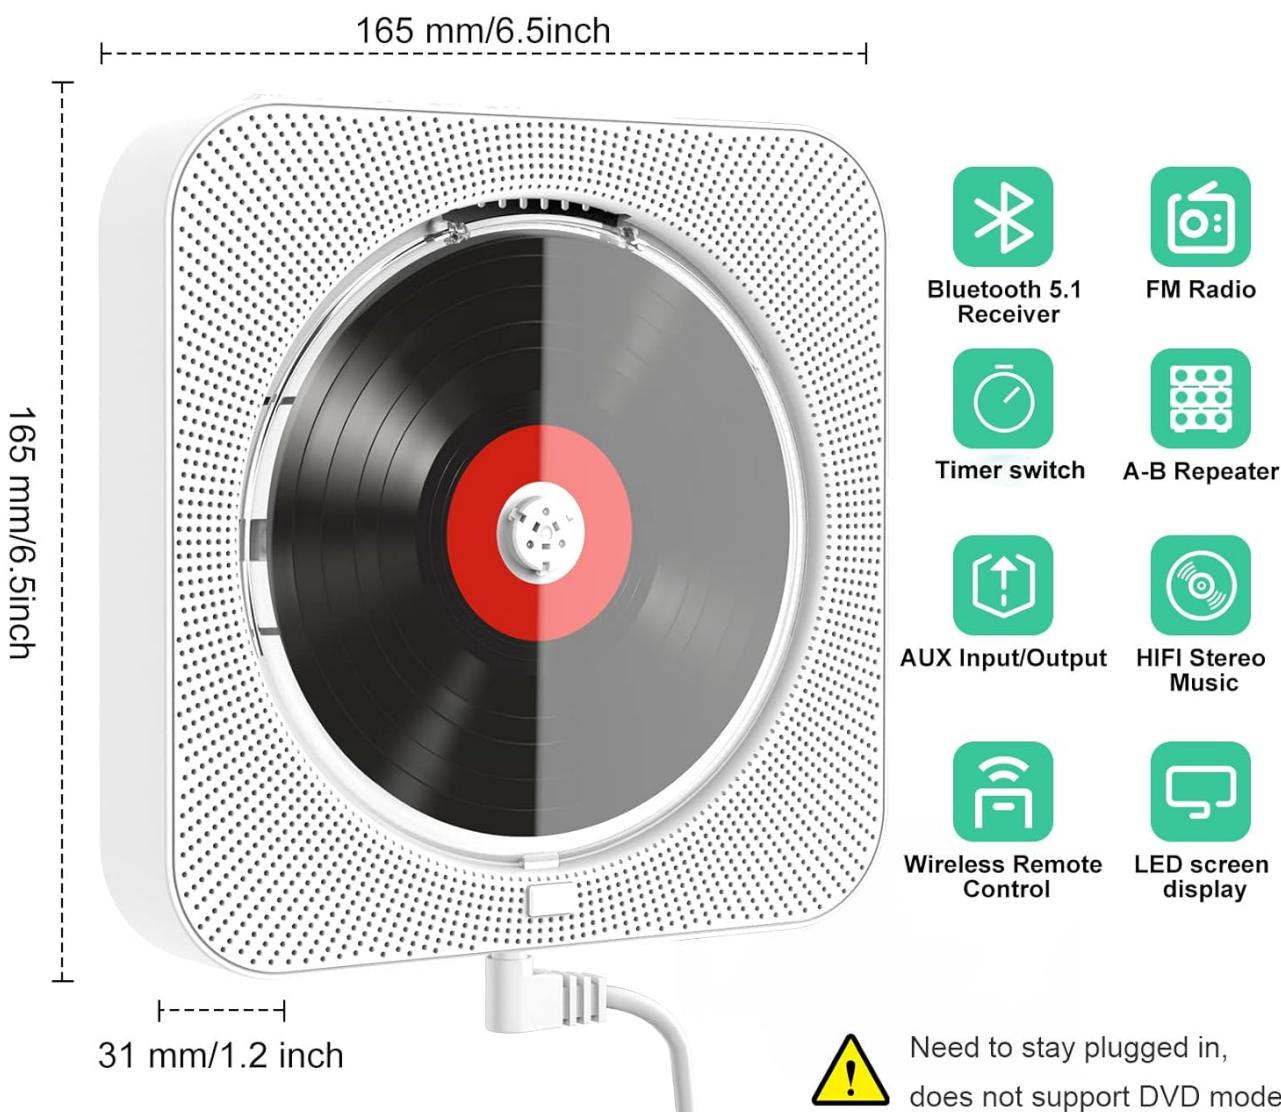


Image: A diagram illustrating the dimensions of the MONODEAL CD player (165mm/6.5inch square, 31mm/1.2inch thick) and icons

representing its key features: Bluetooth 5.1 Receiver, FM Radio, Timer switch, A-B Repeater, AUX Input/Output, HIFI Stereo Music, Wireless Remote Control, and LED screen display.

SETUP

1. Power Connection

Connect the provided USB adaptor and power cord to the player's power jack. Plug the adaptor into a standard wall outlet. The player requires continuous power to operate.

2. Placement Options



Images: The MONODEAL CD player shown both on its included desk stand and mounted on a wall, demonstrating flexible placement options.

1. **Desk Stand:** Insert the player into the provided desk stand for stable tabletop placement.

2. **Wall Mounting:**

- a. Choose a suitable location on a wall.
- b. Use the wall mount plate as a template to mark drilling points.
- c. Drill holes and insert wall anchors if necessary.
- d. Secure the wall mount plate to the wall using the provided screws.
- e. Carefully slide the CD player onto the mounted plate until it clicks securely into place.

OPERATING INSTRUCTIONS

1. Controls and Ports Overview



Image: A detailed view of the MONODEAL CD player highlighting its various ports and control buttons. Labels include Power Jack, TF Card Port, USB Port, 3.5mm Port, Mode, Voice-, Voice+, Prev, Next, and Display Screen.

- **Power Jack:** For connecting the power cord.
- **TF Card Port:** For inserting a TF (MicroSD) card.
- **USB Port:** For connecting a USB flash drive.
- **3.5mm Port:** For AUX input/output.
- **Control Buttons (Top Panel):** Mode, Volume Down, Volume Up, Previous Track, Next Track.
- **Display Screen:** Shows current mode, track number, and other information.

2. Power On/Off

To power on the device, press the power button located on the unit or the remote control. To power off, press the power button again.

3. CD Playback



Image: The MONODEAL CD player with its transparent cover open, showing a CD being inserted into the tray.

1. Open the CD cover.
2. Insert a CD (CD, CD-R, CD-RW) with the label side facing up.
3. Close the CD cover.
4. Press the "MODE" button to select CD mode. The display will show "CD".
5. Playback will begin automatically. Use the "Prev" and "Next" buttons to skip tracks, and "Volume +/-" to adjust volume.

4. Bluetooth Mode

HIFI Loud Speaker



Image: A visual representation of the MONODEAL CD player wirelessly connecting via Bluetooth 5.1 to a smartphone, with other devices like an iPad and laptop also shown as potential connections. The player is wall-mounted in a home setting.

1. Press the "MODE" button to select Bluetooth mode. The display will show "BLUE" and a blue backlight.
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), turn on Bluetooth and search for available devices.
3. Select "MONODEAL" from the list to pair.
4. Once connected, you can play audio from your device through the CD player's speakers.

5. FM Radio Mode

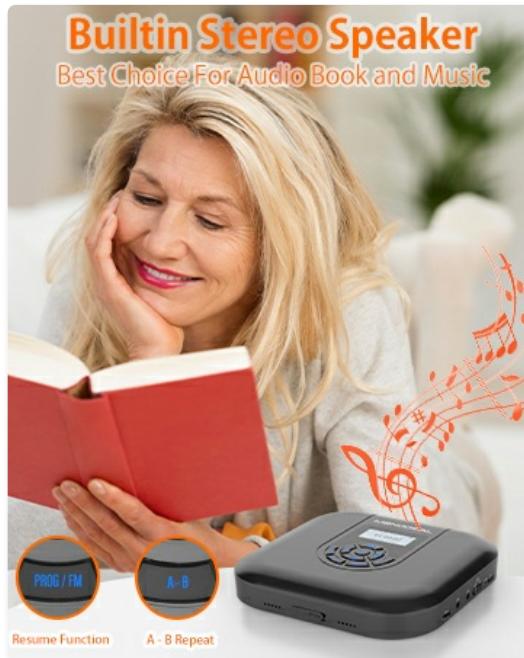


Image: The MONODEAL CD player displaying "FM 79.2" on its screen, indicating it is in FM radio mode. Two children are shown lying on a rug, looking up at the player.

1. Press the "MODE" button to select FM radio mode. The display will show "FM" and the frequency.
2. Press the "Prev" or "Next" buttons to manually tune to a station.
3. For automatic scanning, press and hold the "Play/Pause" button (on the remote) or "Mode" button (on the unit) for a few seconds. The player will scan and save available stations.

6. USB/TF Card Playback



Image: The MONODEAL CD player with a USB flash drive inserted into its USB port, indicating its capability to play media from USB storage.

1. Insert a USB flash drive into the USB port or a TF card into the TF card slot.
2. Press the "MODE" button to select USB or TF card mode. The display will show "USB" or "Sd" (for TF card).
3. Playback of compatible audio files (MP3, WMA) will begin automatically.

7. AUX Input/Output

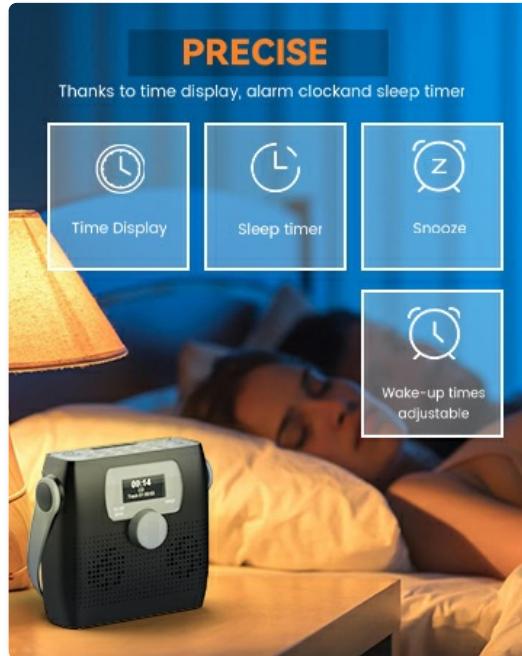


Image: The MONODEAL CD player with a 3.5mm audio cable connected to its AUX port, leading to a pair of headphones, demonstrating its audio output capability.

- **AUX Input:** Connect an external audio device (e.g., smartphone, MP3 player) to the 3.5mm port using the provided audio cable. Press "MODE" to select "LINE" mode. Audio from the external device will play through the CD player's speakers.
- **AUX Output:** Connect the 3.5mm port to an external speaker or headphone using an audio cable. The player's audio will be routed to the connected device.

8. Using the Remote Control



<input checked="" type="checkbox"/>	Lighter Compact Design	<input type="checkbox"/>
<input checked="" type="checkbox"/>	With Anti Dusty Cover	<input type="checkbox"/>
<input checked="" type="checkbox"/>	Auto-Turn On/Off	<input type="checkbox"/>



This is not a push-pull CD player, press the power button to turn it on

Image: The MONODEAL Portable CD Player positioned next to its white remote control, which features various buttons for power, mode selection (AUX, USB, FM, CD), track navigation, volume control, A-B repeat, and numerical track selection.

The remote control provides full functionality from a distance. Ensure the remote is pointed towards the player's sensor. Functions include:

- Power On/Off
- Mode Selection (AUX, USB, FM, CD, Bluetooth)
- Play/Pause
- Previous/Next Track
- Volume Up/Down
- A-B Repeat
- Numerical Track Selection

9. A-B Repeat Function



Image: The MONODEAL CD player with a graphic indicating the A-B repeat function. A person is shown studying with headphones, suggesting the feature's utility for learning.

This function allows you to repeat a specific segment of audio. During playback:

1. Press the "A-B" button (on the remote) at the desired starting point (A).
2. Press the "A-B" button again at the desired ending point (B).
3. The segment between A and B will repeat continuously.
4. Press "A-B" again to cancel the repeat function.

10. Display Modes and Backlight Colors

Different Color For 6 Modes



Image: The MONODEAL CD player's display showing different modes (FM, Sd, CD, USB, BLUE, LINE) each associated with a distinct backlight color (purple, green, orange, red, blue, yellow). A woman and child are shown in the background, suggesting the player's use in a learning environment.

The LCD display shows the current mode and track information. Each playback mode is indicated by a specific backlight color:

- **FM:** Purple backlight
- **TF Card (Sd):** Green backlight
- **CD:** Orange backlight
- **USB:** Red backlight
- **Bluetooth (BLUE):** Blue backlight
- **AUX (LINE):** Yellow backlight

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. Do not use abrasive cleaners or solvents.
- **CD Lens Care:** Avoid touching the CD lens. If cleaning is necessary, use a specialized CD lens cleaner disc.
- **Storage:** When not in use for extended periods, store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Dust Cover:** The player features an anti-dusty cover to protect the CD mechanism. Keep it closed when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	No power connection or faulty power adapter.	Ensure the power cord and USB adaptor are securely connected and plugged into a working outlet.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly. Player is unstable.	Clean the CD with a soft cloth. Check for scratches. Reinsert the CD correctly. Ensure the player is on a stable surface or securely wall-mounted.
No sound from speakers.	Volume is too low or muted. Incorrect mode selected. AUX cable connected.	Increase the volume. Press the "MODE" button to ensure the correct playback mode is selected. Disconnect any AUX cables if you want sound from internal speakers.
Bluetooth connection fails.	Player not in Bluetooth mode. Device too far. Already connected to another device.	Ensure the player is in Bluetooth mode ("BLUE" displayed). Move your device closer to the player. Disconnect from other Bluetooth devices.
FM radio reception is poor.	Weak signal. Interference.	Adjust the player's position. Try automatic scanning to find stronger signals. Avoid placing near other electronic devices that may cause interference.

SPECIFICATIONS

Feature	Detail
Brand	MONODEAL
Model Name	MD909-WHITE
Color	White
Product Dimensions	6.49 x 6.49 x 1.18 inches
Item Weight	1.63 pounds

Feature	Detail
Connectivity Technology	Bluetooth, USB, AUX Cable
Special Feature	Rechargeable (Note: Requires continuous power for operation), Stereo Sound
Supported Disc Formats	CD, CD-R, CD-RW, MP3, WMA

WARRANTY AND SUPPORT

MONODEAL is committed to product quality and customer satisfaction. While specific warranty details are not provided in this manual, many MONODEAL products come with a manufacturer's warranty. For any questions, technical support, or warranty claims, please contact MONODEAL customer service through the retailer where you purchased the product or visit the official MONODEAL website for contact information.

We recommend keeping your purchase receipt as proof of purchase for any warranty-related inquiries.