

ARTPHONE C10

ARTPHONE C10 Mobile Phone User Manual

Model: C10 | Brand: ARTPHONE

1. INTRODUCTION

The ARTPHONE C10 mobile phone is specifically designed for ease of use, making it ideal for seniors, children, beginners, or anyone seeking a straightforward device primarily for making and receiving calls and text messages. Its design focuses on simplicity, omitting complex functions to ensure a user-friendly experience.

Key Features:

- **Large Buttons and 2.4" Display:** Features an easy-to-use 170-degree flip design with a large, high-resolution 2.4-inch QVGA screen (240 x 320). The large characters are clear and easy to read, even without glasses.
- **Dual Screen and Side Buttons:** Equipped with two quick-response buttons and a convenient dual-screen display.
- **High-Definition Call Quality:** Updated speakers ensure every call is clear and loud.
- **Unlocked and No Contract:** The phone is unlocked and can be used with any GSM operator's SIM card without contractual obligations.
- **SOS Function:** A dedicated SOS button allows the phone to automatically call pre-set emergency numbers until a response is received.

2. SETUP

2.1 Package Contents

Please check the package contents upon unboxing:

- ARTPHONE C10 Mobile Phone
- Rechargeable Battery
- Charging Dock
- USB Charging Cable
- User Manual

2.2 Inserting the SIM Card and Battery

1. Carefully remove the back cover of the phone.
2. Insert your SIM card(s) into the designated slot(s). This phone supports Dual SIM.
3. Insert the battery into the battery compartment, ensuring the gold contacts align.
4. Replace the back cover until it clicks securely into place.



Figure 2.2.1: Front and back views of the ARTPHONE C10 mobile phone when closed, showing the simple design and 'artfone' branding on the back.



Figure 2.2.2: A black rectangular mobile phone battery, labeled BL-4UL 1700mAh 3.7V 4.4Wh, indicating its model and capacity.

2.3 Charging the Phone

Before first use, fully charge the phone battery.

- **Using the Charging Dock:** Place the phone into the charging dock, ensuring it sits correctly. Connect the USB cable to the dock and then to a power adapter.
- **Direct USB Charging:** Alternatively, connect the USB cable directly to the phone's charging port and then to a

power adapter.

The battery indicator on the screen will show charging status. Once fully charged, disconnect the phone from the charger.



Figure 2.3.1: Front view of the ARTPHONE C10 mobile phone in its charging dock, displaying the time and date.

3. OPERATING INSTRUCTIONS

3.1 Powering On/Off

- **To Power On:** Press and hold the red End Call/Power button until the screen lights up.
- **To Power Off:** Press and hold the red End Call/Power button until the power off options appear, then confirm.

3.2 Making and Receiving Calls

- **Making a Call:** Enter the phone number using the keypad and press the green Call button.
- **Receiving a Call:** When the phone rings, press the green Call button to answer. To end a call, press the red End Call button.

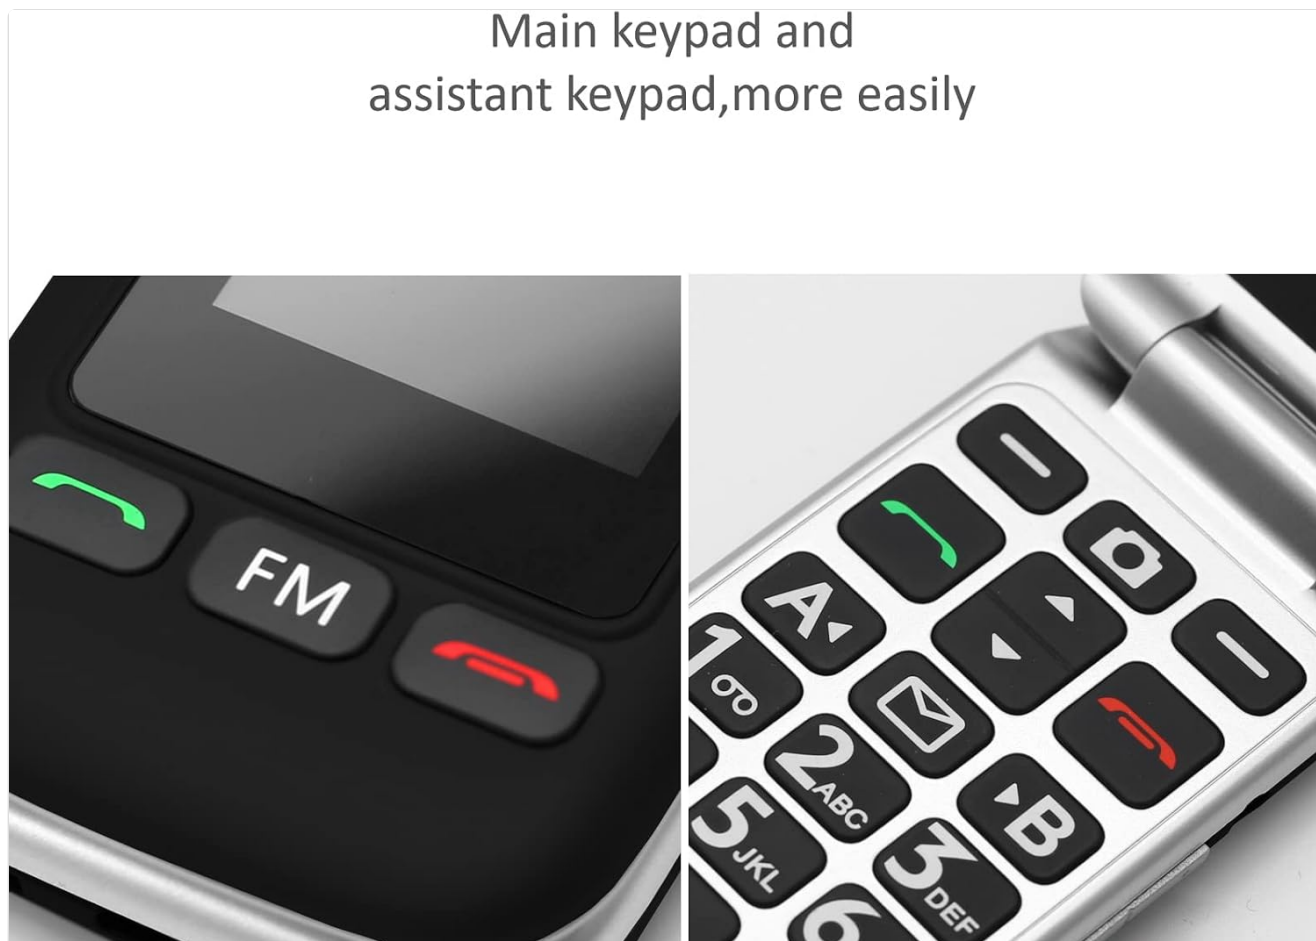


Figure 3.2.1: A close-up view of the main keypad of the ARTPHONE C10, showing the large, clearly labeled buttons for easy dialing and navigation.

3.3 Sending and Receiving SMS

- Navigate to the 'Messages' menu.
- Select 'Write Message' to compose a new text.
- Enter the recipient's number and your message.
- Press 'Send'.

3.4 Using the SOS Function

The SOS function allows you to quickly contact pre-set emergency numbers.

1. **Setting SOS Numbers:** Go to 'Settings' > 'SOS Settings' and add up to 5 emergency contact numbers.
2. **Activating SOS:** In an emergency, press and hold the SOS button located on the back of the phone. The phone will automatically dial the pre-set numbers in sequence until one is answered. It will also send an

emergency SMS to these contacts.



Figure 3.4.1: Rear view of the ARTPHONE C10 mobile phone in its charging dock, highlighting the SOS button and speaker grille.

3.5 Using the FM Radio

The phone includes a built-in FM radio.

- Navigate to the 'FM Radio' application from the main menu.
- Use the navigation keys to scan for stations or manually tune to a frequency.

3.6 Adjusting Volume

Use the dedicated volume buttons on the side of the phone to adjust call volume, ringtone volume, and media volume.

3.7 Using the Flashlight

The phone features a built-in flashlight. Refer to the phone's menu or a dedicated side button (if present) to activate and deactivate the flashlight.



Figure 3.7.1: Two ARTFONE C10 phones, one open displaying the large keypad and internal screen, and one closed in its charging dock, illustrating the flip design.

Dual display

More conveniently used



Figure 3.7.2: The ARTFONE C10 phone in its charging dock next to an open ARTFONE C10 phone, demonstrating the dual display feature.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid overcharging and allow the battery to discharge periodically before recharging.
- **Water Resistance:** This phone is not water-resistant. Avoid exposure to liquids.

5. TROUBLESHOOTING

If you encounter issues with your ARTFONE C10, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Phone does not turn on	Battery is low or depleted; Battery not inserted correctly.	Charge the phone for at least 30 minutes; Re-insert the battery correctly.
No network signal	SIM card not inserted; Out of network coverage area; SIM card issue.	Ensure SIM card is correctly inserted; Move to an area with better coverage; Contact your network provider.
Cannot hear caller / Caller cannot hear me	Volume too low; Microphone/speaker blocked; Network issue.	Adjust call volume; Ensure microphone/speaker are clear; Try calling again in a different location.
SOS function not working	SOS numbers not set; Incorrect numbers; No credit/signal.	Verify SOS numbers in settings; Ensure numbers are valid; Check network signal and balance.

6. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	ARTFONE (ELLENNE)
Model Number	C10
Color	Black
Screen Size	2.4 Inches
Resolution	240 x 320
Connectivity Technology	USB
Cellular Technology	2G (GSM)
SIM Card Slots	Dual SIM
Special Features	FM Radio, SOS Function
Manufacturer	ELLENNE
Country of Origin	China

7. WARRANTY AND SUPPORT

Your ARTFONE C10 mobile phone is covered by a return policy of **30 days** from the date of purchase for refund or replacement, as per standard terms.

For further assistance, technical support, or warranty claims, please contact the seller or manufacturer. ELLENNE, the manufacturer, has over 10 years of experience in e-commerce and is committed to providing quality service.

Please retain your proof of purchase for any warranty-related inquiries.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question