

HONITURE H8

HONITURE H8 Cordless Stick Vacuum Cleaner User Manual

Model: H8

INTRODUCTION

Thank you for choosing the HONITURE H8 Cordless Stick Vacuum Cleaner. This powerful and lightweight vacuum is designed to provide efficient cleaning for various surfaces, including hardwood floors, carpets, and for picking up pet hair. Featuring a 350W brushless motor and up to 25KPa suction, it offers a versatile cleaning solution for your home and car. Please read this manual carefully before use to ensure proper operation and maintenance.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, read all instructions before using this appliance.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum. Close supervision is necessary when used near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use only the charger supplied by the manufacturer to recharge.
- Store the appliance indoors. Put away after use to prevent accidents.

PRODUCT COMPONENTS

The HONITURE H8 Cordless Stick Vacuum Cleaner comes with several components and accessories to enhance your cleaning experience. Familiarize yourself with each part:



Image: All components included with the HONITURE H8 vacuum cleaner. This includes the main body, lightweight aluminum alloy tube, wall mount, mini motorized brush, 2-in-1 cleaning brush, crevice nozzle tool, motorized floor brush head, carpet roller, and user manual.

1. **Main Body:** Contains the motor, dust bin, and battery.
2. **Lightweight Aluminum Alloy Tube:** Connects the main body to the floor brush.
3. **Wall Mount:** For convenient storage and charging.

4. **Mini Motorized Brush:** Ideal for cleaning upholstery, mattresses, and pet hair.
5. **2-in-1 Cleaning Brush:** Versatile tool for various surfaces and crevices.
6. **Crevice Nozzle Tool:** For reaching tight spaces and corners.
7. **Motorized Floor Brush Head:** Main cleaning head for floors.
8. **Carpet Roller:** Specific roller for effective carpet cleaning.
9. **User Manual:** This document.
10. **Charger:** Power adapter for charging the battery.

ASSEMBLY AND SETUP

1. Assembling the Vacuum

1. Insert the aluminum alloy tube into the main body until it clicks securely.
2. Attach the desired floor brush head (motorized floor brush or mini motorized brush) to the other end of the aluminum alloy tube until it clicks.
3. For direct attachment, you can connect the crevice tool or 2-in-1 brush directly to the main body.

2. Charging the Battery

The HONITURE H8 features a detachable 2500mAh Lithium-Ion battery. Ensure the battery is fully charged before first use.

UP TO 35 MINUTES RUNNING TIME

Clean up all around your house in one pass



Image: The detachable battery of the HONITURE H8 vacuum, illustrating how it can be removed for separate charging. The image also highlights the 2500mAh capacity, up to 35 minutes running time, and 4.5-hour full charge time.

- **To charge the battery while attached to the vacuum:** Connect the charger to the charging port on the main body and plug it into a power outlet.
- **To charge the detachable battery separately:** Remove the battery from the main body by pressing the release button. Connect the charger directly to the battery pack and plug it into a power outlet.
- A full charge takes approximately 4-5 hours. The battery indicator lights will show charging status.
- The battery provides up to 35 minutes of runtime at 17KPa suction and 18 minutes at 25KPa suction.

3. Wall Mount Installation

Install the wall mount in a convenient location near a power outlet. Use the provided screws and anchors to secure it firmly to the wall. This allows for easy storage and charging.

OPERATING INSTRUCTIONS

1. Powering On/Off and Suction Modes



Image: A user demonstrating the HONITURE H8 cordless vacuum cleaner in action, highlighting its powerful 25KPa suction for removing hard-to-see dirt from both floors and carpets, with interchangeable rollers shown.

- **To Power On:** Press the power button on the main body. The vacuum will start in the standard suction mode (17KPa).
- **To Change Suction Mode:** Press the mode button to switch between standard (17KPa) and powerful (25KPa) suction.
- **To Power Off:** Press the power button again.

2. Using Attachments

- **Motorized Floor Brush Head:** Use for general cleaning of hard floors and carpets. It comes with interchangeable rollers for different surfaces.
- **Mini Motorized Brush:** Attach directly to the main body or extension tube for cleaning upholstery, pet beds, mattresses, and removing allergens.

Mini Motorized Brush can deeply clean allergens hidden in the quilt

Mattresses and sofas, Providing a clean and healthy living environment for your family



Image: A detailed view of the mini motorized brush attachment effectively cleaning a bed, illustrating its capability to deeply clean allergens from quilts, mattresses, and sofas, promoting a healthier living environment.

- **2-in-1 Cleaning Brush:** Use the brush mode for dusting delicate surfaces or the nozzle mode for general cleaning.
- **Crevice Nozzle Tool:** Ideal for narrow gaps, corners, and edges.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your HONITURE H8 vacuum cleaner.

1. Emptying the Dust Bin

- When the dust bin is full, or suction power decreases, empty the dust bin.
- Hold the main body over a trash can and press the dust bin release button to open the bottom flap and empty contents.

2. Cleaning Filters

The HONITURE H8 features a 4-stage filtration system, including a HEPA filter, precision sponge filtration, 0.5mm stainless steel filtration, and cyclone technology filtration. Clean filters regularly to maintain suction power.



Image: An exploded view diagram illustrating the completely sealed 4-stage filtration system of the HONITURE H8 vacuum, which captures 99.99% of microscopic dust and bacteria. Components shown include the HEPA filter, Precision Sponge Filtration, 0.5MM Stainless Steel Filtration, and Cyclone Technology Filtration.

- Twist and pull to remove the dust bin from the main body.
- Remove the internal filter components (HEPA filter, sponge, stainless steel mesh).
- Tap off loose dirt. Rinse the filters under cold running water. Do not use detergent.
- Ensure all filter components are completely dry before reassembling and placing back into the vacuum. This may take up to 24 hours.

3. Cleaning Brush Rolls

- Periodically check the brush rolls for tangled hair or debris.
- To remove the brush roll, locate the release tab on the side of the floor brush head and slide it open.
- Carefully remove any tangled hair or debris using scissors or a cleaning tool.

- Reinsert the brush roll and secure the release tab.

TROUBLESHOOTING

If you encounter any issues with your HONITURE H8 vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely clicked into place.
Weak suction power	Dust bin is full; Filters are clogged; Brush roll is blocked; Airway is blocked.	Empty dust bin; Clean all filters thoroughly; Remove any blockages from brush roll or airway.
Brush roll not spinning	Brush roll is jammed by debris; Brush head is not properly attached.	Remove debris from brush roll; Ensure brush head is securely attached.
Short battery runtime	Battery not fully charged; Using powerful suction mode continuously.	Charge battery fully; Use standard mode for lighter tasks to conserve battery.
Unusual noise	Blockage in the airway or brush roll; Damaged component.	Check for and remove any blockages. If noise persists, contact customer support.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	HONITURE
Model	H8
Motor Power	350W Brushless Motor
Suction Power	Up to 25KPa
Battery Type	2500mAh Lithium-Ion (Detachable)
Running Time	Up to 35 minutes (17KPa mode), 18 minutes (25KPa mode)
Charging Time	4-5 hours
Dust Bin Capacity	0.7 Liters
Filtration System	4-stage sealed filtration (HEPA, Sponge, Stainless Steel, Cyclone)
Item Weight	3.5 Pounds

Feature	Specification
Voltage	220 Volts
Surface Recommendation	Carpet, Hard Floor

WARRANTY AND SUPPORT

Warranty Information

The HONITURE H8 Cordless Stick Vacuum Cleaner comes with a worry-free 24-month warranty. This warranty covers manufacturing defects and issues arising from normal use.

Customer Support

If you have any questions, concerns, or require assistance with your product, please do not hesitate to contact HONITURE customer support. Our team is dedicated to providing prompt and helpful service.

Please refer to the contact information provided with your purchase documentation or visit the official HONITURE website for support details.