



[Manuals.plus](#) /

› [Silhouette](#) /

› [Silhouette Si5446-6061-52 Rimless Glasses Frame User Manual](#)

## Silhouette Si5446-6061-52

# Silhouette Si5446-6061-52 Rimless Glasses Frame User Manual

[Introduction](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Silhouette Si5446-6061-52 Rimless Glasses Frame. Please read this guide thoroughly before using your new glasses to ensure optimal performance and longevity. The Silhouette Si5446-6061-52 is a unisex rimless frame designed for comfort and durability, featuring a strong bridge and flexible, lightweight arms.



Image of the Silhouette Si5446-6061-52 Rimless Glasses Frame, showcasing its minimalist design.

## 2. SETUP AND FITTING

---

Your Silhouette rimless frame is designed for a comfortable and secure fit. Professional adjustment by an optician is highly recommended to ensure the best fit for your face.

## 2.1 Initial Fitting

- **Professional Adjustment:** Visit a qualified optician to have your new frame professionally fitted. They will adjust the nose pads and temple arms to conform to your facial structure.
- **Bridge Adjustment:** The bridge of the nose distributes the weight of the glasses. Ensure it rests comfortably without pinching or slipping.
- **Temple Arm Adjustment:** The temple arms should extend comfortably over your ears without causing pressure points. They should hold the frame securely in place.

## 2.2 Lens Installation (Professional Only)

The installation of prescription lenses into a rimless frame requires specialized tools and expertise. **Do not attempt to install or replace lenses yourself**, as this can damage the frame or lenses. Always have this procedure performed by a certified optician.

## 3. OPERATING INSTRUCTIONS

---

Proper handling of your rimless glasses will extend their lifespan and maintain their appearance.

### 3.1 Wearing Your Glasses

- **Two-Handed Removal:** Always remove your glasses using both hands, holding the temple arms near the hinges. This prevents bending the frame and loosening the hinges.
- **Avoid Head Placement:** Do not push your glasses onto your head or hair, as this can stretch the frame and cause misalignment.

### 3.2 Handling Precautions

- **Avoid Extreme Temperatures:** Do not expose your glasses to extreme heat (e.g., leaving them in a hot car, near an oven) as this can damage the frame material and lens coatings.
- **Protect Lenses:** Always place your glasses with the lenses facing upwards or store them in a protective case to prevent scratches.

## 4. CARE AND MAINTENANCE

---

Regular cleaning and proper storage are crucial for maintaining the clarity of your lenses and the integrity of your frame.

### 4.1 Cleaning Your Glasses

1. **Rinse:** Hold your glasses under lukewarm running water to rinse off any loose dirt or dust. Avoid hot water, which can damage lens coatings.
2. **Apply Cleaner:** Apply a small drop of pH-neutral dish soap or a specialized lens cleaning spray to each lens.
3. **Gently Rub:** Gently rub both sides of the lenses and all parts of the frame (nose pads, temple arms) with your fingertips.
4. **Rinse Thoroughly:** Rinse the glasses thoroughly under lukewarm running water to remove all traces of soap.
5. **Dry:** Gently shake off excess water and dry the lenses and frame with a clean, soft microfiber cloth specifically designed for eyewear. Do not use paper towels, tissues, or clothing, as these can scratch the lenses.

### 4.2 Storage

- **Protective Case:** When not in use, always store your glasses in a hard protective case to prevent damage from drops or pressure.

- **Safe Location:** Keep your glasses in a clean, dry place away from direct sunlight and extreme temperatures.

## 5. TROUBLESHOOTING

---

Here are solutions to common issues you might encounter with your glasses.

Problem	Possible Cause	Solution
Glasses are slipping down your nose.	Nose pads are too wide or temple arms are too loose.	Visit an optician for nose pad and temple arm adjustment.
Glasses feel too tight or cause pressure.	Nose pads are too narrow or temple arms are too tight.	Visit an optician for nose pad and temple arm adjustment.
Lenses appear blurry or dirty after cleaning.	Improper cleaning technique or use of unsuitable cleaning materials.	Follow the cleaning instructions in Section 4.1 carefully. Use only recommended cleaning solutions and microfiber cloths.
Loose screws or wobbly frame.	Normal wear and tear, or improper handling.	Visit an optician for professional tightening and adjustment. Avoid attempting to tighten screws yourself without proper tools.

## 6. PRODUCT SPECIFICATIONS

---

Detailed specifications for the Silhouette Si5446-6061-52 Rimless Glasses Frame.

**Brand:** Silhouette

**Model Number:** Si5446-6061-52

**Frame Shape:** Rimless

**Targeted Group:** Unisex

**Frame Material:** Metal

**Lens Size:** 52 mm

**Bridge Size:** 17 mm

**Arm Length:** 140 mm

**Color:** Silver

**Key Features:**

- Strong bridge for even weight distribution.
- Bridge design reduces stress from prolonged wear.
- Flexible and lightweight arms.

## 7. WARRANTY AND SUPPORT

---

Silhouette products are manufactured to high standards and are subject to quality control. For specific warranty information regarding your Silhouette Si5446-6061-52 Rimless Glasses Frame, please refer to the warranty card included with your purchase or visit the official Silhouette website.

### 7.1 Customer Support

If you have any questions, require assistance, or need to arrange for repairs, please contact your authorized Silhouette

dealer or the customer service department through the official Silhouette website. Please have your model number (Si5446-6061-52) ready when contacting support.

**Official Website:** [www.silhouette.com](http://www.silhouette.com)



© 2023 Silhouette. All rights reserved. This manual is for informational purposes only.